GE MULTILIN

EnerVista Viewpoint Monitoring Version 5.10 User Manual

GE Multilin

215 Anderson Avenue

Markham, Ontario, Canada - L6E 1B3

Tel: (905) 294-6222 Fax: (905) 210-2098

Internet: http://www.EnerVista.com

Table Of Contents

Introduction to EnerVista VIEWPOINT monitoring 1
System Requirements 2
New for Version 5.10 3
IED's Supported - Summary 3
Supported Firmware Versions 4
Full Screen Mode 6
User Preferences 7
Security 7
LED Sounds 8
Start Up Screen 9
Annunciator 10
Waveform & Events 11
Control 12
Device Setup 13
Introduction to Device Setup 13
Adding a Device 14
Editing a Device 22
Deleting a Device 26
Importing GE Multilin Devices 27
Formula Editor 28
Introduction to Formula Editor 28
Adding A Formula 30
Editing a Formula 34
Formula Storage 36
Using Formulas 37
System Editor 38
Introduction to One-Line Editor 38
Toolbars 39
Introduction to One-Line Editor Toolbars 39
Add / Remove Toolbars 42
One-Line Editor Toolbar 43
Drawing Toolbar 44
Gauges Toolbar 45
Links Toolbar 46
Symbols Toolbar 47
Transformer & Symbols Toolbar 48
Switchgear and Control Toolbar 49
Zoom Toolbar 50
Nudge Toolbar 51
Align Toolbar 52
Structure Toolbar 53
Rotate Toolbar 54
Layout Toolbar 55
Building a Schema 56
Adding Components and Items to a Schema 56
Adding a Component for Manual Indication 57
Adding a Component for Control 60
Adding Images to a Schema 63
Changing the work area size of the Schema 64
Component Properties 65
Custom Symbols 70

LED Indicators 74
HyperLinking 87
How to use One Shot Test 97
Modifying Properties of a Component 98
Saving Schemas 99
Simultaneously Editing and Viewing the Same Schema 100
System Viewer 102
Introduction to One-Line Viewer 102
One-Line Viewer Toolbar 103
Opening/Loading a Schema File 104
Equipment and Switchgear Indication 105
Equipment and Switchgear Control 106
LED Indicator Colours 107
Screen Capturing in One-Line Viewer 108
Device Status 109
Device Status Window 109
Understanding Online, Offline and Invalid Status 112
What is an Unassigned Device ? 113
Annunciator 114
Introduction to Annunciator 114
Annunciator Toolbar 115
Indicators 117
Inserting an Indicator into the Annunciator Panel 117
Configuring / Editing an Indicator to a Device 119
Configuring / Editing the Active State Properties of an Indicator 121
Acknowledging Alarmed Indicators 127
Resetting an Alarmed Indicator that has been Acknowledge 129
Reports 130
Introduction 130
Report Creation 132
Report Parameters 134
Report Charts 136
Report Viewer 139
Additional Features 142
COMTRADE 146
Introduction to COMTRADE 146
Convert 148
Converting File Format 148
Resample 150
Resample a COMTRADE file 150
Merge 151
Merging COMTRADE files 151
View 155
Introduction to COMTRADE View 155
COMTRADE View Toolbar 156
View Oscillography 157
Configure Preferences 160
Opening a Saved COMTRADE File 165
View Phasors 166
A Reminder about Spreadsheets 168
View Harmonics 169
Administration 171
Introduction to Administration Setup 171

Adding an Access Group 172
Editing an Access Group 174
Deleting an Access Group 176
Adding a User 177
Editing a User 179
Deleting a User 182
Plug & Play 184
Introduction to Plug & Play 184
Open System Schema 185
Device Window Screen: 186
Dashboard 187
Virtual Front Panel 188
Import Templates 189
Custom Device Editor 190
Introduction 190
Accessing the Custom File Editor 191
Custom Device Definition Maintenance Screen 192
Custom Device Definition Editor 194
FAQ 198
Index 199

Introduction to EnerVista VIEWPOINT monitoring

Welcome to EnerVista VIEWPOINT monitoring, a PC-based program for on-demand monitoring and control. Upon successful launching of EnerVista VIEWPOINT monitoring, you should now see the following main menu:

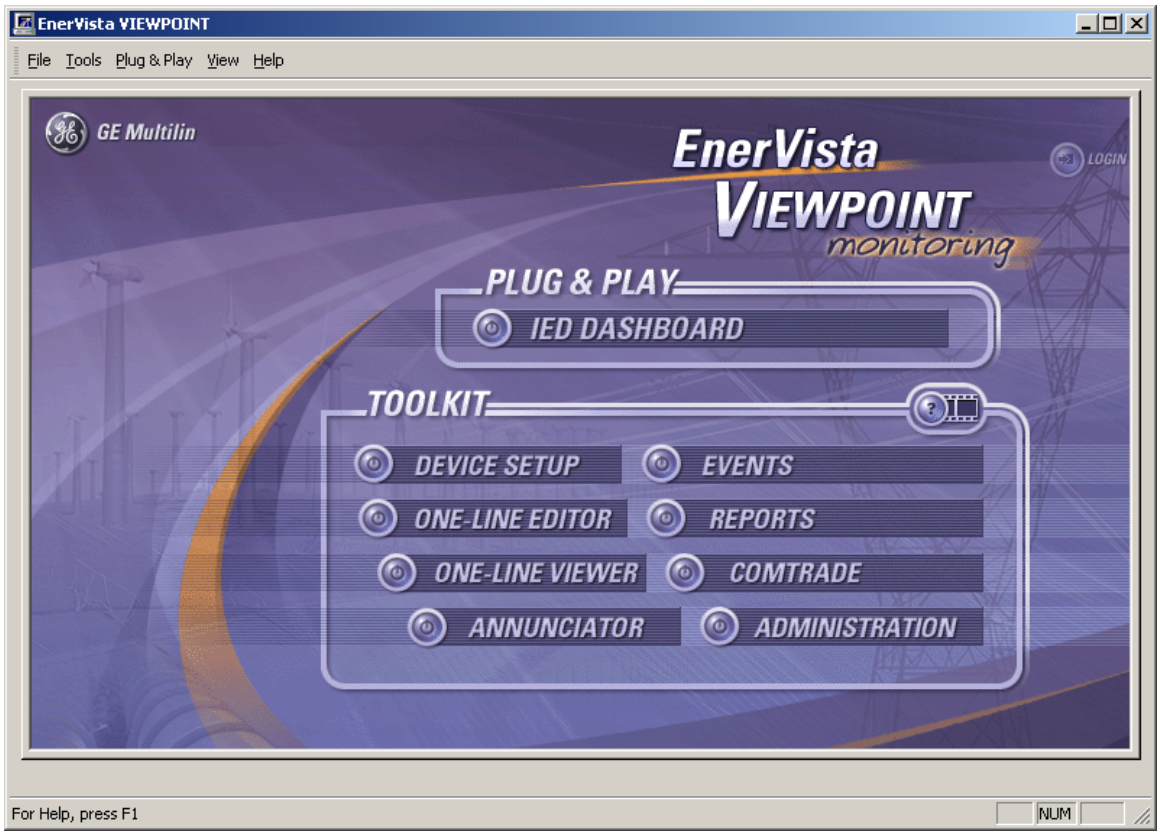

Here's a breakdown of the main tools of EnerVista VIEWPOINT:

Plug & Play - IED Dashboard - View online information via pre-defined templates for configured devices
Device Setup - Setup and Configure your remote assets and their components.
One-Line Editor - Create interactive one-line diagrams using various graphical tools.
One-Line Viewer - View one-line diagrams that you have created.
Annunciator - View and Monitor your remote assets.
Reports - View and Create Reports.
COMTRADE - Tools and Viewer for COMTRADE formatted waveform files.
Administration - Add/Edit/Remove groups of users who can access this system.
Events- Can view Events for the Configured Devices in the Device Setup.

System Requirements

Minimum system requirements:

- 1 GHz processor
- 256 Mb Ram
- Video capable of displaying 16-bit, 1024x768 resolution
- 700 Mb of available space required on system drive, 450 Mb of available space required on installation drive
- Internet Explorer 5.5 with Service Pack 1 or greater
- Windows NT 4.0 (Service Pack 6a), Windows 2000, Windows XP

Recommended system requirements:

- 2 GHz+ processor
- 512 Mb Ram
- Video capable of displaying 16-bit, 1280x1024 resolution

New for Version 5.10

1. Added new IED Plug & Play support for Power Leader EPM. Added communication support for MX150 and MX250.

2. Expanded support of UR Family of relays to include firmware revision 4.6x.

3. Added 'HyperLinking' feature, which allows user to connect between many areas of Viewpoint monitoring.

4. Formula Tool enhanced to support digital parameters. Formulas can also contain parameter information from multiple devices.

IED's Supported - Summary

The following list of devices are supported in the One-Line Editor, One-Line Viewer, Annunciator Panel, Reports and Plug & Play IED Dashboard:

Multilin Industrial IED's	Multilin UR Family IED's	GE IED's
239	B30	Spectra MicroVersa Trip
269+	C30	Enhanced MicroVersa Trip C
369	C60	Enhanced MicroVersa Trip D
469	D30	EPM1000 *
489	D60	EPM4000 *
735/737	F35	EPM5000P
745	F60	EPM5200P
750/760	G30	EPM5300P
F650	G60	EPM5350P
MMII	L60	EPM9450Q
MMIII	L90	EPM9650Q
PQM	M60	PLEPM
PQMII	N60	MX150
RRTD	T35	MX250
SPM	T60	

NOTE:
* EPM1000, EPM4000, MX150 and MX250 are not available in the IED Dashboard.

Supported Firmware Versions

IED Product	Versions Supported
239	2.3x to 2.6x
269+	6.0x
369	1.6x to 2.0x
469	2.5x to 4.0x
489	1.3x to 1.5x
735/737	1.5x
745	2.4x to 2.8x
750/760	3.6x to 6.0x
F650	1.6x
MMII	4.0x to 5.1x
MMIII	1.0x to 1.2x
PQM	3.3x to 3.6x
PQMII	1.0x to 2.0x
RRTD	1.4x, 1.5x
SPM	2.0x, 2.1x
B30	2.6x to 4.6x
C30	2.6x to 4.6x
C60	2.6x to 4.6x
D30	3.0x to 4.6x
D60	2.6x to 4.6x
F35	2.6x to 4.6x
F60	2.6x to 4.6x
G30	4.4x to 4.6x
G60	2.6x to 4.6x
L60	2.6x to 4.6x
L90	2.6x to 4.6x
M60	2.6x to 4.6x
N60	3.4x to 4.6x
T35	2.6x to 4.6x
T60	2.6x to 4.6x
Spectra MicroVersa Trip	5.1x
Enhanced MicroVersa Trip C	4.1x
Enhanced MicroVersa Trip D	4.1x
EPM1000	3.8x
EPM4000	3.8x

EPM5000P	2.4x
EPM5200P	2.4x
EPM5300P	2.4x
EPM5350P	2.4x
EPM9450Q	2.1x
EPM9650Q	2.1x
PLEPM	1.0x
MX150	5.4x, 6.0x
MX250	5.4x, 6.0x

Full Screen Mode

Full Screen Mode is new to EnerVista Viewpoint 4.0 and allows for the user to increase the viewable area for viewing schema, annunciator panels or COMTRADE Oscillography files. In order to access the Full Screen Mode select **[View]** from the main menu and click on **[Full Screen Mode]**.

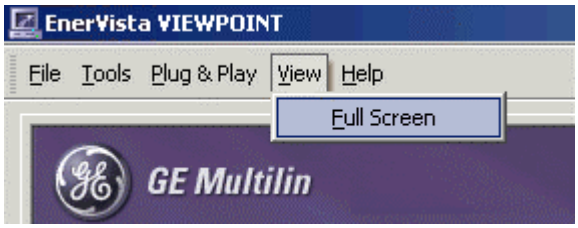

In order to return the screen to the original view, click on the **[close Full Screen Mode]** icon:

User Preferences

Users can now set certain preferences in EnerVista VIEWPOINT. To access the preferences screen seen below, select [Preferences] under the [Tools] menu.

The following preferences are available to the user to change in the user preference menu:

Security

Users can now configure the following Security modes:

- None - Users are not required to Login.
- FULL - Users must Login at startup.
- Enhanced - Users receive guest privileges at startup. Users can login for assigned privileges.

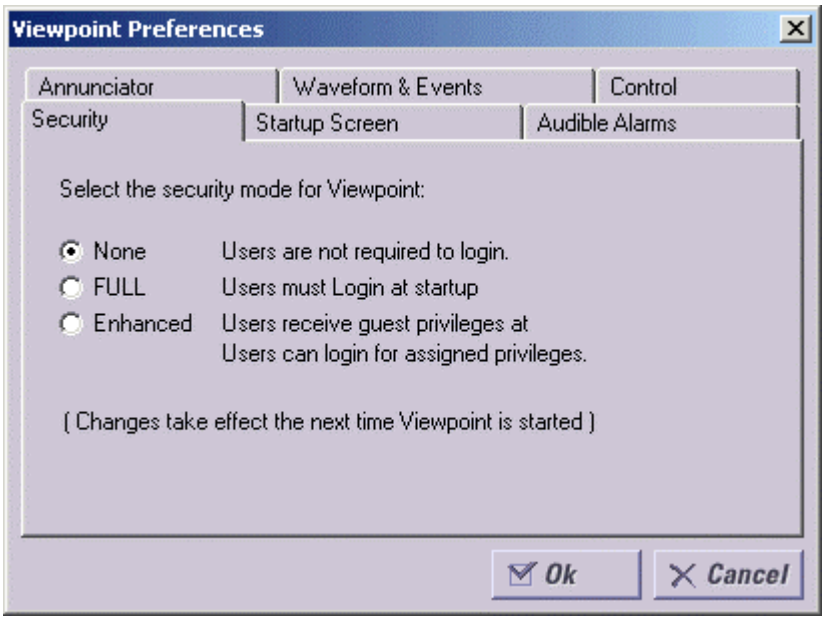

LED Sounds

Sounds serve to alert the attention of the user when an LED state changes in one of the opened Schemas in the One-Line Viewer. Users can change the default sounds to any '.wav' files. When more than one opened schema has a condition to play a sound, the sound file for the LED type with highest priority is played.

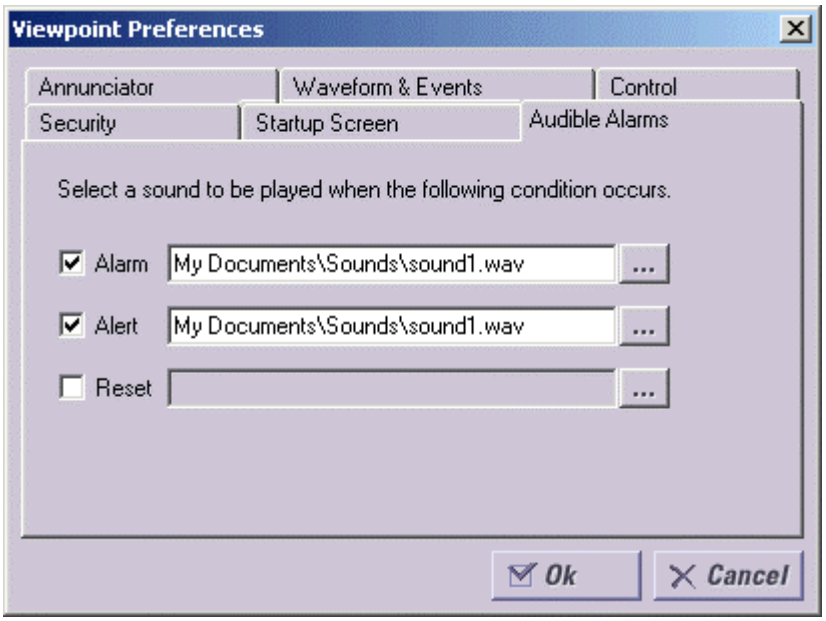

The Alarm sound is played when an LED changes to an Alarm condition.
The Alert sound is played when an LED changes to an Alert condition.
To stop the sound, click the 'Acknowledge' button when viewing the schema containing the active condition.
The Reset sound is played when LED changes state back to Normal after it was acknowledged.

Start Up Screen

Users can now select EnerVista Viewpoint startup screen. The user can configure the following screens to be initially displayed when they log into Viewpoint:

- Main Menu
- IED Dashboard
- specific Schema
- specific Annunciator Panel

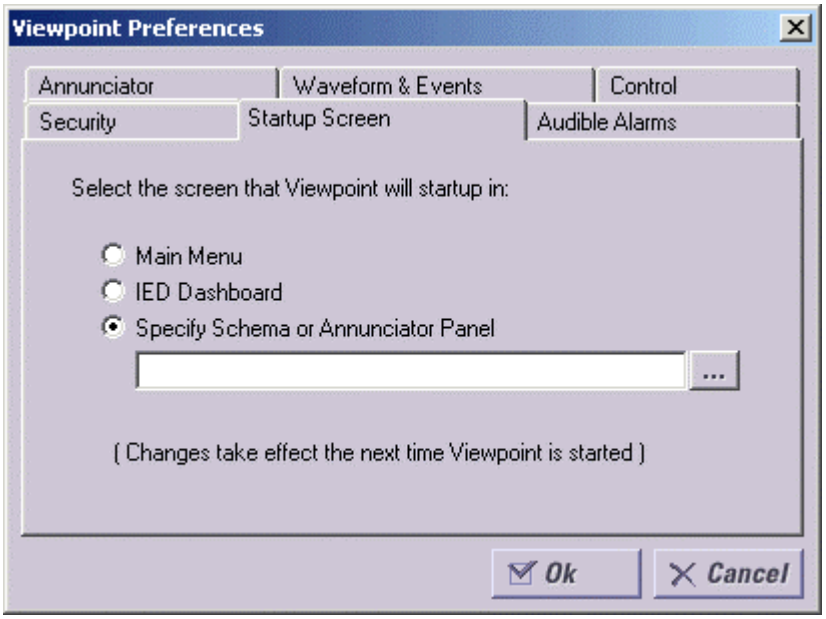

Annunciator

Users can setup their system to receive email notification from the Annunciator Panel. Simply enter the SMTP Mail server address in the space provided. Follow the instructions below to setup your system properly.

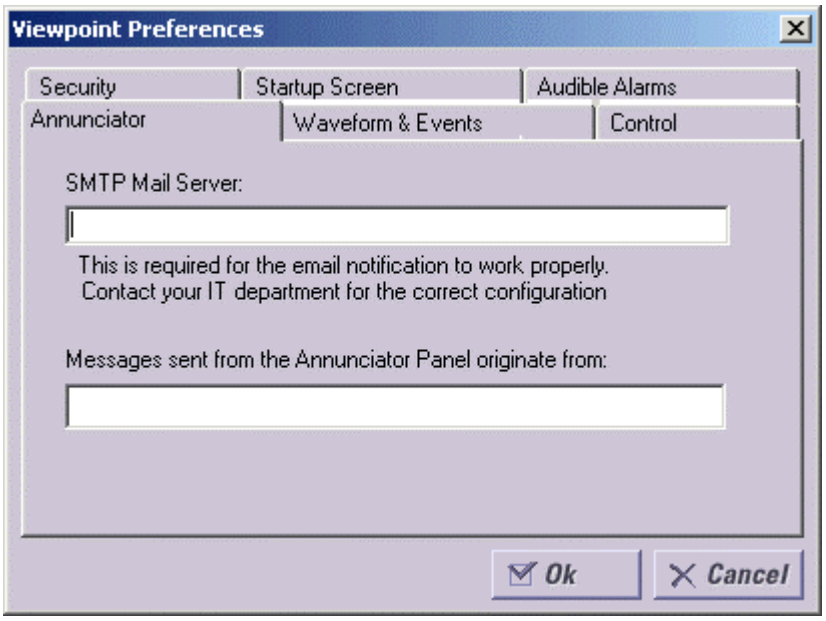

1. Consult the IT department for the correct SMTP Mail Server address.
2. Enter the SMTP Mail Server address in the space provided.
3. Ensure the Mail Server is configured to accept SMTP mail requests.
4. Verify that a user name and a password are not required when sending messages.

Waveform & Events

When a user exits Viewpoint the user can select to continue retrieving the waveform and event information from the configured devices in the environment.

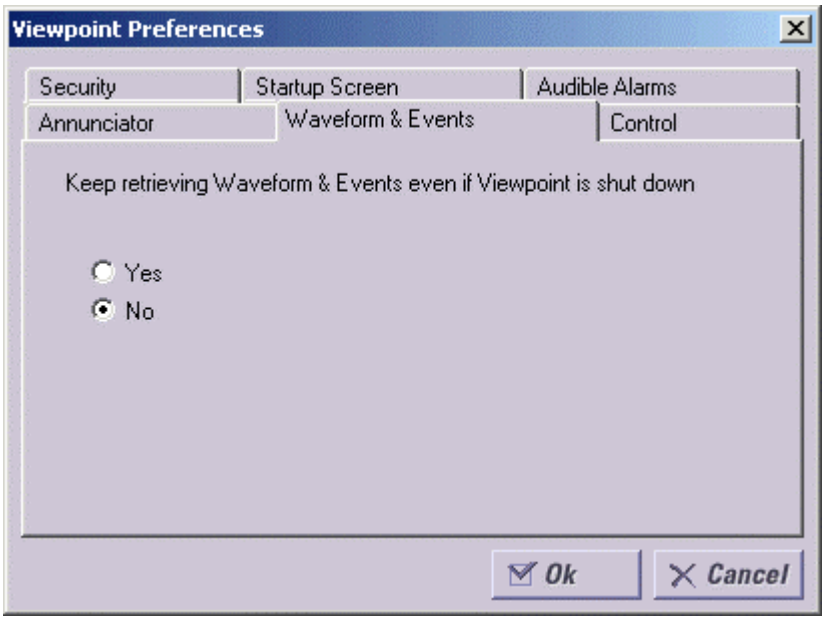

Control

To offer a level of protection, the action of sending a control command to a relay requires the user to hold a key down as they select a button with the mouse pointer.

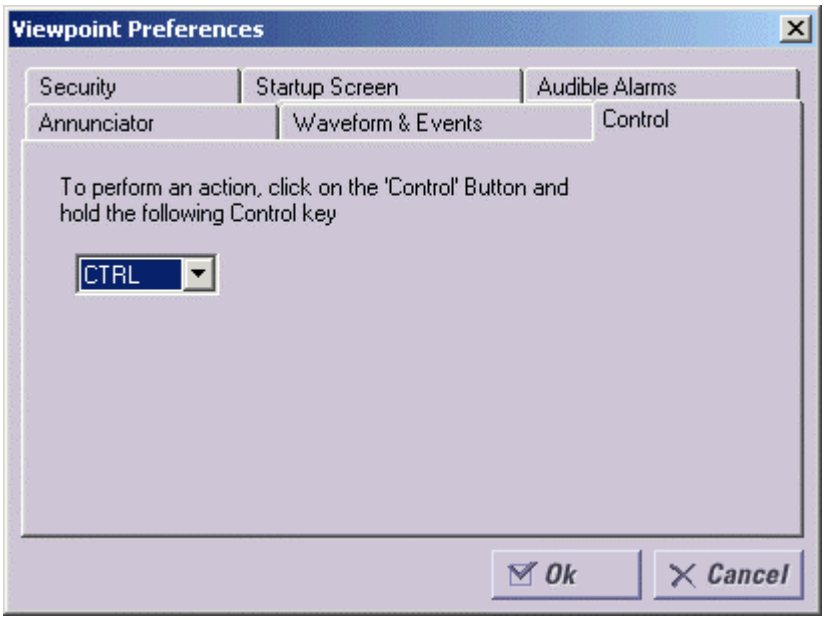

The user can select the button needed to be combined with the mouse action. Choices are CTRL, Shift, or None.

Device Setup

Introduction to Device Setup

The Device Setup tool is used to add/edit/modify the devices. Upon accessing the Device Setup screen from the EnerVista VIEWPOINT main menu, the following screen will pop up showing sites (Ethernet and Serial) or devices that you have previously setup:

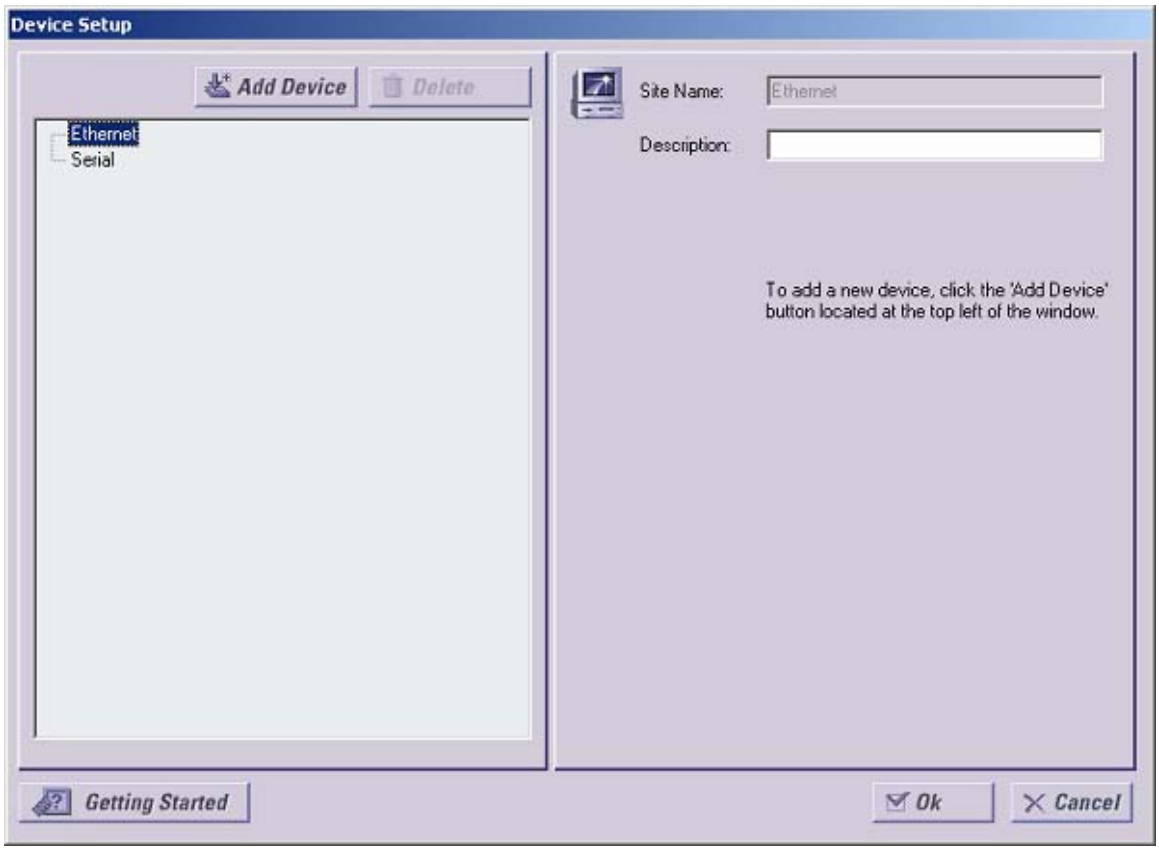

To exit back to the main menu without saving your changes, click on the **[CANCEL]** button, to exit back to main menu, saving your changes, click on the **[OK]** button.

Adding a Device

This command can be accessed via the Device Setup main menu screen shown below:

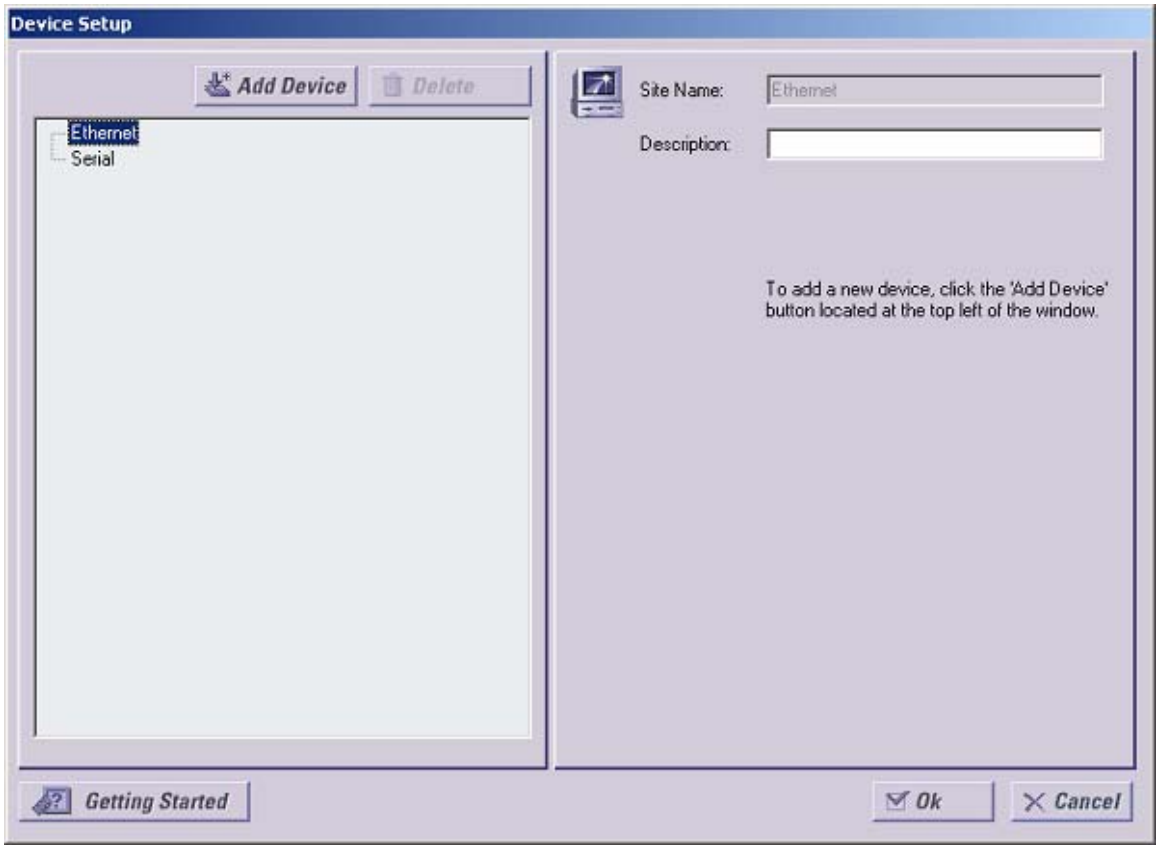

To add a new device, perform the following steps:

1. A device can only be created within an existing Site, that is Ethernet or Serial. So to begin, click on the Site in your site list that you wish to add the device to

2. Click on the **[ADD DEVICE]** button. Device parameters should now appear on the right-hand section of the screen.

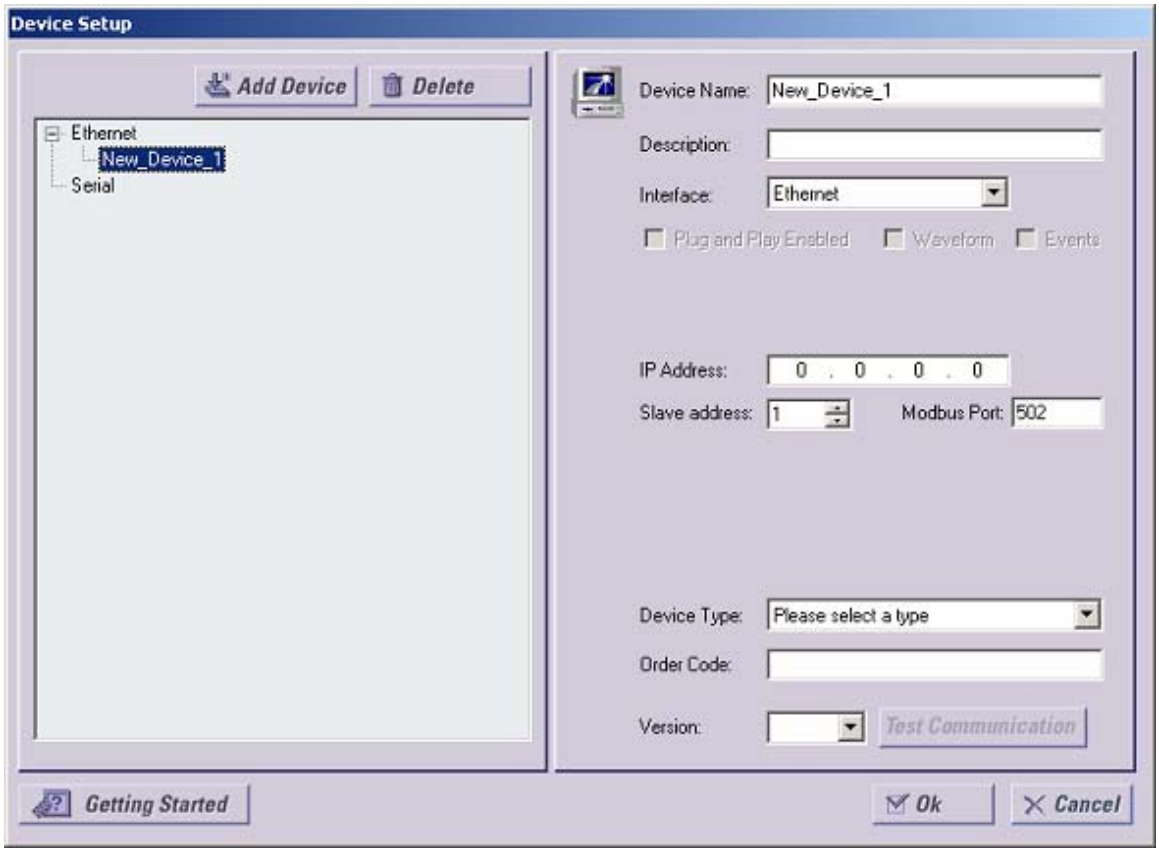

3. Fill in the details for *Device Name*, *Description.*

4. Select an interface of the device by clicking on the *Interface* drop-down menu. Once an interface has been selected, the parameters of that interface will be shown just below. The interface choices you have are:

- Ethernet
- Serial

Note: Modems are not supported with the current version of EnerVista Viewpoint Monitoring.

The following images respectively show the parameters associated with each type of interface.

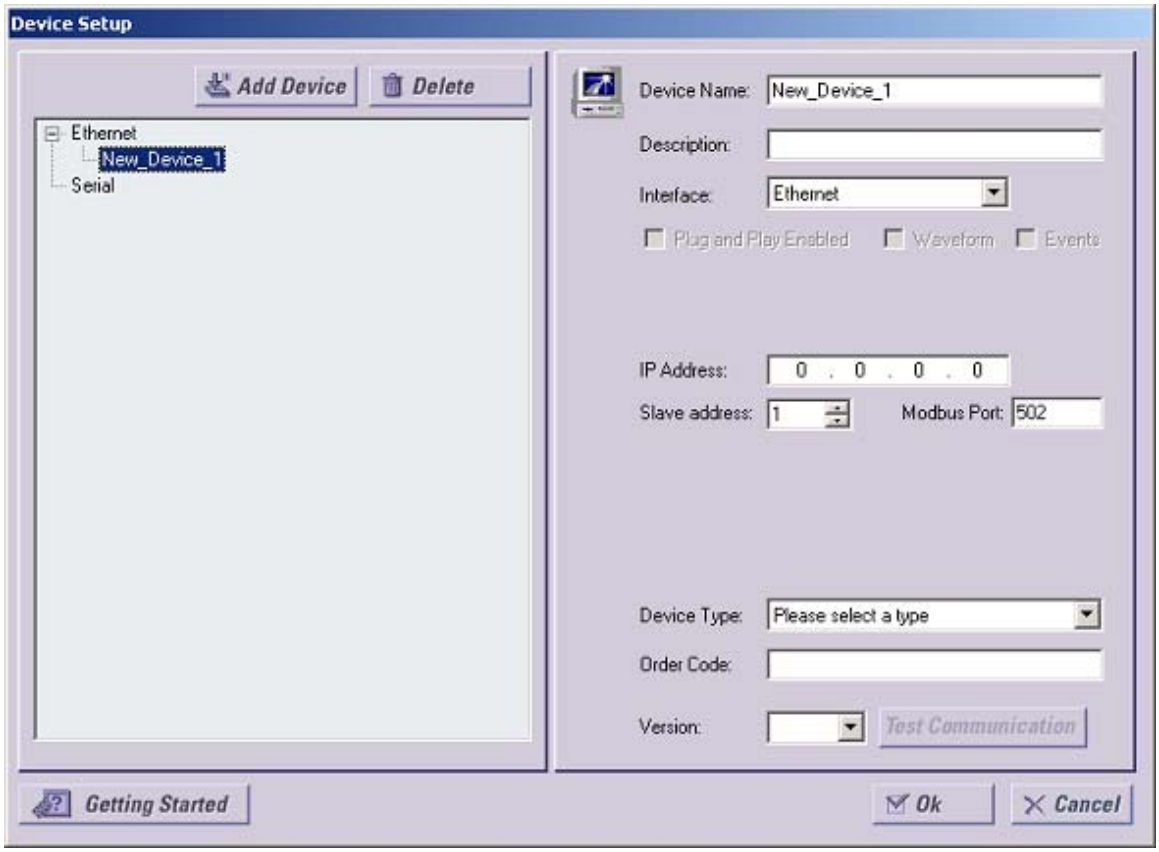

Ethernet parameters

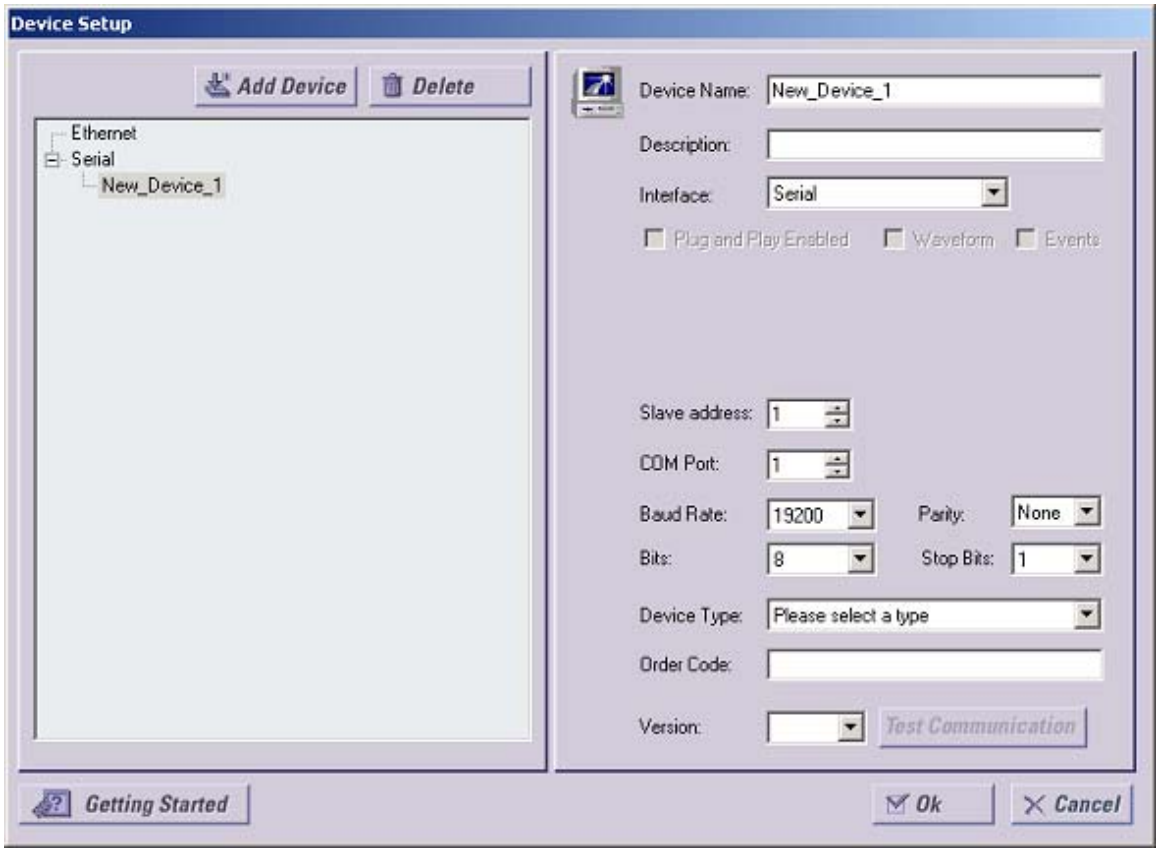

Serial parameters

5. Device Type, in this drop box, predefined (All Multilin) Devices can be seen. This Device Type is same for both Ethernet and Serial Interfaces.

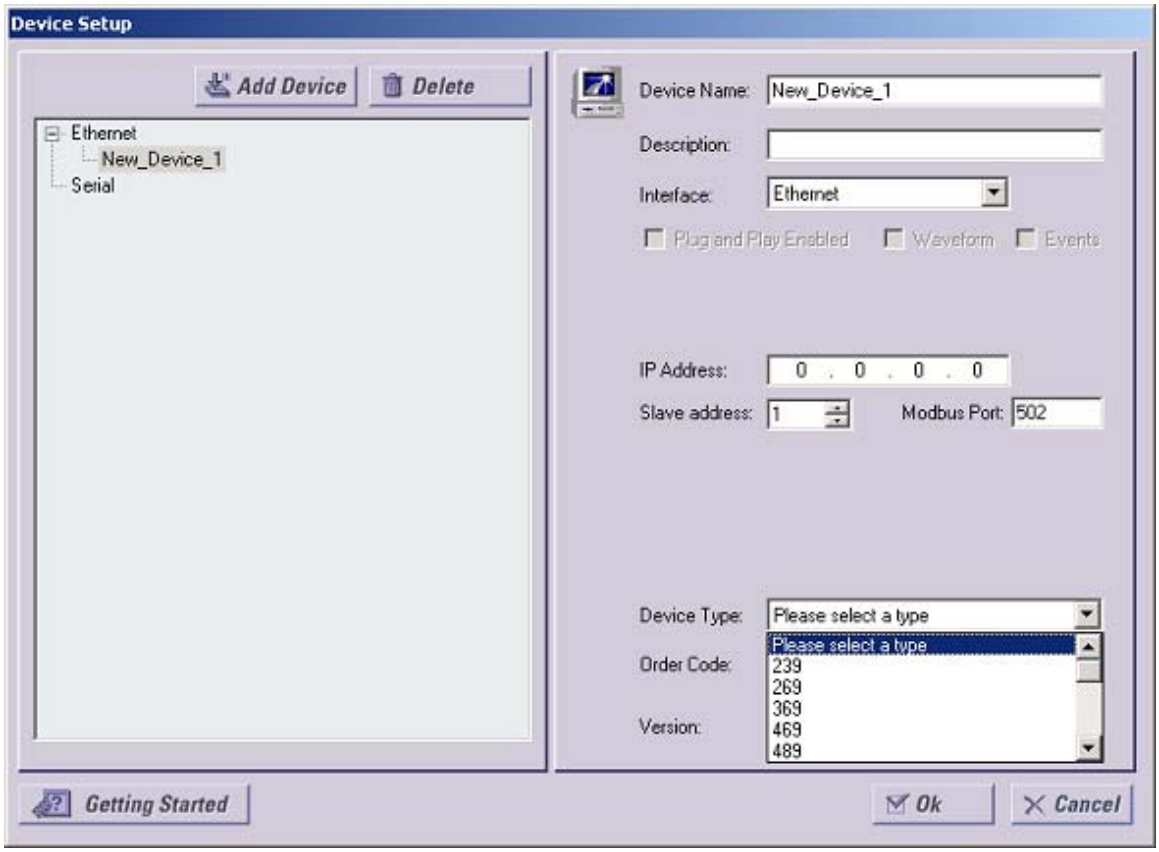

Predefined Device Types

If the selected Device has support of Waveform and Events, it will automatically Enable the respective check boxes else disable.

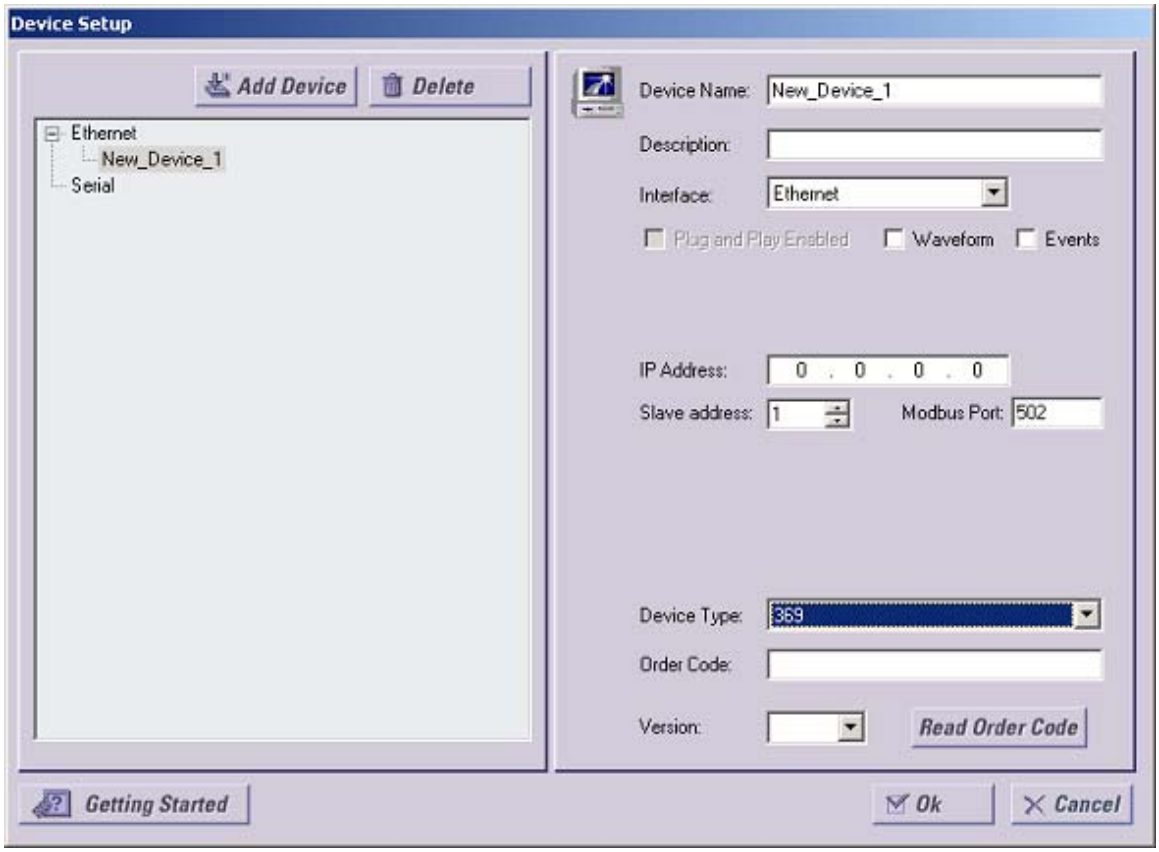

Check box Enable

For Non Multilin Devices, the Device Type should be Others. And enter the Order Code Manually.
For example: For EPM1000, enter the Order Code as EPM1000.

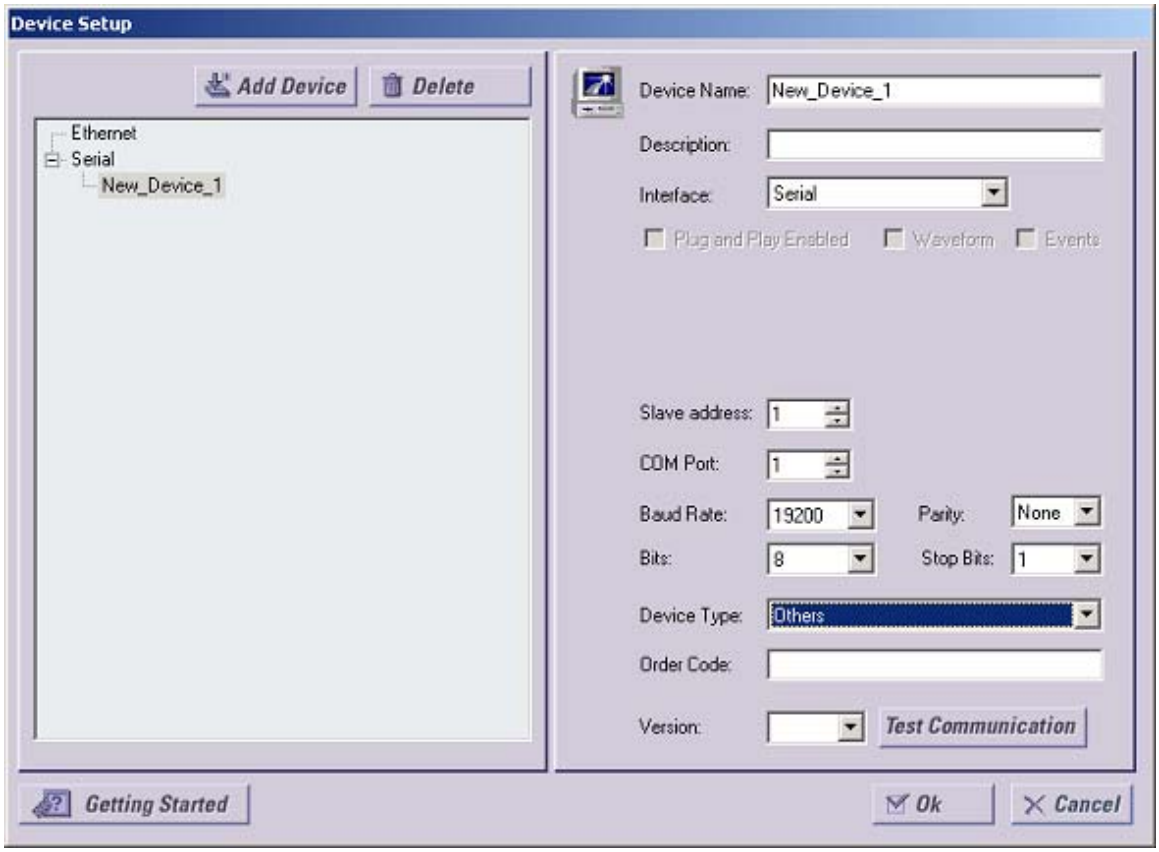

For Non Multilin Device

Table shows some Non Multilin Devices and their Order Codes.

Non Multilin	Order Code
Spectra MicroVersa Trip	MVT
Enhanced MicroVersa Trip C	EMVTC
Enhanced MicroVersa Trip D	EMVTD
EPM1000	EPM1000
EPM4000	EPM4000
EPM5000P	EPM5000P
EPM5200P	EPM5200P
EPM5300P	EPM5300P
EPM5350P	EPM5350P
EPM9450Q	EPM9450Q
EPM9650Q	EPM9650Q

6. Fill in the details for the interface parameters for your device. Note, if your device is supported, you can click on the [READ ORDER CODE / TEST COMMUNICATION] button to try to autoload the device's interface parameters.

7. Your device is now added. EnerVista VIEWPOINT automatically saves your newly created devices. You may now either add/edit/delete other Access Groups or Users.

Returning to the Main Menu:

Should you want to cancel your changes made in this session, you can click on the [CANCEL] button to exit back to the EnerVista VIEWPOINT menu without saving. If you wish to confirm the changes you have made in this section, click on the [OK] button.

Editing a Device

This command can be accessed via the Device Setup main menu screen shown below:

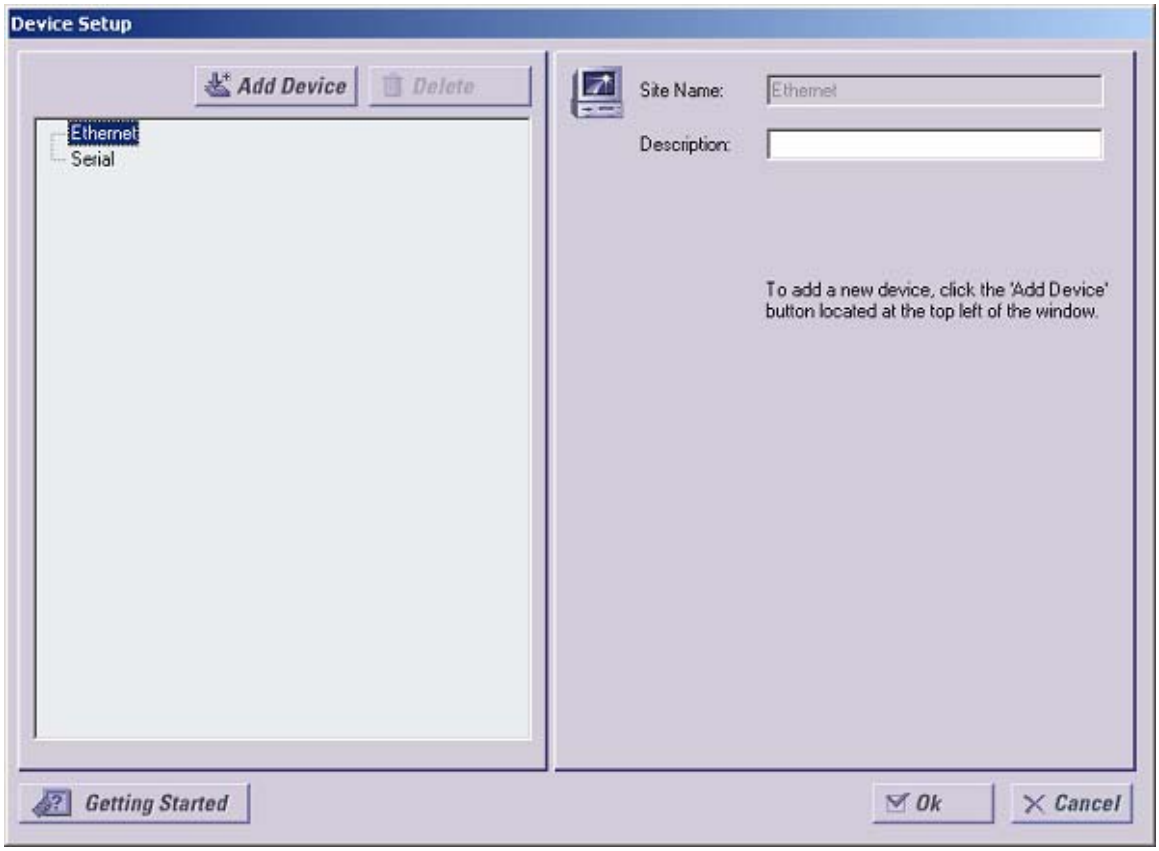

To edit details of an existing device, perform the following steps:

1. Select the Site from the site menu that contains the device you wish to edit. The list of Devices corresponding to that site should now appear below the Site.

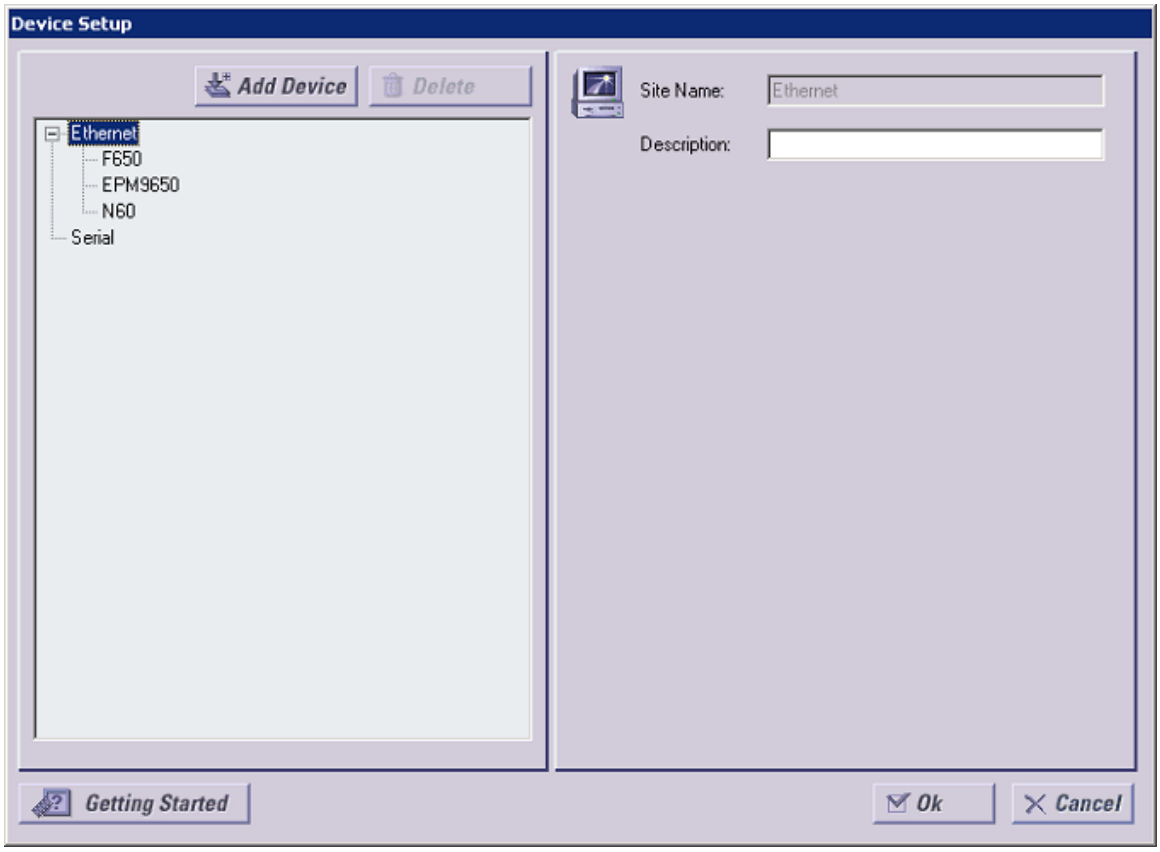

2. Select the Device that you wish to edit. It's properties/parameters will now appear on the right side of the screen. The following images show what parameters will appear for Ethernet and Serial interfaced devices.

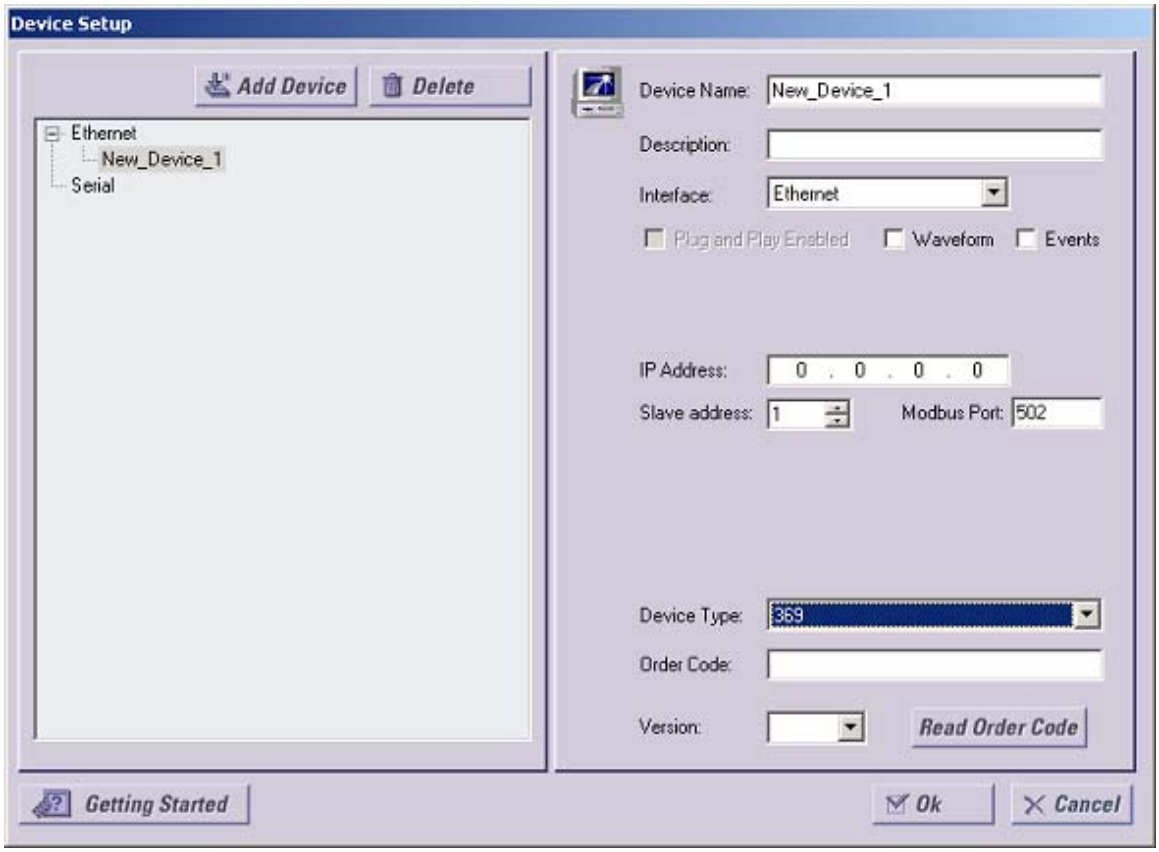

Ethernet Parameters

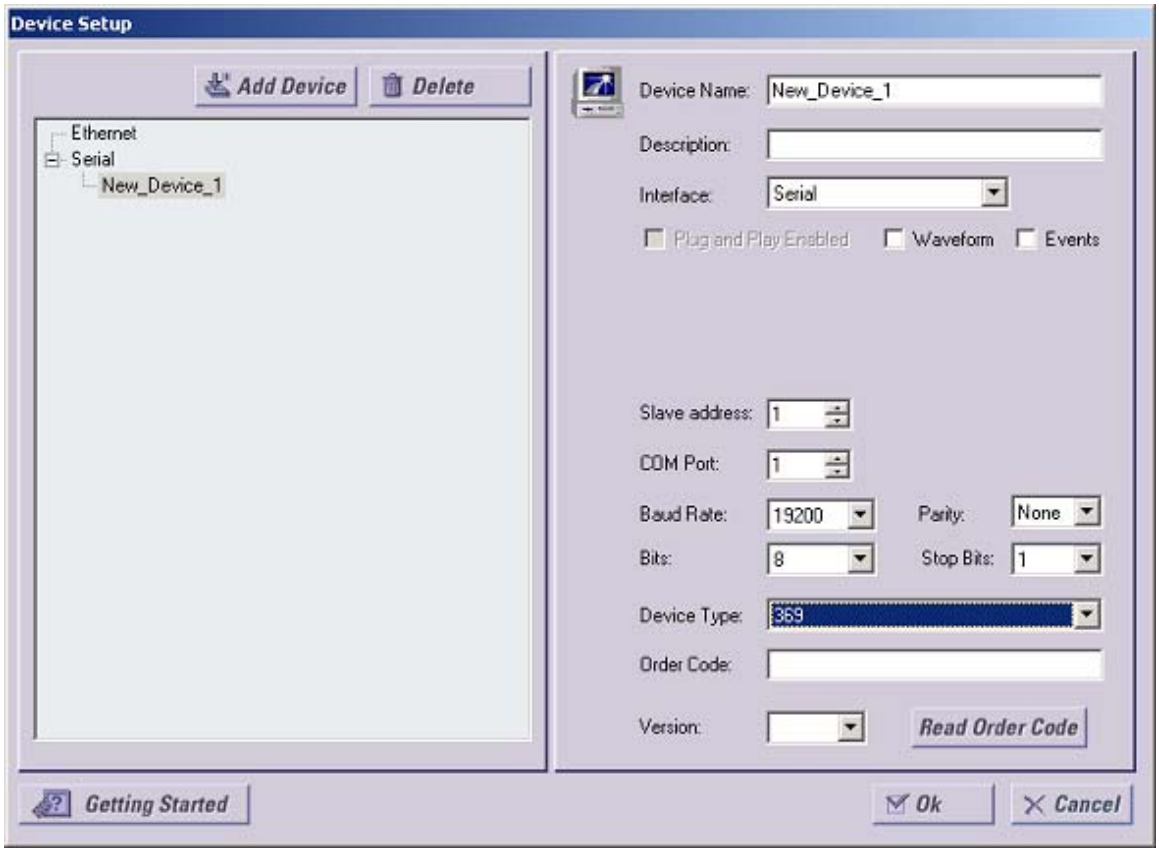

Serial Parameters

3. When you are finished editing the details of your particular device, EnerVista VIEWPOINT automatically saves your changes.

Returning to the Main Menu:

Should you want to cancel your changes made in this session, you can click on the [CANCEL] button to exit back to the EnerVista VIEWPOINT menu without saving. If you wish to confirm the changes you have made in this section, click on the [OK] button.

Deleting a Device

This command can be accessed via the Device Setup main menu screen shown below:

To delete an existing device, perform the following steps:

1. Select the Site to which the Device is associated to, from the site menu list on the left hand portion of the screen. A list of Devices connected to that site should now be shown.

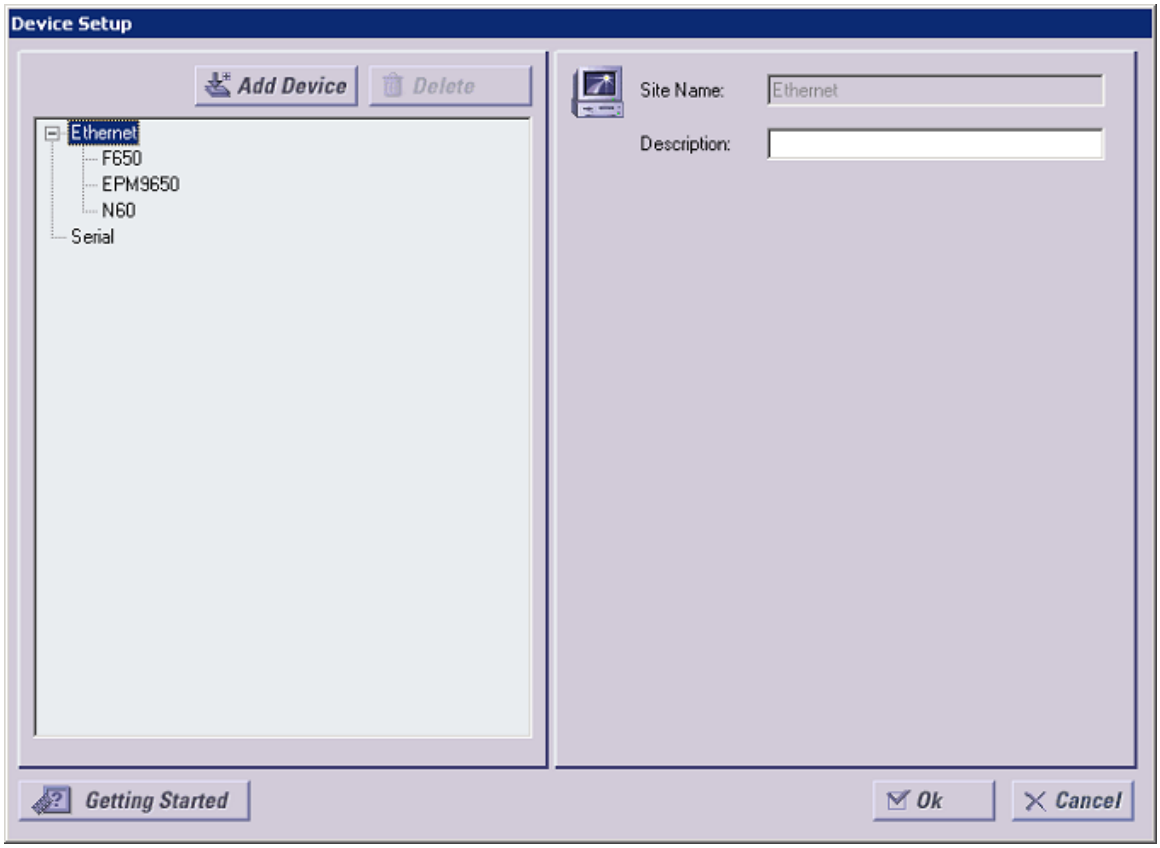

2. Select the Device you wish to delete.

2. Click on the **[DELETE]** button to delete the Device. You will get a confirmation request to make sure that this is the particular site you wish to delete.

Note: Only the Device you selected will be deleted, the rest of the remaining devices (if there are any) will still be there.

Importing GE Multilin Devices

Each time EnerVista Viewpoint is launched, Viewpoint will search the current system for existing 32-bit xxxPC programs (Eg. 469PC, PQMPC, etc.). The xxxPC environment files will be searched and any new devices will get added to a list from which the operator can select the devices to import into Viewpoint.

In addition to checking for xxxPC programs, a system scan will also be done for the EnerVista UR Setup environment file.

This automatic import feature can also be manually selected from the File menu by selecting 'Import Devices' and then select 'Perform Search'.

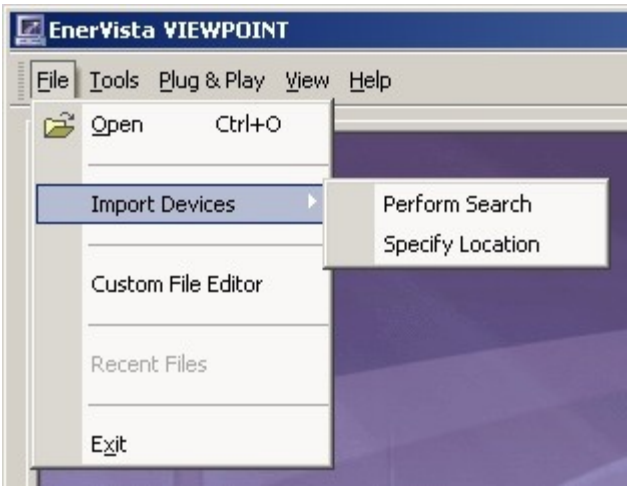

If for some reason Viewpoint cannot locate a desired environment file, select from the File menu, 'Import Devices' and then select 'Specify Location'. This will allow the operator to browse and select a specific environment file.

Formula Editor

Introduction to Formula Editor

The Formula Editor is a tool available within EnerVista VIEWPOINT that allows the user to create Virtual Variables. These Virtual Variables are based on values from relays that can be modified with simple math operators and trigonometric functions.

The Formula Editor can be accessed from the menu bar. Select [Formula Editor] under the [Tools] menu.

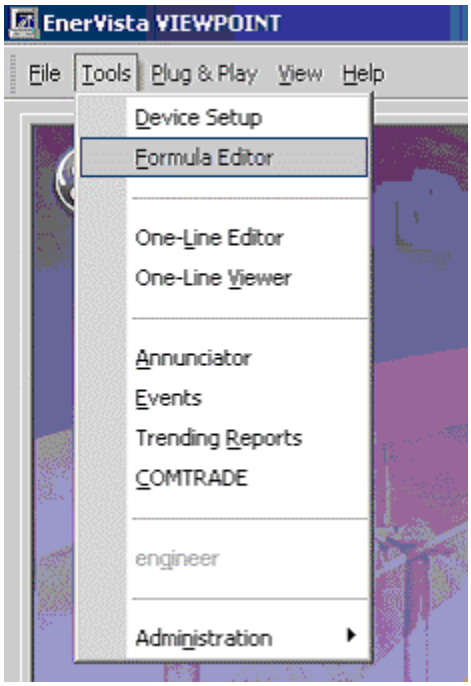

The dialog box shown below will appear upon entering the Formula Editor:

Adding A Formula

Select the [Add] button to add a new formula.

The Edit Formula screen will display allowing the user to create a formula. The user MUST use the GUI keypad on the right to enter the formula. The mouse can be used to move the cursor position within the edit control and to highlight blocks of the formula.

Edit Formula Screen for Analog Formula:

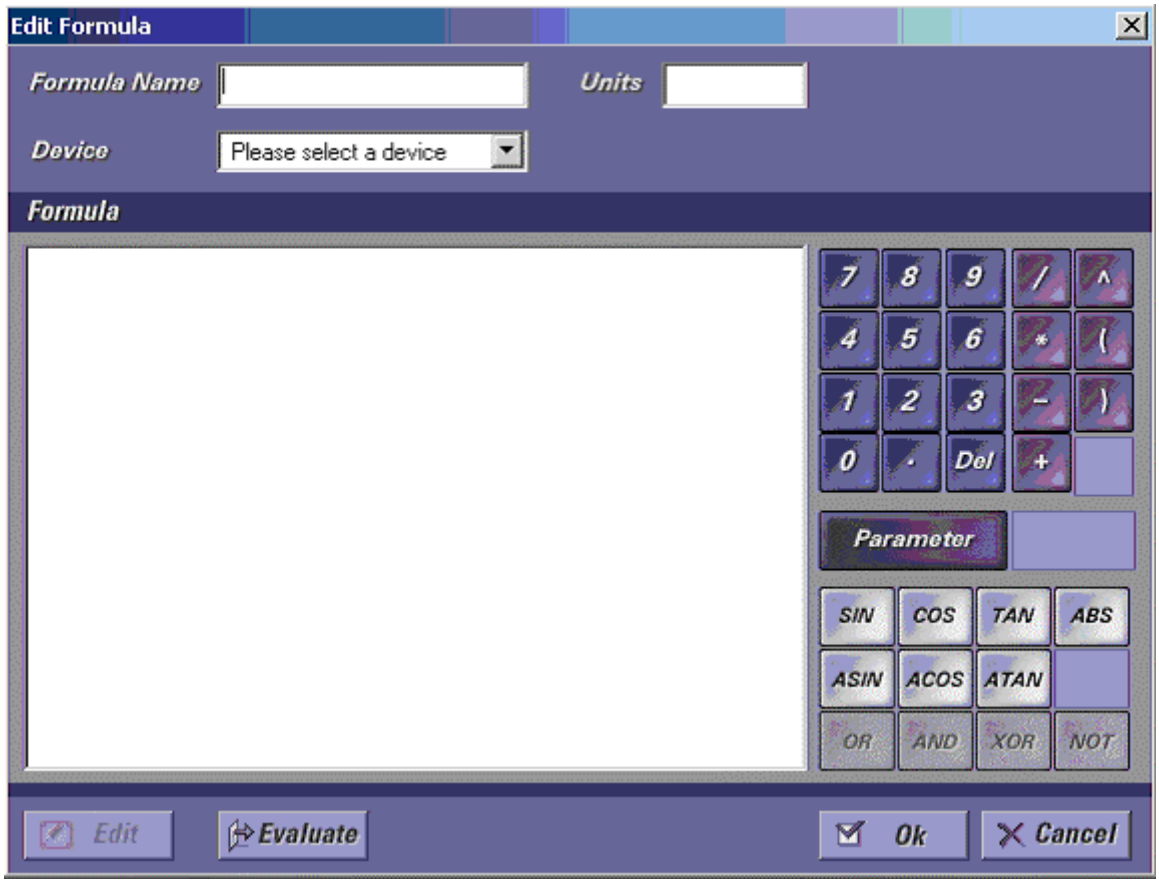

Edit Formula Screen for Digital Formula:

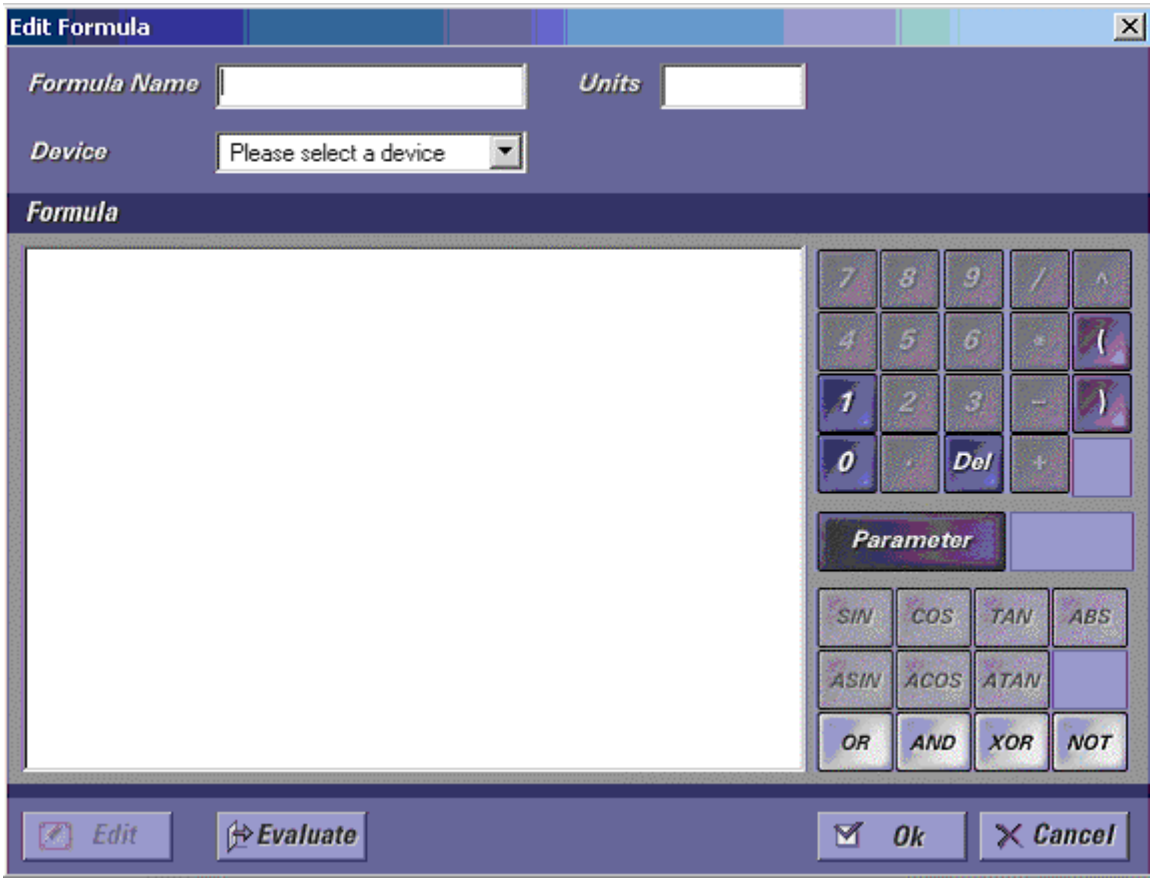

The description of the fields in the Edit Formula screen are described below:

Formula name:
Name of formula. This must be specified.

Units:
The units the formula is evaluated in. This must be specified.

Device:
The user can select a device from which the parameters are selected.

Note: The device is used only as a template. If a user were to reference another similar device, then the same formula should be available to other devices.

Formula:

The user can enter the formula in this section. When the user wants to use a parameter from the device, pressing the [Parameter] button inserts a parameter variable in the formula. The user can then select this parameter to specify the exact parameter to use in the formula by use of a list box containing a list of all possible analog parameters for this particular device.

Select the [OK] button to save the formula.

Formula Evaluation:

Once a formula is created, the user can press the [Evaluate] button to have the formula parameters resolved (communication requests will retrieve data values). Instead of the formula, the user will see all of the individual parameter values and the formula result. Press the [Edit] button to return to the editor mode.

Editing a Formula

Select the formula you wish to edit and then click on the [Edit] button to edit that formula.

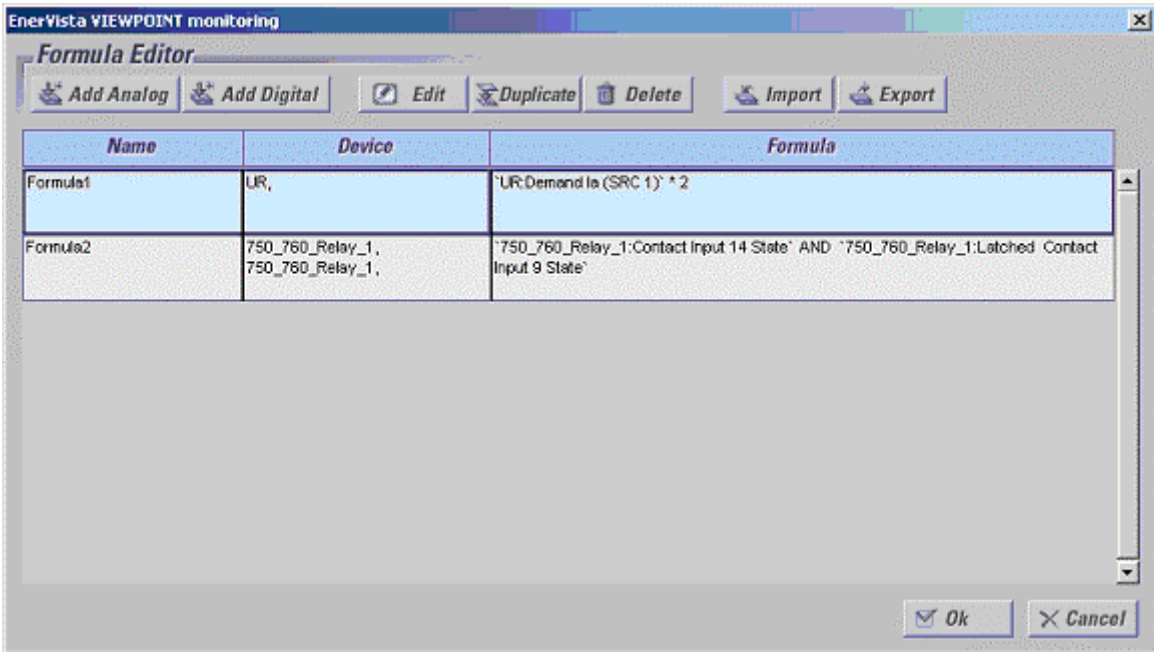

The Edit Formula screen will display allowing the user to edit the selected formula. The user MUST use the GUI keypad on the right to edit the formula. The mouse can be used to move the cursor position within the edit control and to highlight blocks of the formula.

Formula Storage

Formulas stored in a 'EVVPmonitoring.for' file. This file is located in the installation folder where EVVPmonitoring.EXE is located. The file will contain a list of records. Each line in the file will be a comma-delimited record where each record defines the properties for a single formula.

Importing

Selecting the [Import] button will prompt the user with a file browser window where they can select a '*.for' file. After selecting the file, Viewpoint will read the records from the selected file and append the formulas to the existing formula file.

Exporting

Selecting the [Export] button will prompt the user with a file browser window where they can select a '*.for' file to export the current formulas. This is a simply a 'Save As' feature. The data is not getting reformatted.

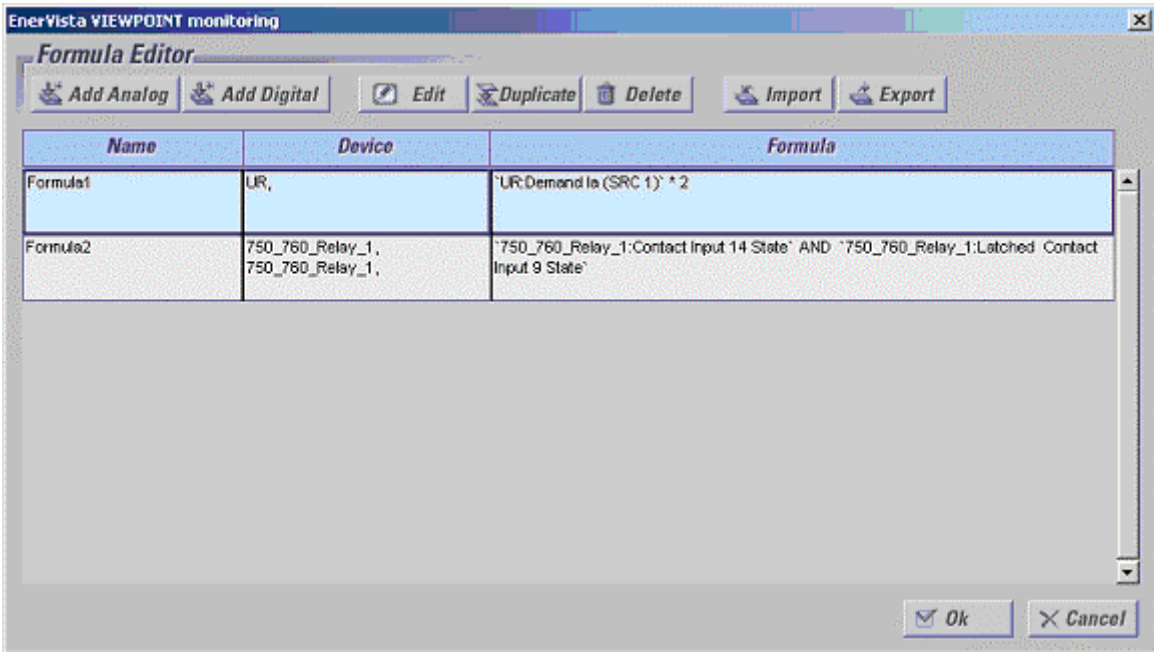

Using Formulas

The user can access their device formula's in any analog parameter list. The list of formulas created for a device will be appended to the analog parameter list of a device. Analog formula names are prefixed with a "*" to differentiate the formulas from the device's analog parameters. Digital formula names are prefixed with a '#' to differentiate the formulas from the device's digital parameters.

An example is seen below in the component properties of a multi-value circle gauge. Formula 1 was previously created for the 750_360 device and is seen in the analog parameter list below prefixed by a "*".

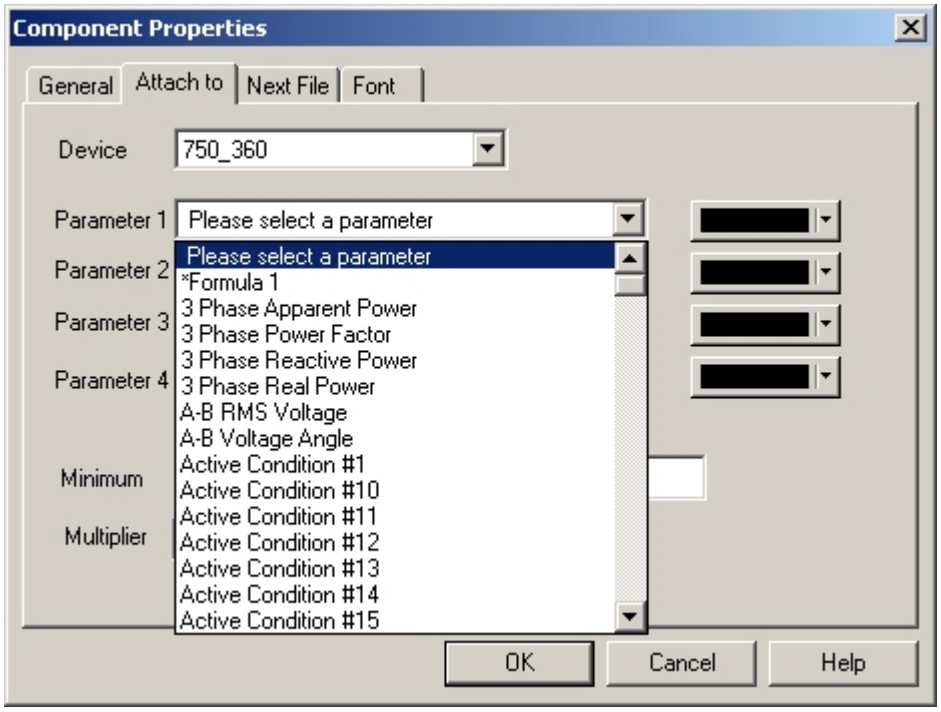

System Editor

Introduction to One-Line Editor

The One-Line Editor tool is used to create interactive and graphical one-line diagrams that can be connected to real devices so that users can easily monitor and understand their remote site configuration as well as view up to date readings and status updates with ease.

Upon accessing the One-Line Editor screen from the EnerVista VIEWPOINT main menu, the following screen will appear:

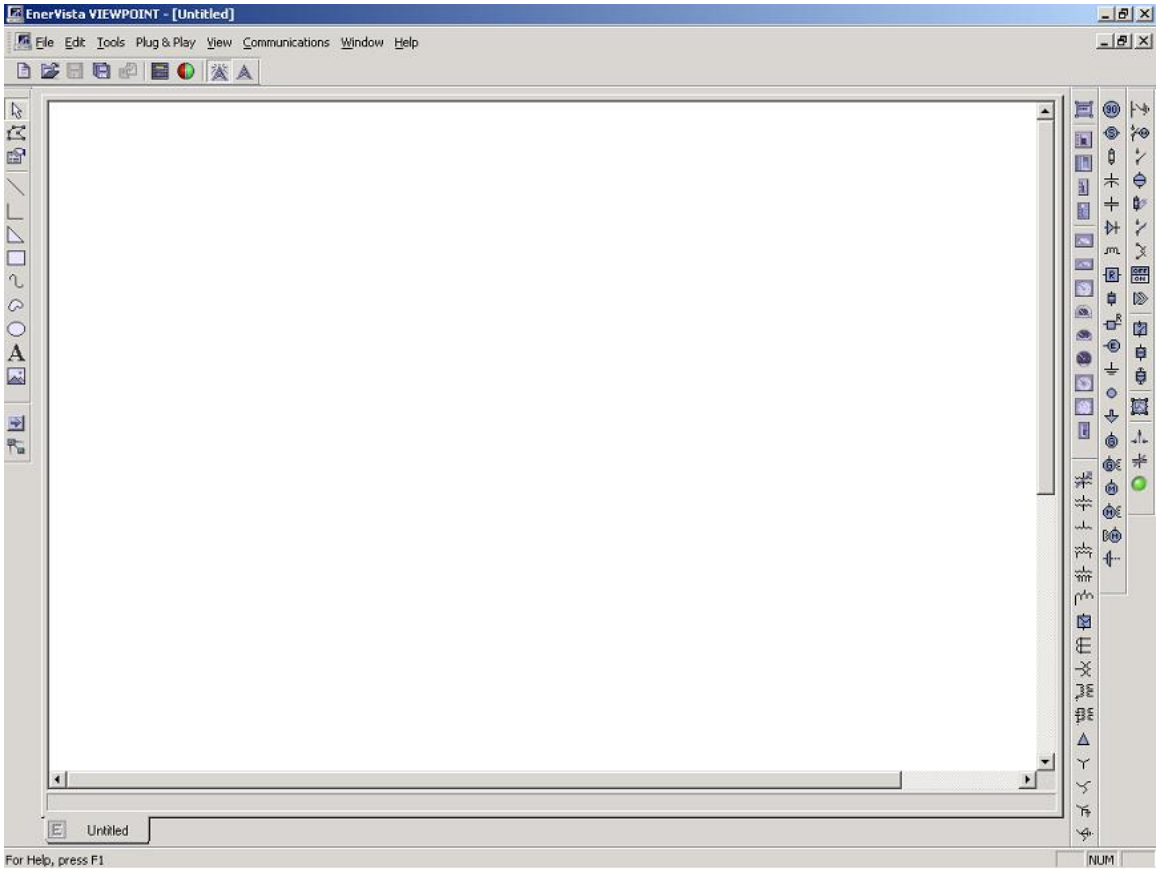
EnerVista VIEWPOINT - [Untitled]
File Edit Tools Plug & Play View Communications Window Help
Untitled
For Help, press F1
NUM

Toolbars

Introduction to One-Line Editor Toolbars

Here are the various toolbars associated with the One-Line Editor:

Align Toolbar

The **Align toolbar** ontains tools that can be used to align two components in an variety of ways.

Drawing Toolbar

The **Drawing toolbar** contains tools used to create basic lines, curves, text and shapes for use in your schema.

Gauges Toolbar

The **Gauges toolbar** contains an assortment of interactive analog gauge symbols which can be used to represent their respective real-life components on a schema.

Links Toolbar

The **Links toolbar** contains tools used to create link buttons or hot-spots on the schema that when viewed in the One-Line Viewer can navigate the user to another connected schema.

Nudge Toolbar

The **Nudge toolbar** contains an assortment of tools used to move components of your schema by minute lengths.

Rotate Toolbar

The **Rotate toolbar** contains an assortment of tools used to rotate or flip the components created on your schema.

Layout Toolbar

The **Layout toolbar** contains an assortment of tools used to adjust and size the components created on your schema.

Structure Toolbar

The **Structure toolbar** contains an assortment of tools used to group/ungroup components of your schema and also to move components in between the viewable layers of your schema.

Switch Gear and Control Toolbar

The **Switchgear and Control toolbar** contains an assortment of interactive digital symbols which can be used to represent their respective real-life components on a schema.

Symbols Toolbar



The **Symbols toolbar** contains an assortment of electrical diagram symbols which can be used to represent their respective components on a schema.

System Editor Toolbar

The **One-Line Editor toolbar** provides the basic functionality of creating/opening and saving schema files as well as providing access to certain One-Line Editor specific tools like "Insert UR" and the "One Shot Test".

Transformers and Symbols Toolbar

The **Transformers & Symbols toolbar** contains an assortment of transformer related symbols which can be used to represent their respective components on a schema.

Zoom Toolbar

The **Zoom toolbar** contains an assortment of tools used to resize, zoom and pan around the schema.

Add / Remove Toolbars

In tools such as the One-Line Editor that allow users to user various toolbars, If you wish to add or remove toolbars from screen, follow the steps below:

1. Click on the [VIEW] Menu button located at the top of any EnerVista VIEWPOINT tool.

2. Roll your mouse cursor over the [TOOLBAR] option. A list of toolbars applicable to your application will now be shown. Toolbars that are not applicable to your current tool will be grayed out.

3. Click on the toolbar you wish to add or remove from view.

The selected toolbar will now be added (if it was hidden before) or hidden (if it was viewable before) on the current screen.

One-Line Editor Toolbar

The One-Line Editor toolbar provides the basic functionality of creating/opening and saving schema files as well as providing access to certain One-Line Editor specific tools like "Insert UR" and the "One Shot Test". Here are the following tools specific to this toolbar and their function:

	New Schema	Create a new schema (.sf) file.
	Open File	Open and load an existing schema.
	Save File	Save current schema with current filename (If there is none, EnerVista VIEWPOINT will ask you to provide a filename).
	Save as	Save current schema and specifying file.
	Save and View Schema	Save current schema and then view schema using the One-Line Viewer.
	UR	Inserts a UR component into the schema. This UR component can now be connected and configured to a real UR relay.
	One Shot Test	Provides the user with a one-time reading of all the current values or status from each of the connected and configured components on the schema.
	Master Connect On	Allows for but does NOT initiate connections to devices.
	Master Connect Off	Disconnects all connected devices.

Drawing Toolbar

The drawing toolbar is used to create basic lines, curves, text and shapes for use in your schema. Here are the following tools specific to this toolbar and their function:

	Select	Used to select components. You can either click one component and then hold down CTRL to select others or you can just drag an area which contains the components you want to select.
	Edit Vertices	Shows vertices points for the current component you have select (if the component support vertices manipulation).
	Properties	Shows the properties of the current selected component.
	Line	Used to draws one line.
	Polyline	Used to draw connecting lines. Double click to end drawing a component.
	Polygon	Used to draw an enclosed variable-sided polygon. Double click to end drawing a component.
	Rectangle	Used to draw a right angle rectangle.
	Polycurve	Used to draw connecting curved lines. Double click to end drawing a component.
	Close Curve	Used to draw an enclosed connecting curved lined object. Double click to end drawing a component.
	Ellipse	Used to draw a elliptical component.
	Text	Used to add text to your schema
	Image	Used to insert and image into your schema.

Gauges Toolbar

The Gauges Toolbar contains an assortment of interactive analog gauge symbols which can be used to represent their respective real-life components on a schema. These symbols can be connected to an actual device to show the analog readings of the component. Here is an explanation for each symbol.

	Parameter	Creates a generic analog reading component.
	Bar 2D	Creates a 2D bar gauge component.
	Bar 3D	Creates a 3D bar gauge component.
	Thermometer 2D	Creates a 2D thermometer gauge component.
	Thermometer 3D	Creates a 3D thermometer gauge component.
	Semicircle 2D	Creates a 2D semicircle gauge component.
	Segment 2D	Creates a 2D segment gauge component.
	Circle 2D	Creates a 2D circle gauge component.
	Semicircle 3D	Creates a 3D semicircle gauge component.
	Segment 3D	Creates a 3D segment gauge component.
	Circle 3D	Creates a 3D circle gauge component.
	Circle Multi Values	Creates a multi value circle gauge component.
	Phasors	Creates a phasor gauge component.
	Bar Multi Values	Creates a multi value bar gauge component.

Note: Before these gauges can measure real time values, you must specify which device to connect the gauge to by double clicking on the gauge.

Links Toolbar

The Links Toolbar contains tools that are used to link components together as well as create link buttons on the schema that when viewed in the One-Line Viewer can navigate the user to another connected schema. Here are the following tools specific to this toolbar and their function:

Hot Spot Creates a button that allows users to navigate to other schemas when clicked on. Once the button is created, you must specify the schema to link to by double clicking on the HOT SPOT button and editing the properties in the [NEXT FILE] tab.

Link Draws connecting lines between two selected components. Once this tool is selected, select the first component to begin drawing connecting lines. Select the second component to stop drawing connecting lines.

Symbols Toolbar

The Symbols Toolbar contains an assortment of electrical diagram symbols which can be used to represent their respective components on a schema. Here is an explanation for each symbol.

	Automatic Voltage Regulator		**Exciter**
	Sectionalizer		**Ground**
	Test Switch		**Bus Connection**
	Capacitor 1		**Bus End**
	Capacitor 2		**Generator**
	Rectifier		**Generator Synchronous**
	Reactor		**Motor**
	Resistor		**Motor Synchronous**
	Fuse		**Motor Round Rotor**
	Recloser		**Turbine**

Transformer & Symbols Toolbar

The Transformer & Symbols Toolbar contains an assortment of transformer related symbols which can be used to represent their respective components on a schema. Here is an explanation for each symbol.

	Tapchanger		**Transformer Voltage 1**
	Transformer 1		**Transformer Voltage 2**
	Transformer 2		**Transformer 5**
	Transformer 3		**Transformer Delta**
	Transformer 4		**Star**
	Transformer AUTO		**Zig Zag**
	Transformer Phase Shifting		**Star Grounded**
	Transformer Current		**Star Zig Zag Grounded**

Switchgear and Control Toolbar

The Switchgear and Control Toolbar contains an assortment of interactive digital symbols which can be used to represent their respective real-life components on a schema. These symbols can be connected to an actual device to show the states of the component. Here is an explanation for each symbol.

Switch Ground

Switch Motorized

Test Switch 1

Test Switch 2

Switch Fused 1

Switch Fused 2

"V" Switch

Circuit Breaker 1

Circuit Breaker 2

Drawout Breaker

Send Command Can only be used to send out virtual inputs

Custom Symbol

Switch Double Throw

Contactor

LED Indicator Analog and Digital types.

Zoom Toolbar

The Zoom Toolbar contains an assortment of tools used to resize, zoom and pan around the schema. Here are the following tools specific to this toolbar and their function:

	Zoom	Allows user to zoom in and centers the screen to the spot selected.
	Zoom to Fit	Allows user to zoom in to a magnitude that fits your entire schema layout on your entire screen.
	Zoom to Selection	Allows user to zoom in on the components that you have selected.
	Pan	Move the viewable area of your screen around the schema. To activate, select this tool and then place the hand icon over and part of your schema. Click and drag the hand in a direction to move around the schema.

Nudge Toolbar

The Nudge Toolbar contains an assortment of tools used to move components of your schema by minute lengths. Here are the following tools specific to this toolbar and their function:

	Nudge Up	Moves selected component one pixel upwards.
	Nudge Down	Moves selected component one pixel downwards.
	Nudge Left	Moves selected component one pixel left.
	Nudge Right	Moves selected component one pixel right.

Align Toolbar

The align toolbar contains tools that can be used to align two or more components in an variety of ways. Here are the following tools specific to this toolbar and their function:

Align Top	Align the top sides of all the selected components to the top of the reference component.
Align Horizontal Centers	Align the horizontal centers of all the selected components to the horizontal center of the reference component.
Align Bottom	Align the bottom sides of all the selected components to the bottom side of the reference component.
Align Left	Align the left sides of all the selected components to the left side of the reference component.
Align Vertical Centers	Align the vertical centers of all the selected components to the vertical center of the reference component.
Align Right	Align the right sides of all the selected components to the right side of the reference component.

Selecting Components

Select multiple components by holding a CTRL key down and selecting each of the components with the mouse button. The last component selected will be considered to be the reference component. When multiple components are selected, each component is outlined with a series of empty boxes. The last component selected, the reference component, is outlined with a series of solid boxes.

Structure Toolbar

The Structure Toolbar contains an assortment of tools used to group/ungroup components of your schema and also to move components in between the viewable layers of your schema (ie: visually show a component to be behind another overlapping component). Here are the following tools specific to this toolbar and their function:

Group	Combines all selected components into one combined entity.
Ungroup	Breaks apart all components of one entity back into their respective original components.
Front	Moves current components to the absolute front of all viewable layers.
Back	Moves current components to the absolute rear of all viewable layers.
Forwards	Moves current components on layer higher than it's original layer hierarchy.
Backwards	Moves current components on layer lower than it's original layer hierarchy.

Selecting Components

Select multiple components by holding a CTRL key down and selecting each of the components with the mouse button.

Rotate Toolbar

The Rotate Toolbar contains an assortment of tools used to rotate or flip the components created on your schema. Here are the following tools specific to this toolbar and their function:

	Rotate	Rotates selected component freely. Once selected, put your mouse cursor over the component and move the component clockwise or counter-clockwise depending on what you need.
	Rotate Left	Rotates selected component 90 degrees counter-clockwise.
	Rotate Right	Rotates selected component 90 degrees clockwise.
	Flip Vertical	Flips the selected component on the vertical axis.
	Flip Horizontal	Flips the selected component on the horizontal axis.

Layout Toolbar

The Layout Toolbar contains an assortment of tools used to space components and size components with relation to each other. Here are the following tools specific to this toolbar and their function:

	Space Across	Evenly space the selected components across an imaginary horizontal axis, starting from the far left component and ending at the far right component.
	Space Down	Evenly space the selected components across an imaginary vertical axis, starting from the top component and ending at the bottom component.
	Same Width	Set the width of the selected components to the same width as the reference component.
	Same Height	Set the height of the selected components to the same height as the reference component.
	Same Size	Set the width and height of the selected components to the same width and height of the reference component.

Selecting Components

Select multiple components by holding a CTRL key down and selecting each of the components with the mouse button. The last component selected will be considered to be the reference component. When multiple components are selected, each component is outlined with a series of empty boxes. The last component selected, the reference component, is outlined with a series of solid boxes.

Building a Schema

Adding Components and Items to a Schema

To add components or items to a scheme, following these steps:

1. Select a component or item from any of the following toolbars. These toolbars contain component symbols that you can use to build your schema.



2. Once your component or item is selected, click on a spot on your schema work area where you would like to place the component.

3. Your component should now appear on your schema.

Adding a Component for Manual Indication

Follow the steps below to create and configure a non-monitoring or non-control component:

* Note: Only components from the SWITCHGEAR & CONTROL toolbar can be used for manual indication.

1. Select a Component.

2. Place the component on the work area to where you want to place it.

3. Open up the COMPONENT PROPERTIES box by either double-clicking on the component or right-clicking on it and selecting [PROPERTIES] from the pop-up menu. The COMPONENT PROPERTIES box will look something like this:

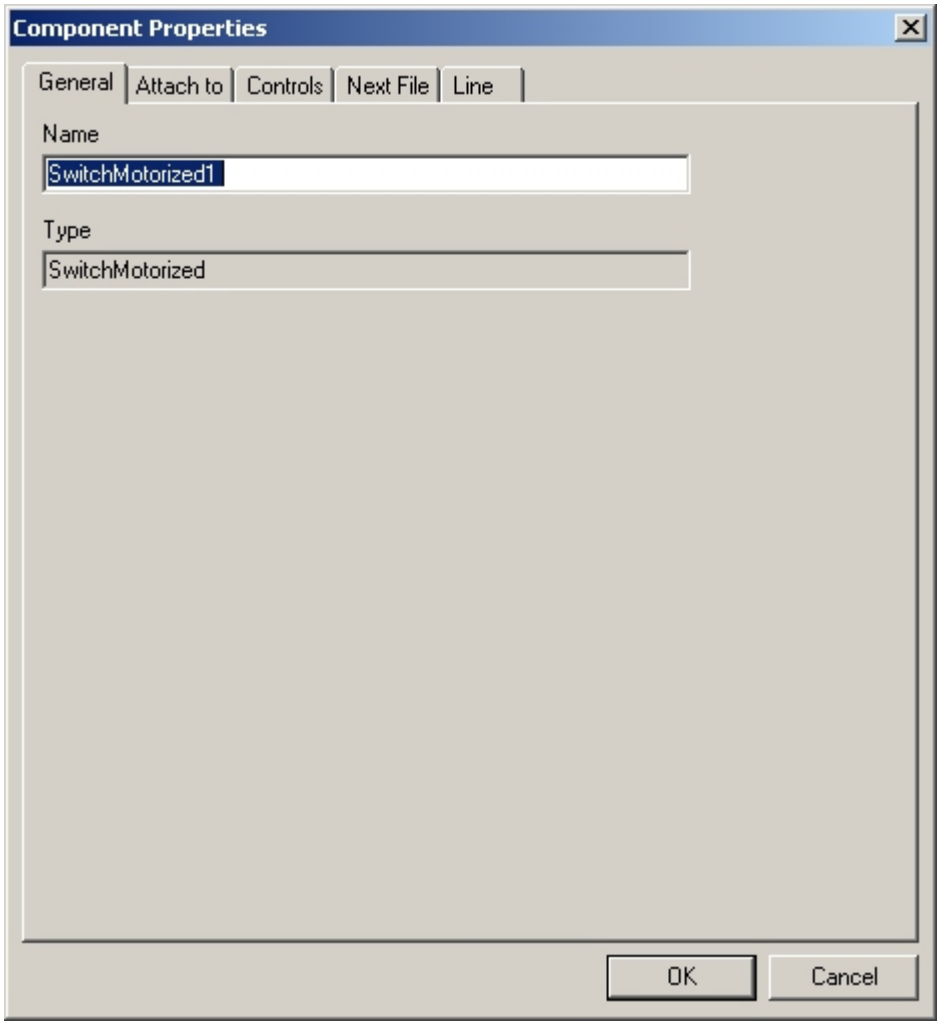

4. Select the [Attach to] tab:

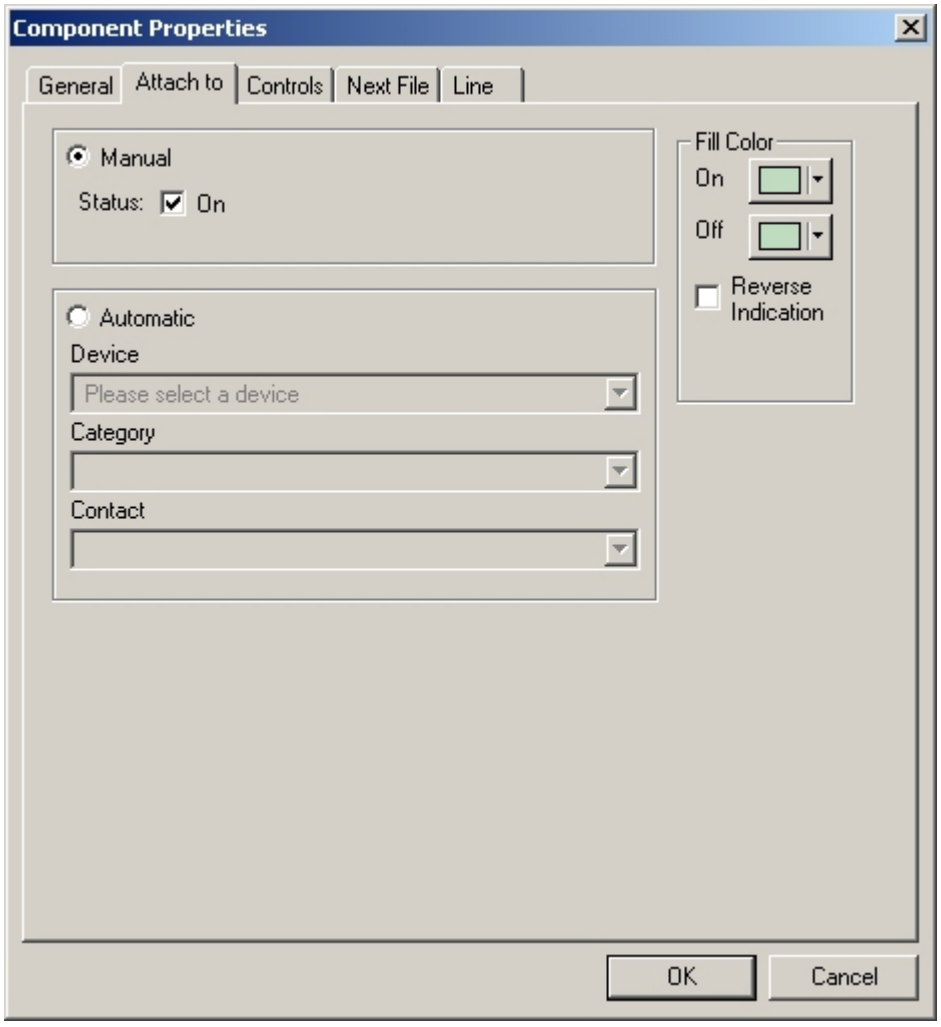

a. Select the Manual radio button (this indicates to EnerVista VIEWPOINT that the component is a manual indicator)
b. Select the Status to be either in the ON or OFF state.
c. You can select the colour to fill in the component in each state (ON and OFF) if the selected component supports this function.

5. Your Component configuration is now complete. Click [OK] to save your changes.

Adding a Component for Control

Follow the steps below to create and configure a Component for Control purposes:

* Note: You must have **Sites** and **Devices** Sitescreated properly in order to connect your Components to control functions. Only components from the SWITCHGEAR & CONTROL toolbar can be used for control.

1. Select a Component.

2. Place the component on the work area to where you want to place it.

3. Open up the COMPONENT PROPERTIES box by either double-clicking on the component or right-clicking on it and selecting [PROPERTIES] from the pop-up menu. The COMPONENT PROPERTIES box will look something like this:

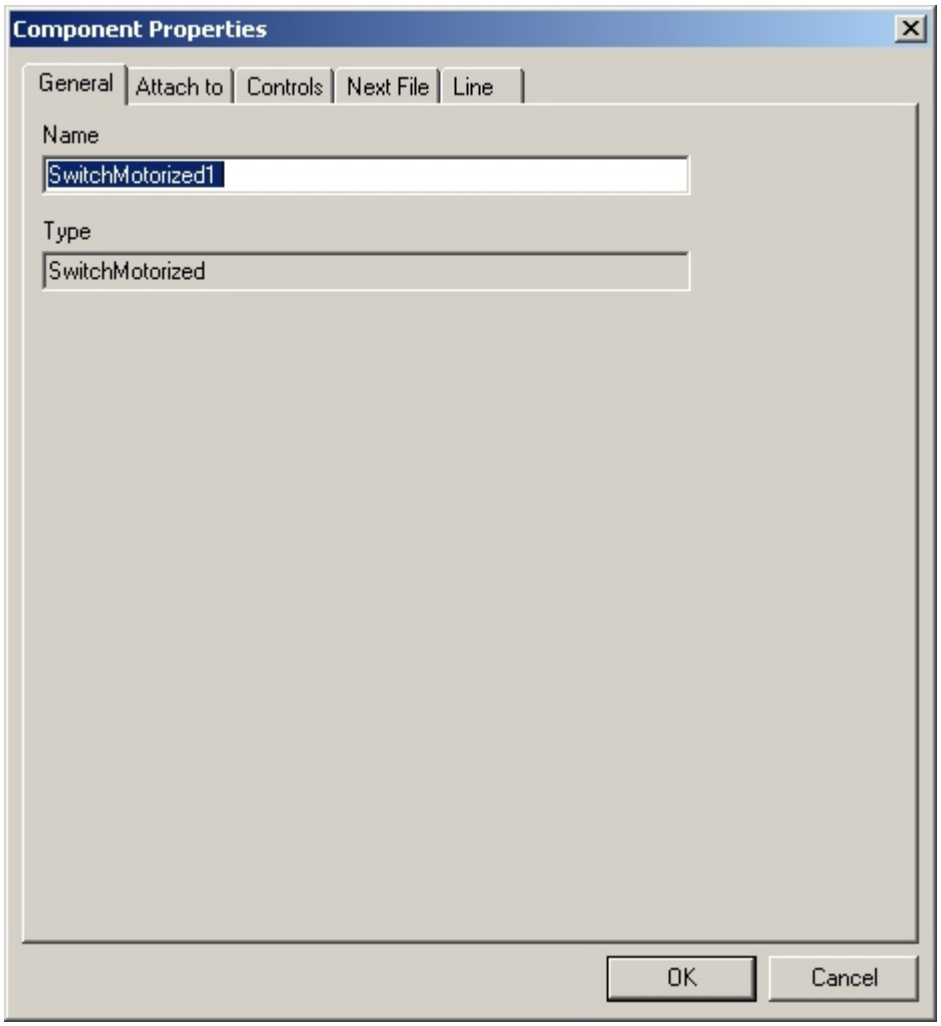

4. Select the [Attach to] tab:

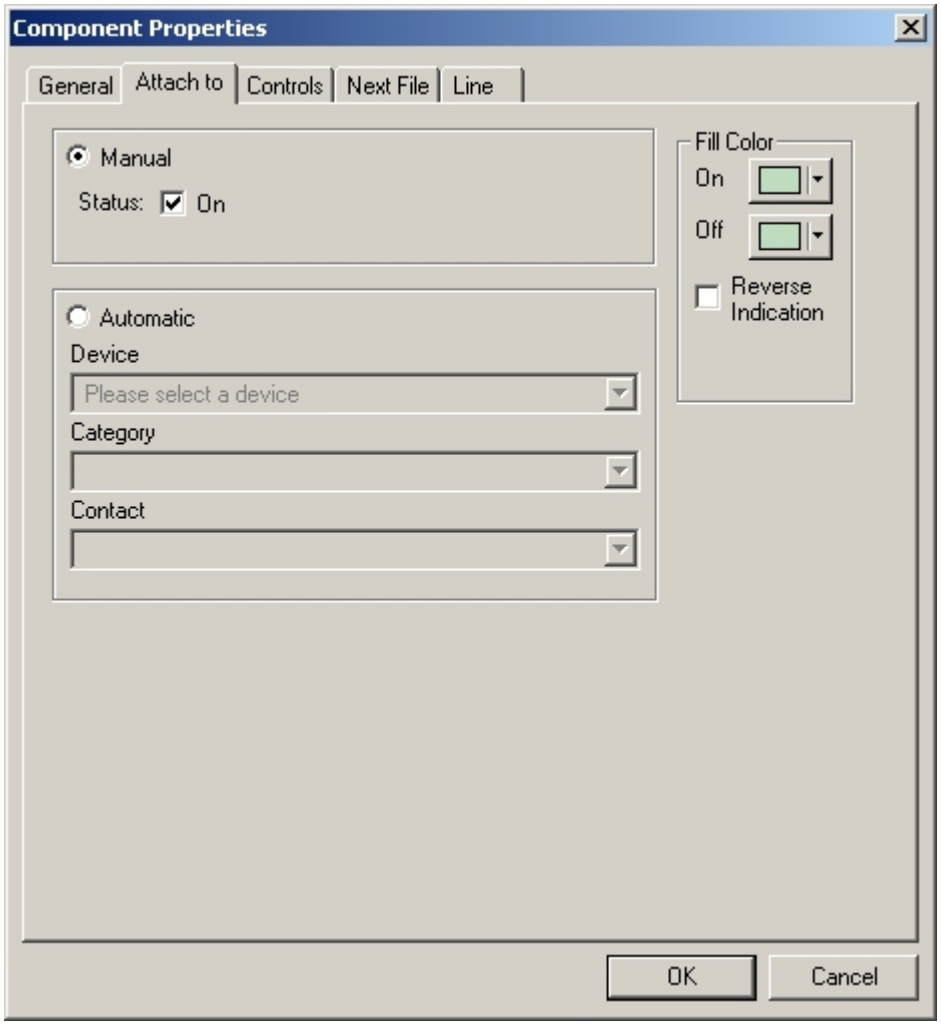

a. Select the Automatic radio button
b. Select the Device to which this Component is connected
c. Select the Indication Category from the Category dropdown box
d. Select the particular Contact that you wish the Component to control

5. Now, select the [CONTROLS] tab

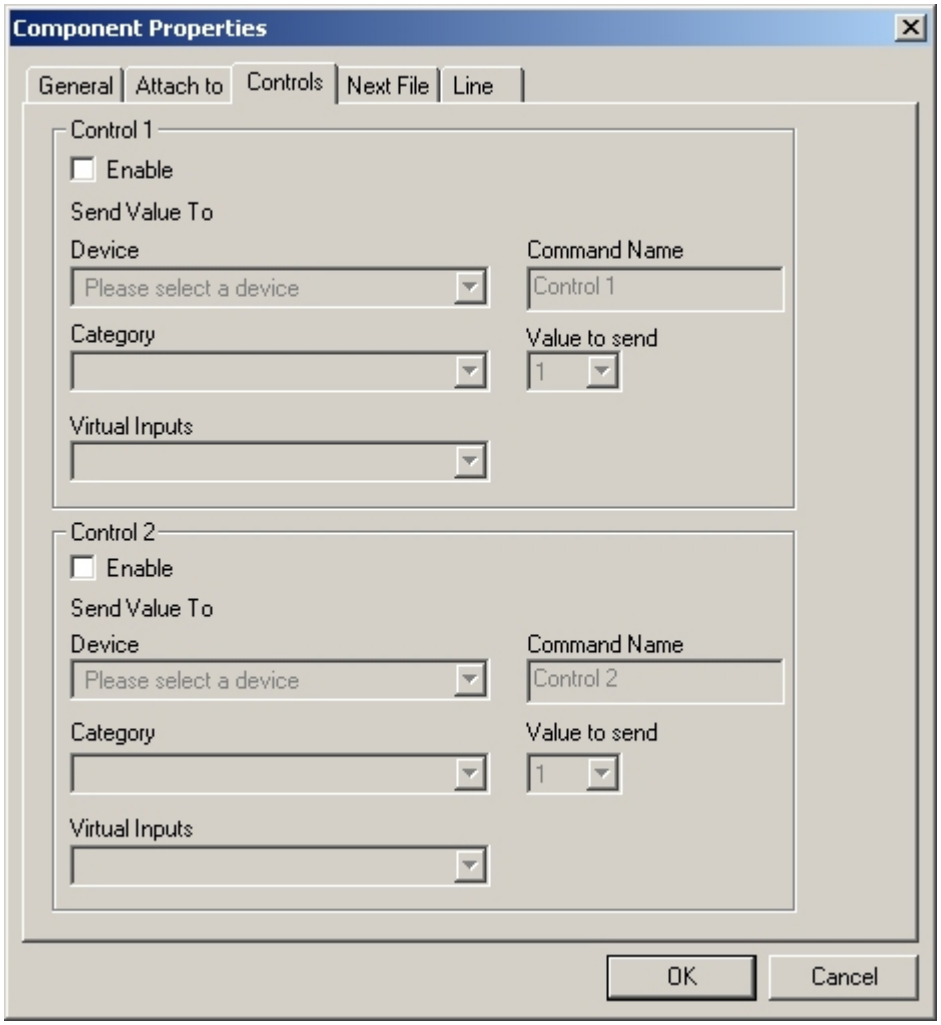

a. Check the [Enable] checkbox for either Control 1 or 2
b. Select the desired Device associated with this Component.
c. Select the Control-type Category in the Category Drop-down.
d. Select the corresponding Category Force Coil or Virtual Input command below the Category Drop-down.
e. Change the text of the Command Name as you desire.
f. Select value to send when control is initiated.
g. Repeat step **a** to **f** if you want another control function added to this Component.

6. Your device is now ready for control. Click on [OK] to save your changes.

Adding Images to a Schema

Follow the steps below to add image files to your schema work area:

Note: Currently, EnerVista VIEWPOINT only allows bitmap files to be imported (.bmp, .dib).

1. Select the Image button on the Drawing toolbar . A MS Windows Explorer box will pop up.

2. Browse to where your desired image file is stored and click on it.

3. Click on [OK]

Your picture should now be seen on the work area.

Changing the work area size of the Schema

If the current work area size of your schema is insufficient, follow the steps below to enlarge or shrink the work area to a size that is suitable for your particular drawing:

1. Select [EDIT] button on the Menu Bar.

2. Select [Measurements and Size]. The following box should show up:

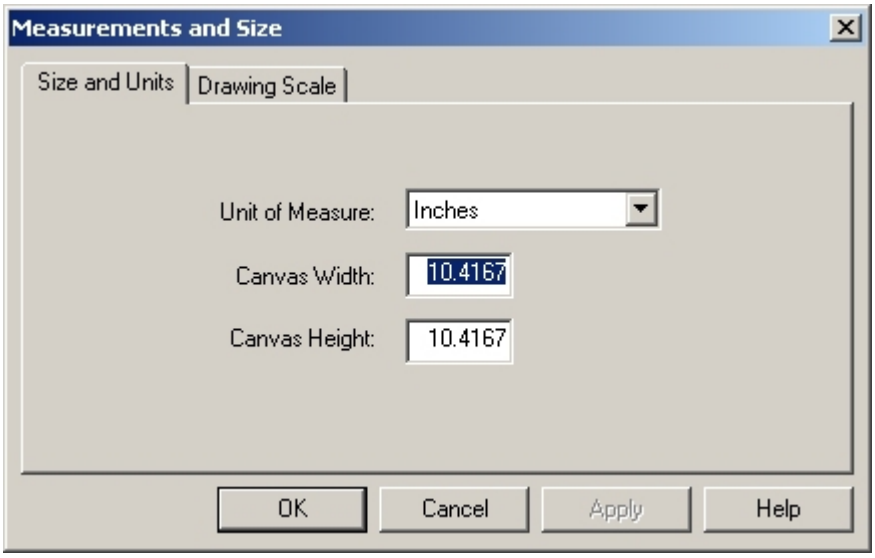

3. Staying within the [Size and Units] tab, change the values for the selection boxes below:

- Unit of Measure
- Canvas Width
- Canvas Height

4. click [OK] to submit and save your changes.

Your schema work area size should now be changed accordingly.

Component Properties

Here are the aspects of a component that can be modified in EnerVista VIEWPOINT.

General:

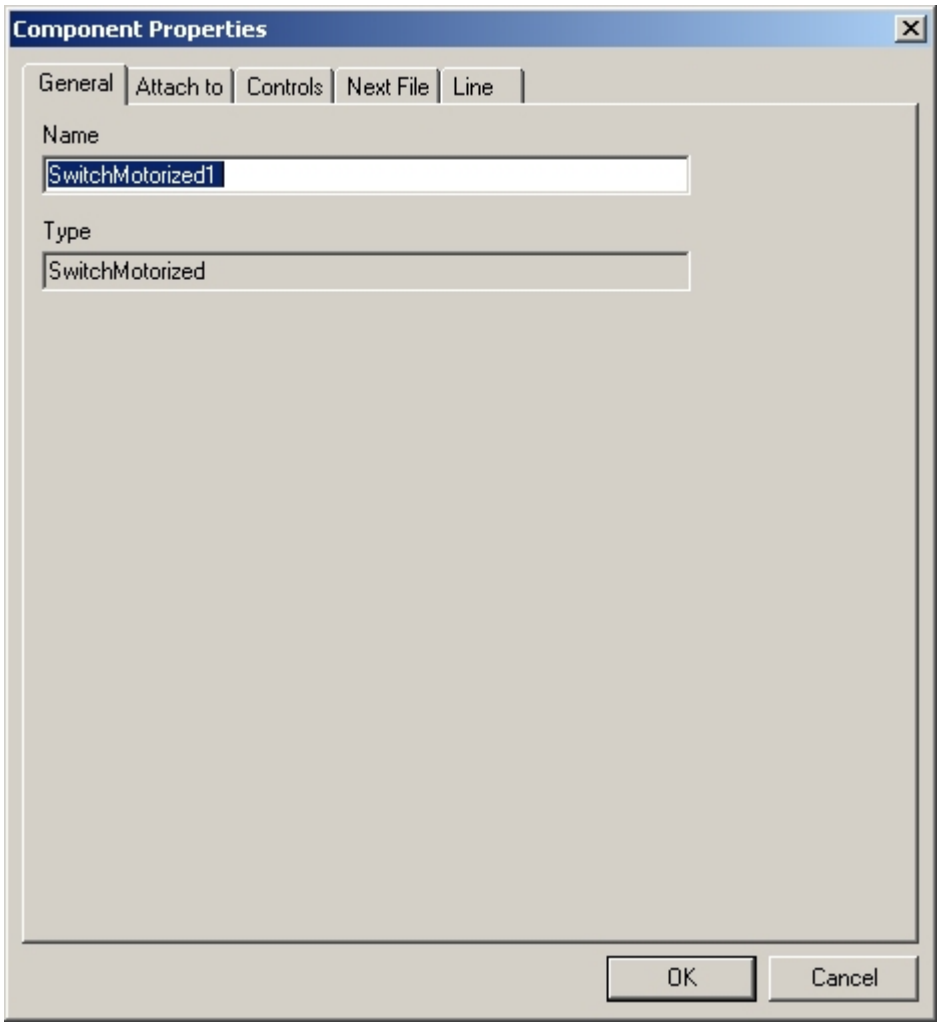

- Component Name
- Type (usually selected by EnerVista VIEWPOINT)

Attach to:

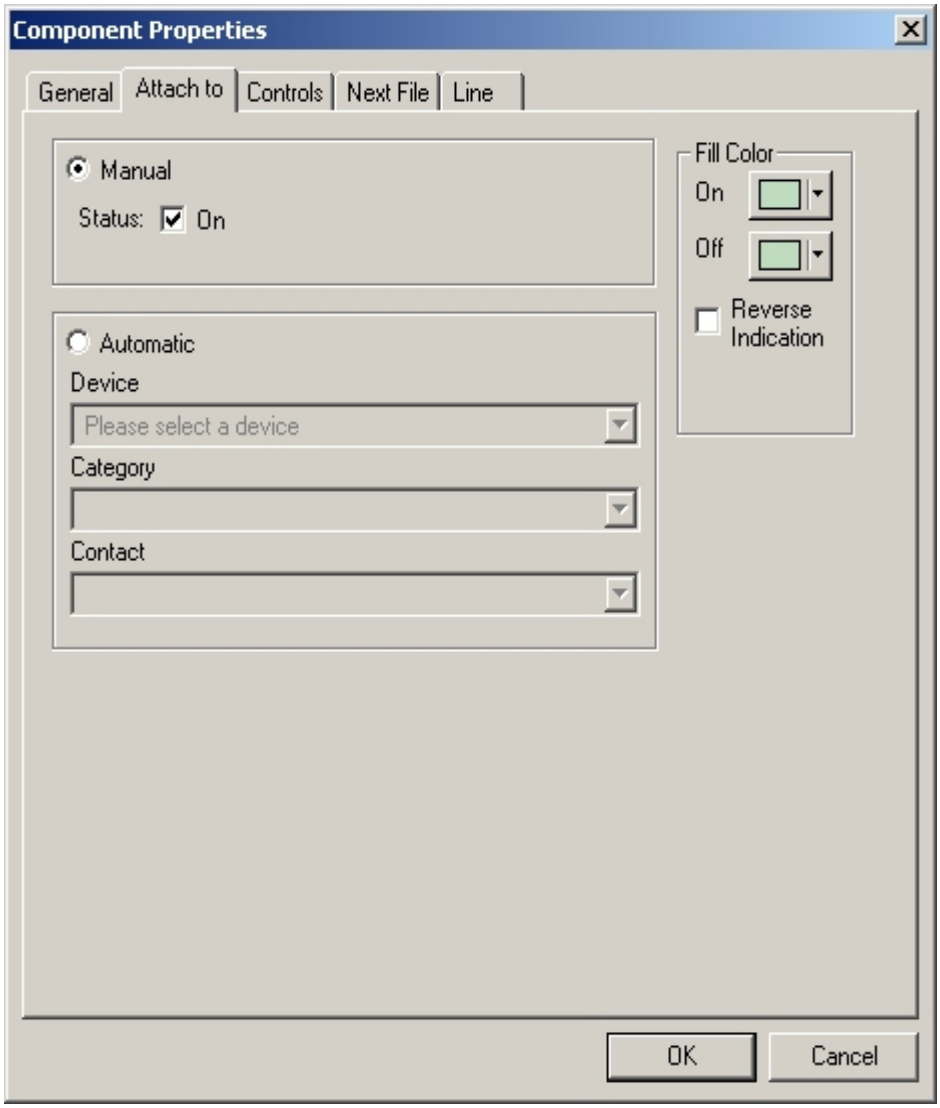

- Device Monitoring Type: Manual or Automatic

Controls:

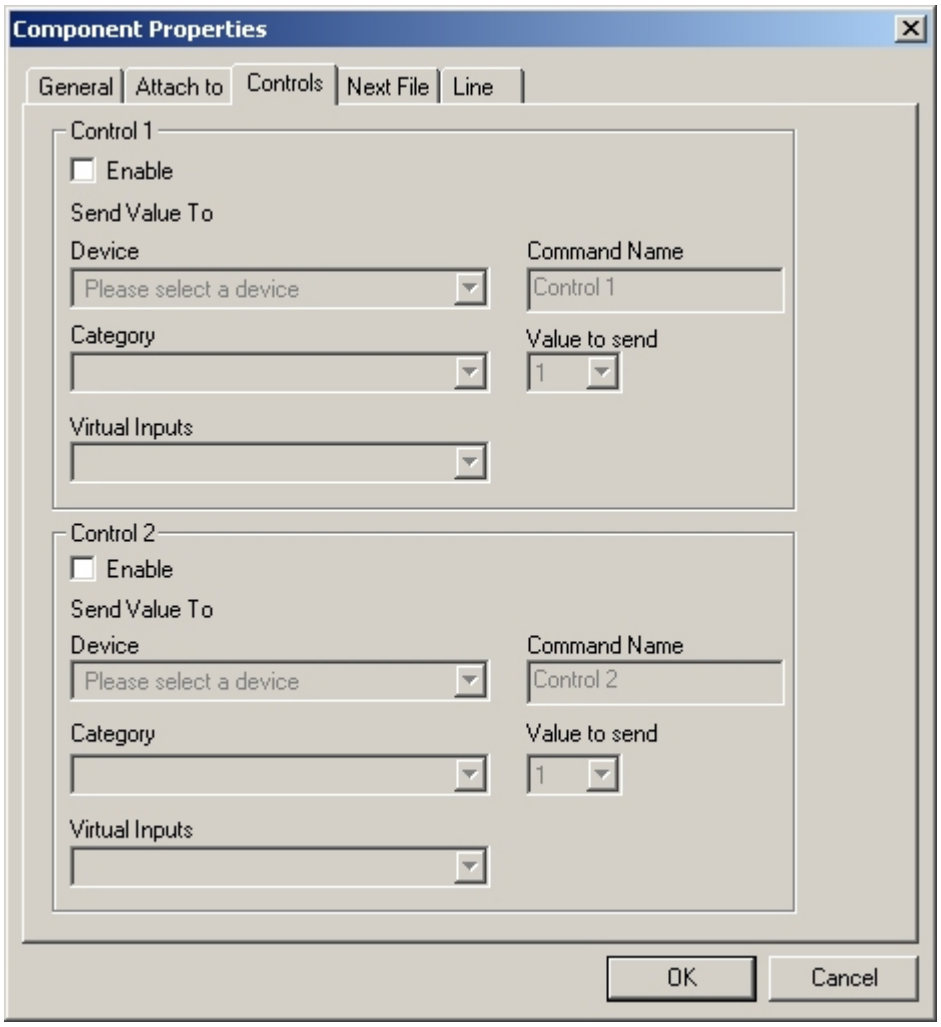

- Control Settings

Next File:

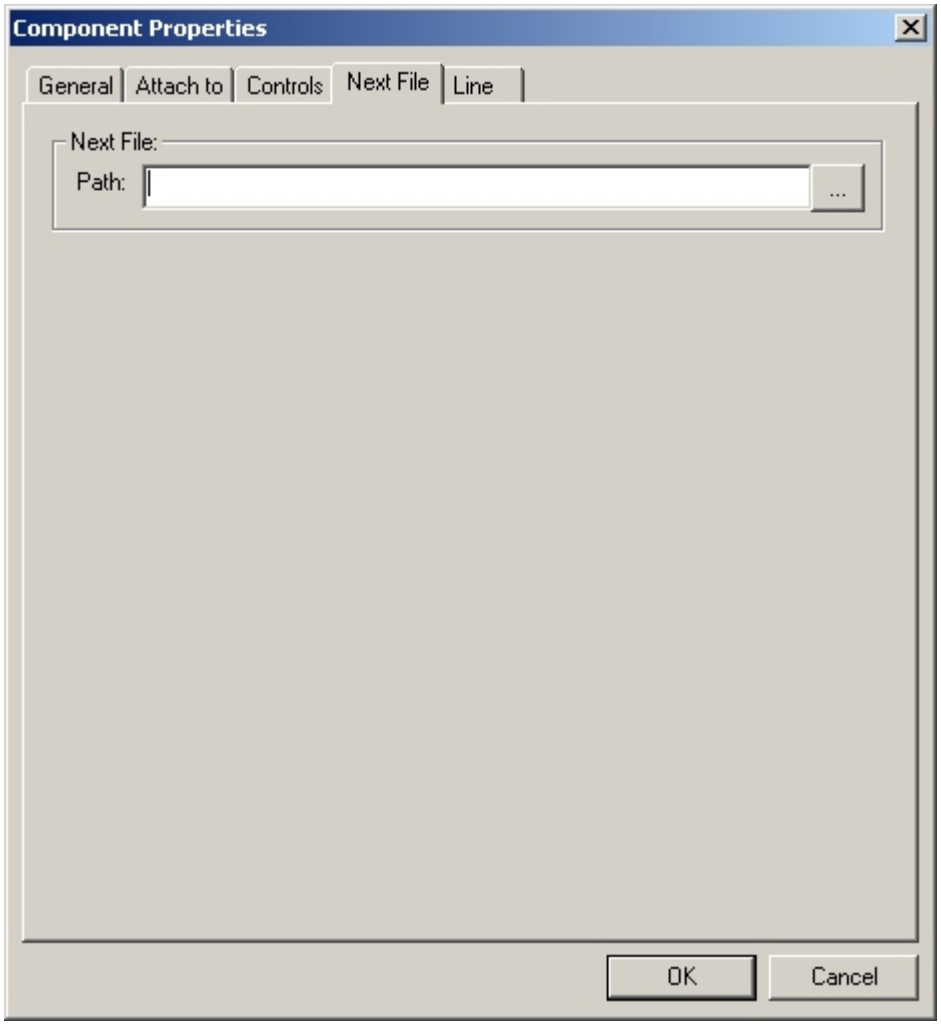

- This option allows user to connect to another schema or run an application by double clicking on the component from the One-Line Viewer.

Line:

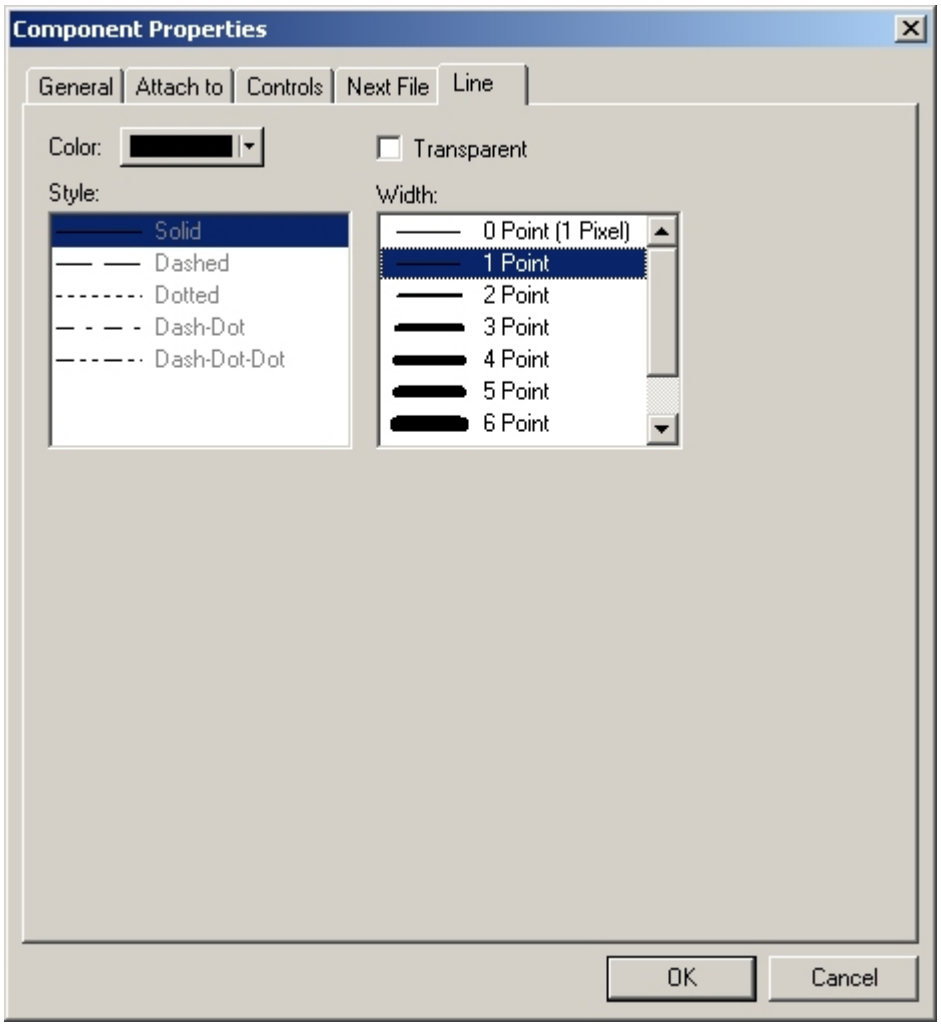

- Component Outline Border settings

Custom Symbols

Should you want to use measurable digital components that are not part of EnerVista VIEWPOINT's default symbols, you can use the CUSTOM SYMBOLS button to do this. Custom Symbols are generalized digital components where the visual look of the OFF/ON states can be customized to whatever image files (bit-map files - .bmp , .dib) you have created.

The Custom Symbols button can be found on the [Switchgear and Control] toolbar.

Creating and Configuring Custom Symbols:

Before you start, please ensure that you have created two image file for the custom symbol or components you wish to make. One image should be for the ON state of the symbol and the other should be for the OFF state of the symbol.

1. Click on the Custom Symbol button located on the [Switchgear and Control] toolbar.

2. Click anywhere on your schema work area to place the custom symbol.

3. Either double click the custom symbol area or right click on it and select properties to open up the COMPONENT PROPERTIES box.

4. You must now fill in the following information to correctly connect and configure your custom system:

a. **GENERAL TAB**

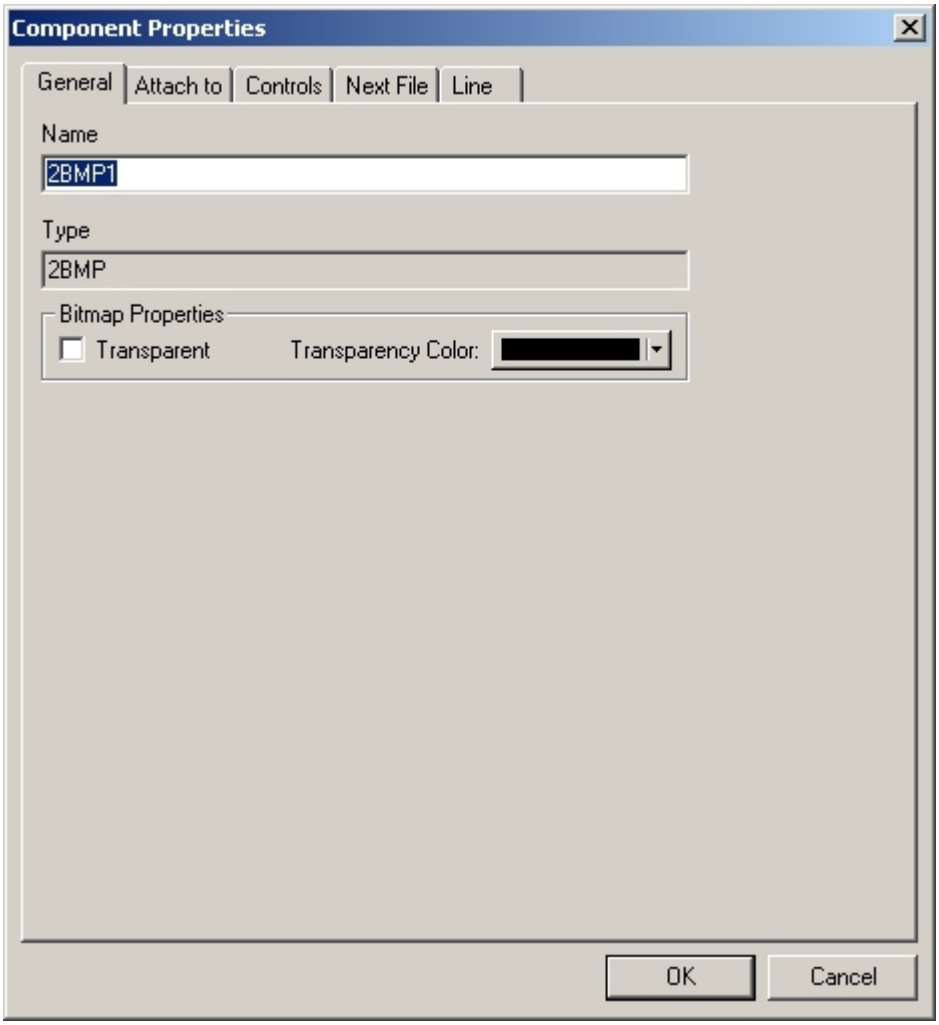

- Select your Name and image bitmap properties information.

b. **ATTACH TO TAB**

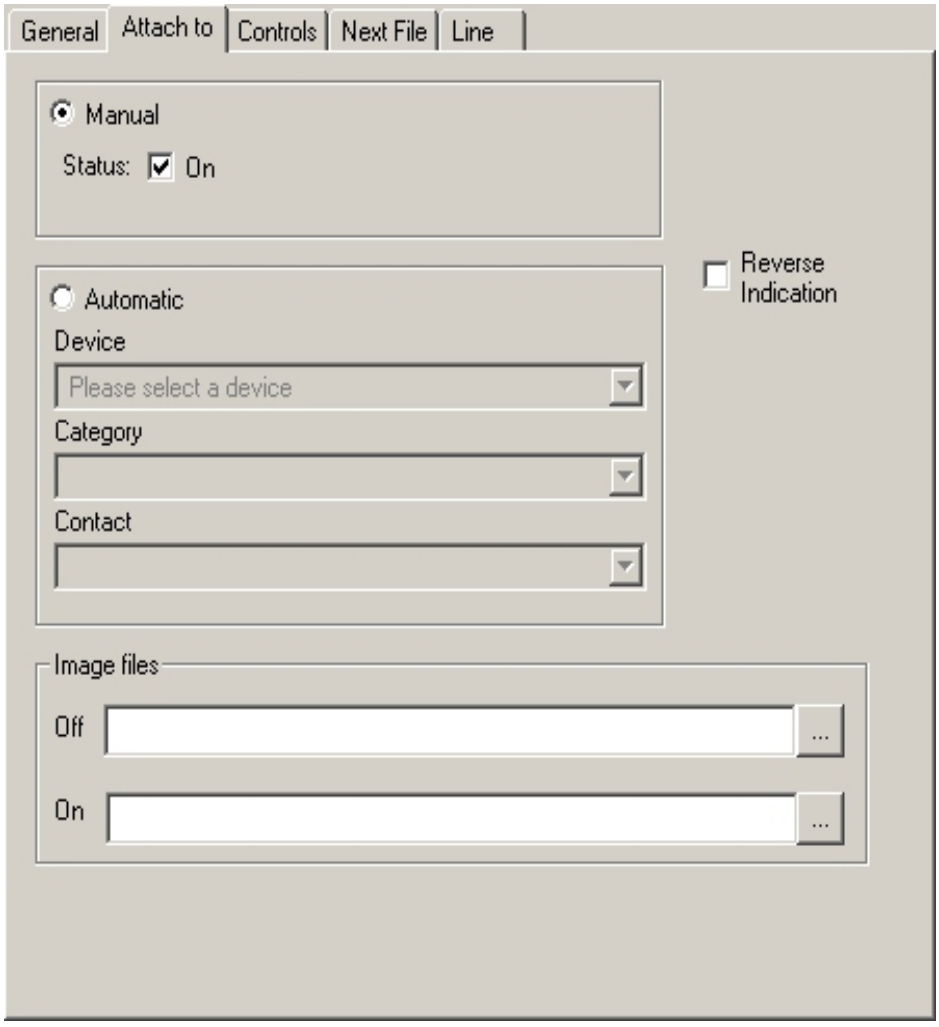

- Select the device monitoring type to be manual or automatic.
- Select the ON and OFF images for the component.

c. **CONTROLS**

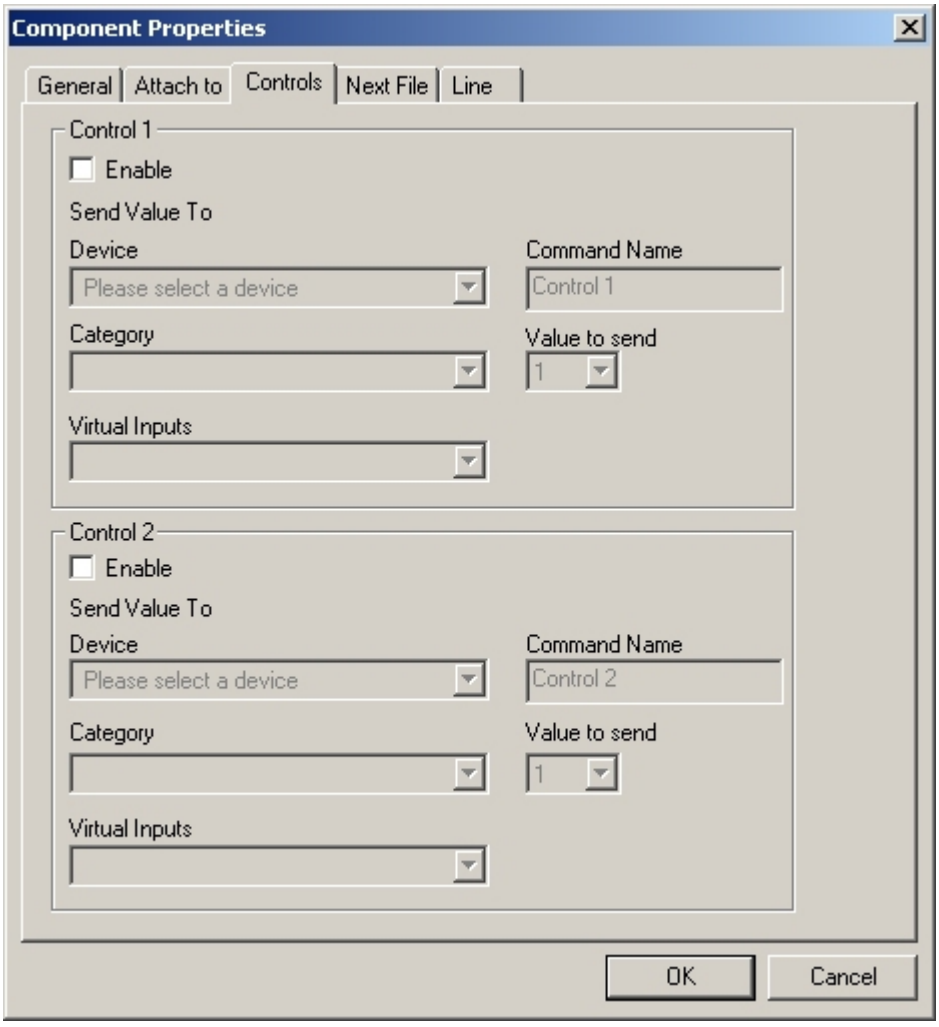

- Fill in the properties for controlling the unit.

LED Indicators

What is an LED Indicator?

The ‘LED Indicator’ is the latest tool available with Viewpoint. he LED allows the operator to receive visual and/or audible notification when an undesirable condition occurs. Both a digital state and an analog parameter can be attached to an LED state. In addition, existing analog parameters have been enhanced to include the option of defining an alarm condition.

Viewpoint versions 2.1 and 2.2 used the Schema Indicator on the schema tab to indicate the communication status of the devices on the schema.

Since Viewpoint 3.0, the meaning of the Schema Indicator represents the combined status of all the LEDs on the schema. The communication status for the active schema is now located in the top toolbar to the rightmost side of the screen when a schema is opened in a One-Line Viewer or when the user is using the Annunciator tool.

Communication Status

The communication status will show one of two states:

All relays on the schema are successfully communicating.

The schema is having communication problems with at least one relay.

Press the ‘Communication Status’ button to view the ‘Device Status’ dialog. The ‘Device Status’ dialog can display the communication status of every relay. A green status represents a device that Viewpoint is successfully communicating with. A grey status represents a device that Viewpoint cannot communicate with.

Schema Indicator

Each opened schema has an associated tab located at the bottom left of the screen.

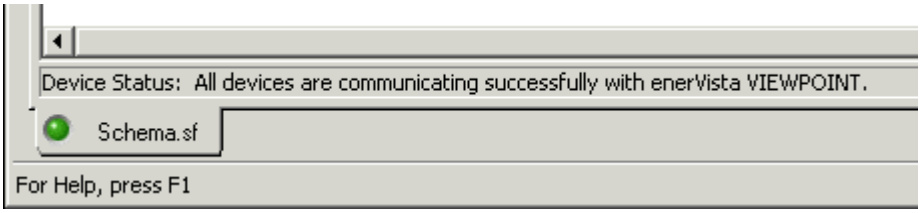

Each schema tab can have two pieces of information:

- The name of the schema
- A schema Indicator

For the tab to display a Schema Indicator, one of two rules must be satisfied:

1. The schema must contain at least 1 LED.

   or

2. The schema must contain at least 1 analog parameter that has at least 1 alarm condition defined.

Rules for the Schema Indicator

There are no LEDs on the schema.

All LEDs are in normal condition.

At least 1 LED is in an alert condition and the operator has acknowledged the LED. There are also no alarm conditions present.

At least 1 LED is in an alarm condition and the operator has acknowledged the LED.

(flashing)

At least 1 LED has been reset. There are no alarms or alerts present.

(flashing)

At least 1 LED is in an alert condition. There are no alarms. At least 1 LED has changed state.

(flashing)

At least 1 LED is in an alarm condition. At least 1 LED has changed state.

No communications to any of the relays on the schema.

Rule 1

Flashing of the Schema Status means there is a state change on the schema.

Rule 2

The Schema Status will represent the LED used on the schema with highest priority state.

Schema Indicator Priority

Priority Level 1 - Lowest

Priority Level 2

Priority Level 3

Priority Level 4 - Highest

LED Indicator – How To

There are two ways that an LED can be added to a schema.

An LED can be added to a schema by selecting the LED icon, located on the ‘Switch Gear and Control’ toolbar.

An LED can also be added to a schema by creating the LED through the properties of an analog parameter.

LED Type - Analog

There are two possible ways of placing an LED on a schema. The direct way is to select the LED icon and place the icon in the schema work area. The indirect way of creating an analog LED is by means of the analog parameter.

Create Analog LED - Method 1

Pressing the LED icon on the toolbar will prompt the operator to select the type of LED to create.

After selecting either a ‘Digital’ or ‘Analog’ LED, select the size of the LED. An LED can either be ‘Small’ or ‘Large’. After selecting the size, press the left mouse button at the location on the schema to place the LED.

After specifying a device and an analog parameter, the LED will change to its normal condition state.

Edit the Analog LEDs properties to attach the LED to a device and an analog parameter. For proper functioning, the LED needs to have at least one range defined. The multiplier can also be selected in order to adjust Viewpoint's displayed value to match the value displayed by a device.

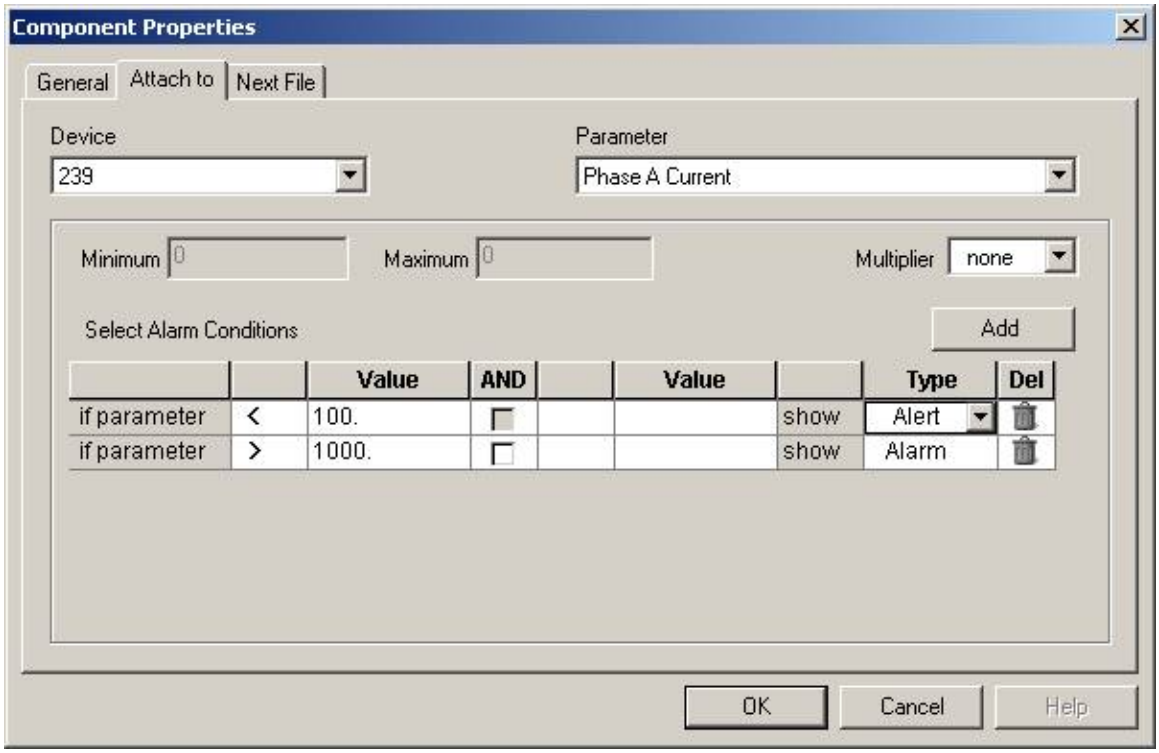

The number of alarm conditions that can be created for each LED is unlimited. But for the LED to work properly, there needs to be at least one alarm condition.

Each range condition entered can be configured as one of two Types: Alarm or Alert.

Alarm vs. Alert

When any one of the Alarm conditions becomes satisfied, the LED will change from Green to Red. An Alarm Sound, selectable by the operator, will be continuously played.

When any one of the Alert conditions becomes satisfied, the LED will change to Yellow. An Alert Sound, selectable by the operator, will be continuously played.

The exception to these rules is that an Alarm takes priority over any Alert. So if an Alert occurs while an Alarm is present, the Alarm has priority. This also means that if an Alert occurs followed by an Alarm, the Alarm will override the Alert.

When setting up conditions, the borders of the ranges can be configured to be either inclusive or exclusive. Ranges cannot overlap.

If the analog parameter selected is an enumeration, then configuring the alarm conditions is done in a different way. Instead of entering a numeric value, the operator has to select an item from the list of available choices applicable for this parameter.

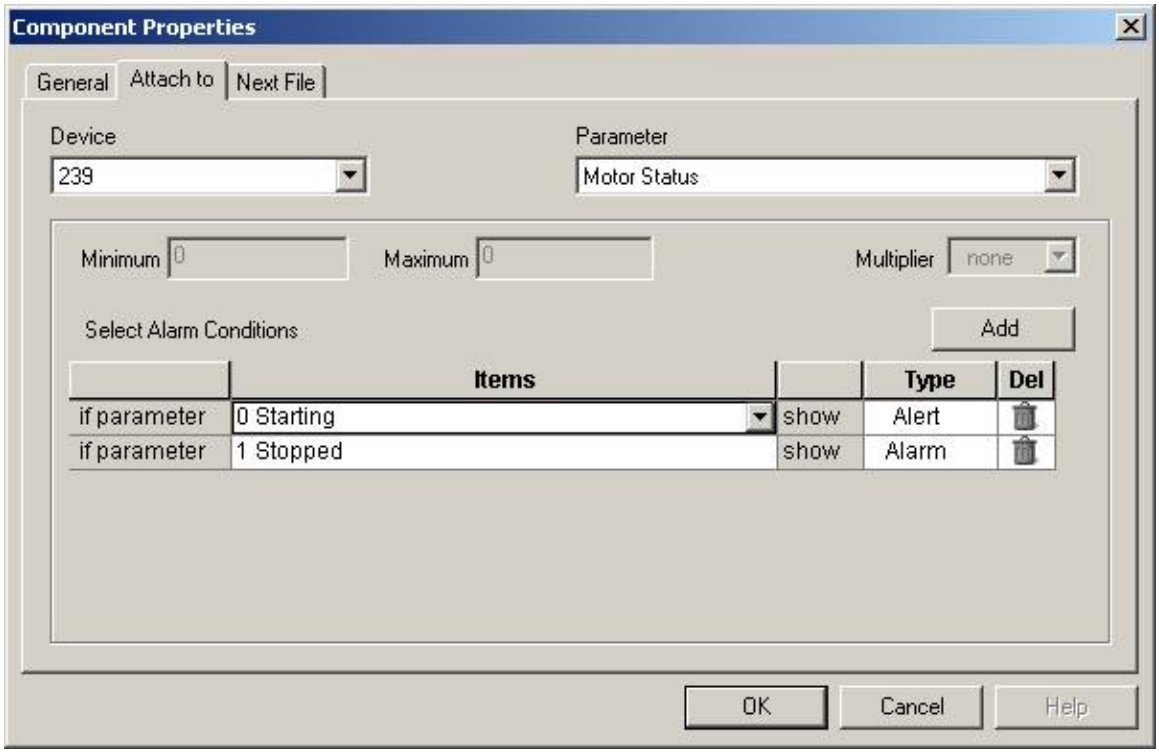

Create Analog LED – Method 2

All of the analog components found in the 'Gauges' toolbar can now be configured to show an alarm/alert state, except for the multi-value circle, the multi-value bar, and the phasor graph.

When an analog parameter has a condition configured the parameter will be displayed with a double border.

If an analog component has conditions defined the 'Line', 'Fill' and 'Font' settings for the parameter cannot be changed. This means that the parameter's color is predefined to be green (Normal), red (Alarm) or yellow (Alert).

Select the 'Create LED' checkbox located in the bottom left of the parameters properties to create a small LED that will have the same condition properties as the analog parameter being edited.

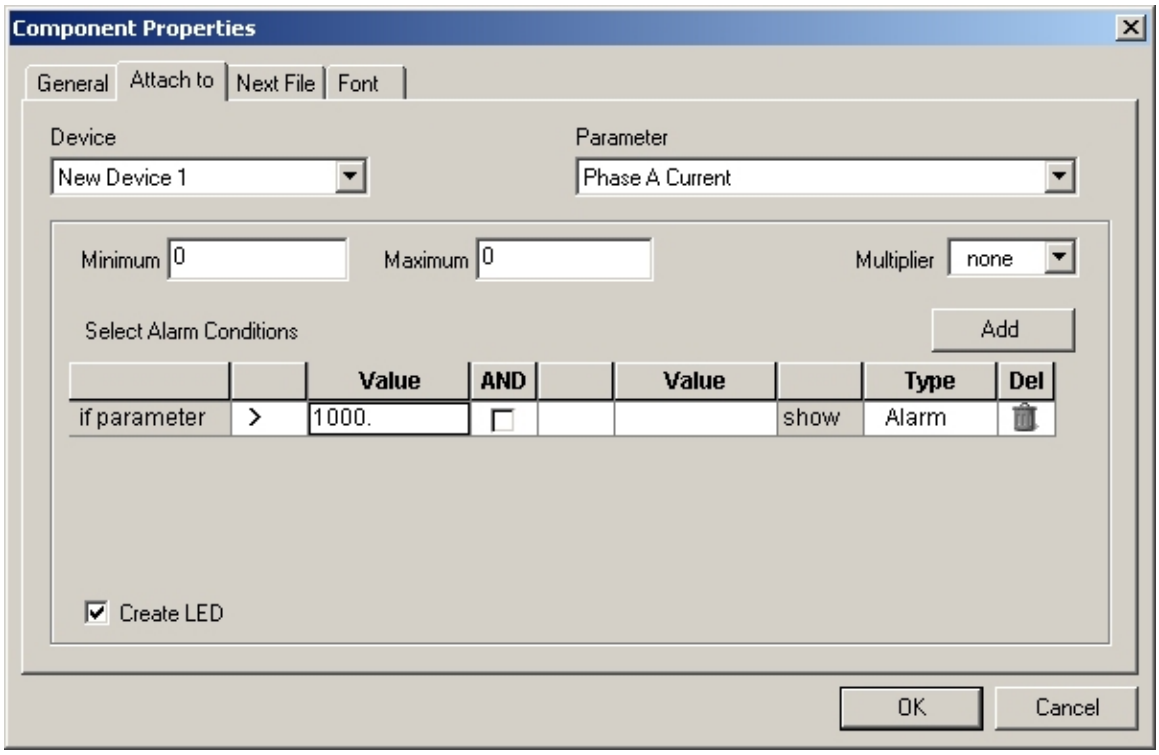

LED Type - Digital

Select the LED icon from the toolbar and choose ‘Digital’ from the LED types.

Edit the Digital LEDs properties to attach the LED to a device and a digital parameter.

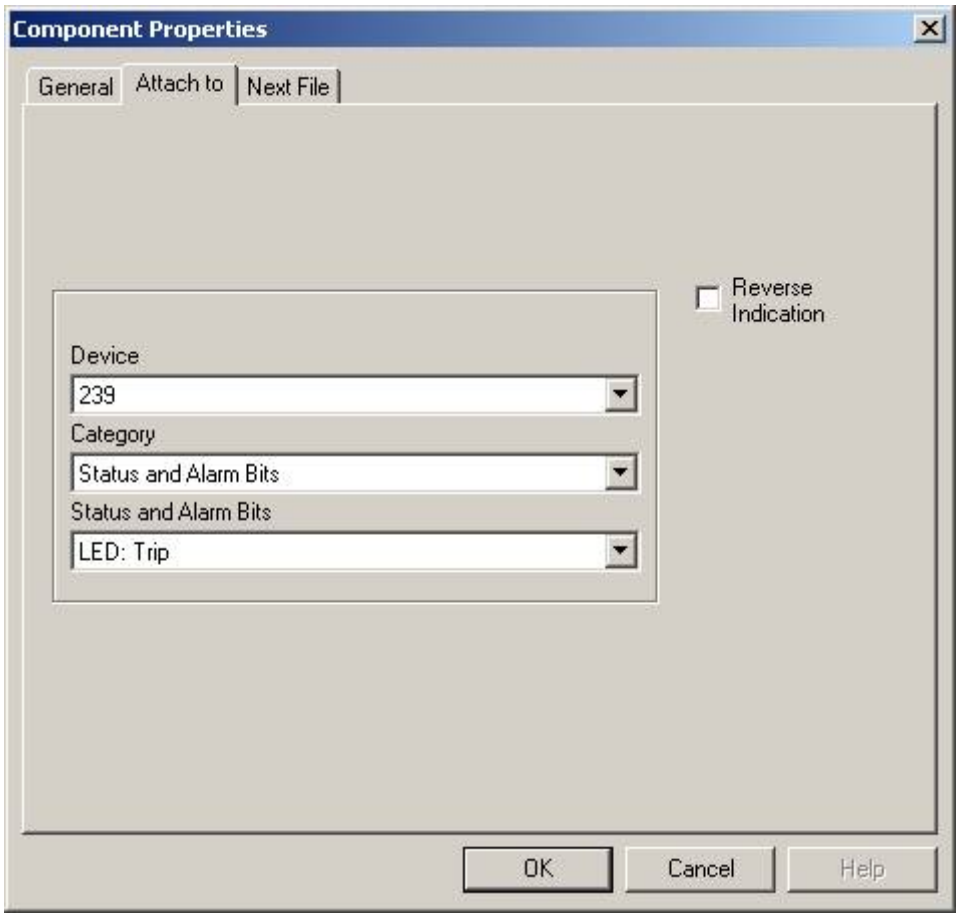

The Digital LED shows the current state of device’s digital parameter (0 or 1). The LED can also be configured to become active when the digital parameter has a value of 0 by selecting the ‘Reverse Indication’ checkbox.

You can select a Digital LED to be one of three LED types.

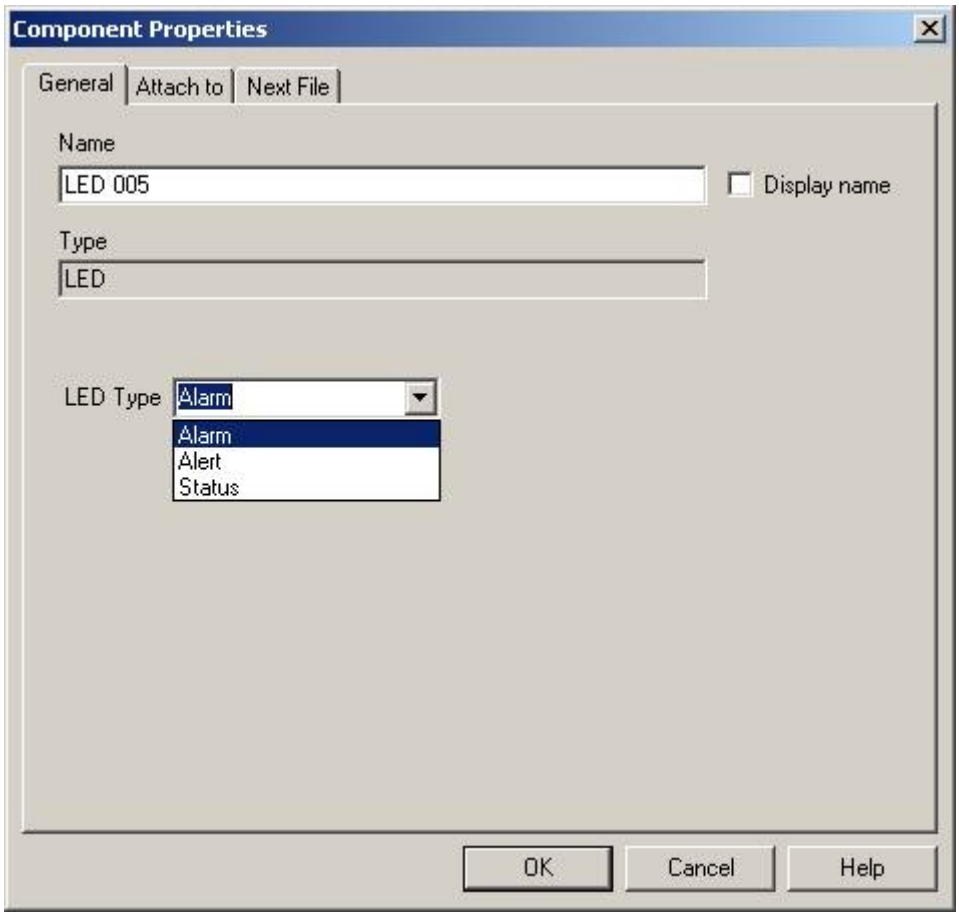

When viewing a schema the color of the digital LED can be any one of the five states listed below.

	Unknown	Communication failure or configuration problem
	Normal	LED is in normal condition
	Status	Lowest priority
	Alert	Medium priority
	Alarm	Highest priority

LED Logic

When an LED has a condition that becomes active, the LED will start flashing the color associated with the LED type: Red for Alarm, Yellow for Alert. If an LED is configured as type 'Status', it does not have to be acknowledged and will not flash while in an active condition.

Once an LED changes state and goes from a solid green color to a flashing red/yellow color a sound file will be continuously played until either the 'Acknowledge' button is pressed or the 'Mute' is enabled.

The Acknowledge button is located on the top toolbar and to the far right of the screen when a schema is opened in Viewer. Initially, the Acknowledge button is disabled. The Acknowledge button becomes enabled when an LED changes state (flashing).

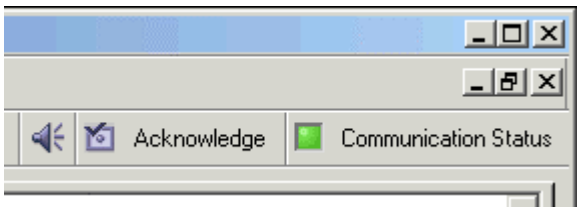

The function of the Acknowledge button is to:

1. Silence the Alarm, Alert, Status and Reset sounds.
2. Change a flashing Red/Yellow LED to either a solid Red/Yellow or to a flashing green.
3. Reset a flashing green LED back to it's solid green default state.

When there are LEDs flashing an active condition, the 'Acknowledge' button will become available so that the operator can acknowledge the presence of the conditions. Acknowledgement of the active conditions will stop the sound from playing and cause the active LEDs to stop flashing and change to a solid red/yellow color.

When the acknowledged LED returns to a normal condition, the color of the LED will change from a solid red/yellow to a flashing green and the 'Reset' sound file will be played continuously.

The flashing green indicates to the operator that there was an LED with an acknowledged condition that changed back to a normal condition. The flashing green state now needs to be acknowledged again. Acknowledging the flashing green LED will stop the sound. The operator can now press the 'Acknowledge' button to reset the flashing green LEDs to a solid green state.

Sounds

Sounds serve to alert the attention of the user when an LED state changes in one of the opened Schemas in the One-Line Viewer. Reset, Alert, and Alarm sounds are defined in the user preferences menu. User can reset these default sounds to any '.wav' files.

HyperLinking

Follow the steps below if you wish to link several schema drawings together so that a user can navigate between them when they are viewing the schema(s) in the **One-Line Viewer.** .

1. Make sure you have at least two schema files already created, that you wish to link together.

2. Open one of the schemas where you want to place a hotspot or link to the other schema(s).

3. On the LINKS toolbar

, click on the Hotspot button

4. Now click anywhere on your current schema to place a hotspot button there. You can add more than one if you have more than one other schema to link to your current schema drawing.

5. Now either double-click on the hotspot or right click on it and choose properties to bring up the HOTSPOT PROPERTIES box.

6. Click on the [Hyper Link] tab.

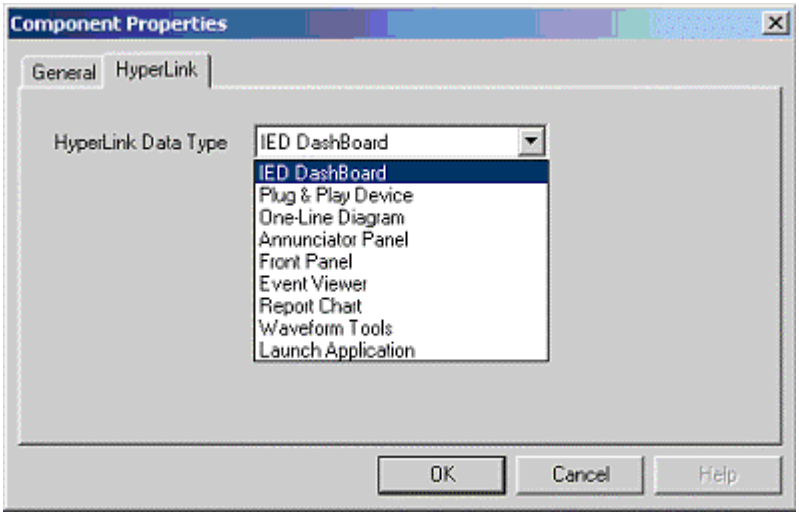

HyperLink Data Type: A dropdown list is provided to allow the user to select the Data Type and then if required, allow the user to select a file or a device. And then based on the Data Type determine if there is additional information required from the user.

- IED Dashboard
- Plug & Play Device
- One-Line Diagram
- Annunciator Panel
- Front Panel
- Events Viewer
- Report Chart
- Waveform Tools
- Launch Application

IED Dashboard

Editor

After selecting 'IED Dashboard' for the Data Type, no additional information is required since there is only a single dashboard available.

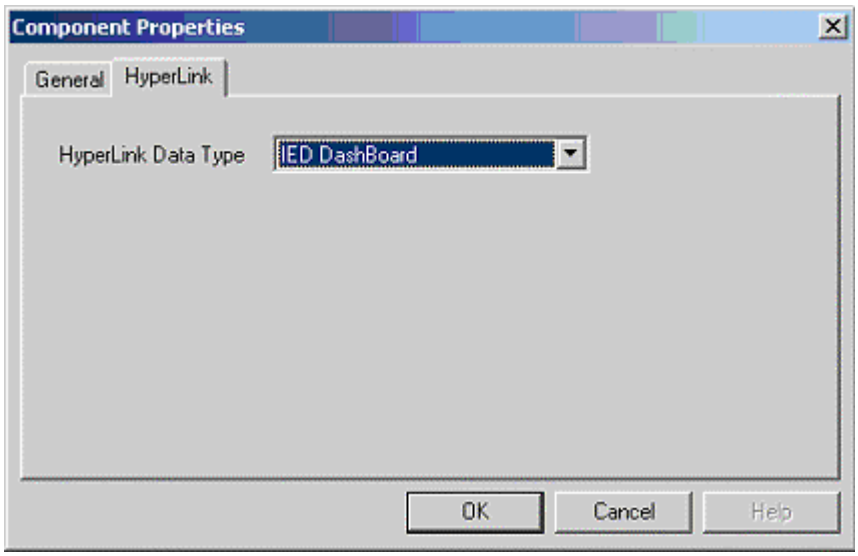

Viewer

When the user clicks/selects the HyperLink object, open up the IED Dashboard in a new Viewer. If the IED Dashboard is already opened, bring the IED Dashboard to the front.

Plug & Play Device

Editor

After selecting 'Plug & Play Device' for the Data Type, the user must then select a device from a list of Available Devices. This list contains all devices that are supported by and contained within the IED Dashboard.

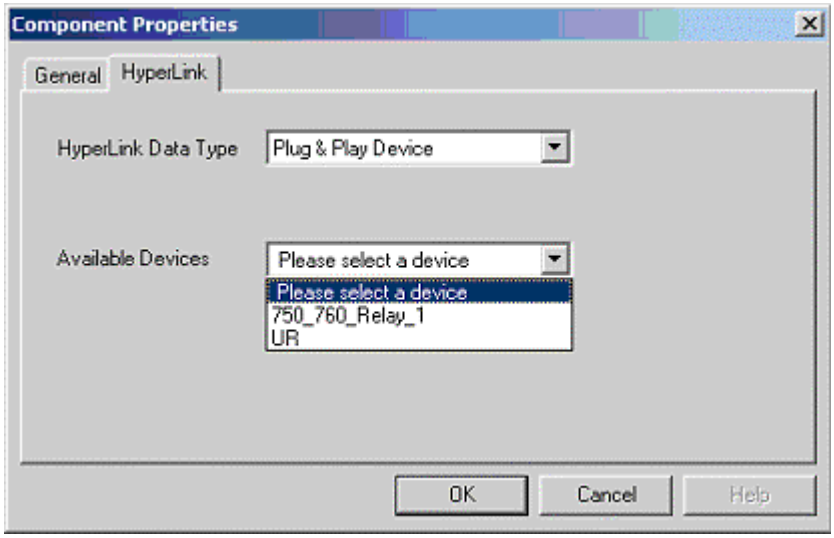

Viewer

When the user clicks/selects the HyperLink object, launch the Overview Plug & Play screen for an available device in a new Viewer. If the selected device's Plug & Play is already opened, bring the Plug & Play screen to the front.

One-Line Diagram

Editor

After selecting 'One-Line Diagram' for the Data Type, the user can either enter in the filename or select the file from a standard File Dialog. The File Dialog will filter for files with the SF extension.

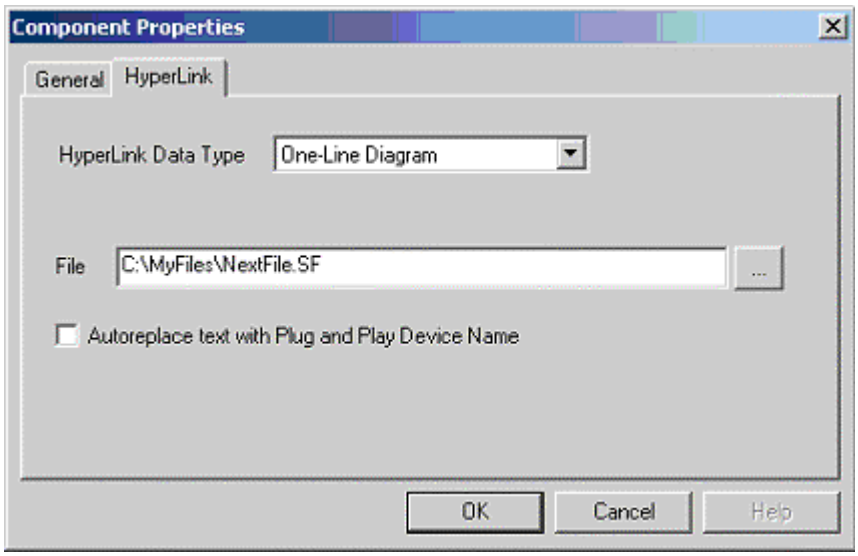

Viewer

When the user clicks/selects the HyperLink object, open up a One-Line Diagram in a new Viewer. If the SF file is already opened, bring the SF file to the front.

Annunciator Panel

Editor

After selecting 'Annunciator Panel' for the Data Type, the user can either enter in the filename or select the file from a standard File Dialog. The File Dialog will filter for files with the AP extension.

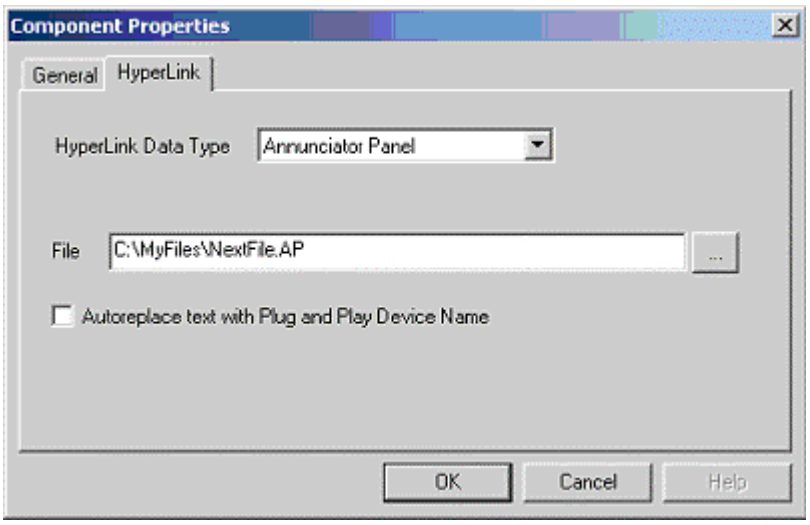

Viewer

When the user clicks/selects the HyperLink object, open up an Annunciator Panel in a new Viewer. If the AP file is already opened, bring the AP file to the front.

Front Panel

Editor

After selecting 'Front Panel' for the Data Type, the user must then select a device from a list of Available Devices. This list contains all devices that have a front panel available for the device.

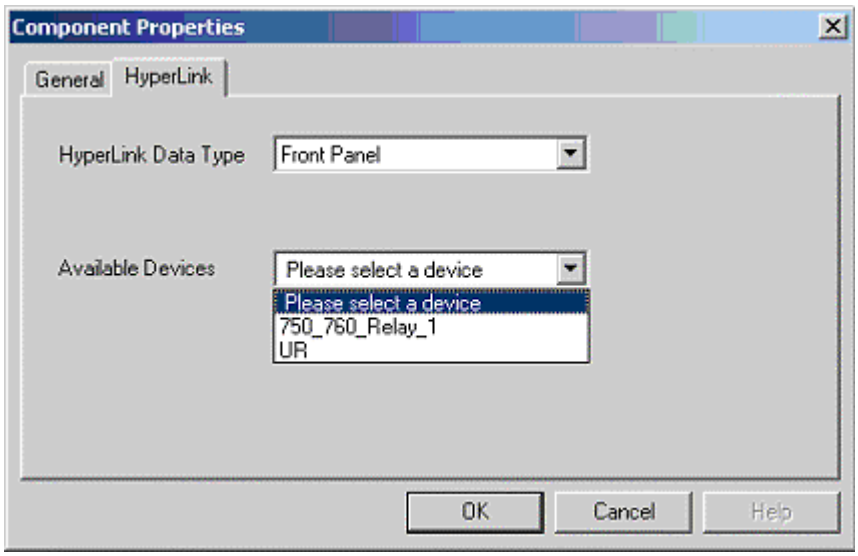

Viewer

When the user clicks/selects the HyperLink object, open the Front panel for a selected device. If the device's front panel is already opened, bring the front panel to the front.

Events Viewer

Editor

After selecting 'Events Viewer' for the Data Type, no additional information is required since there are no associated devices or files.

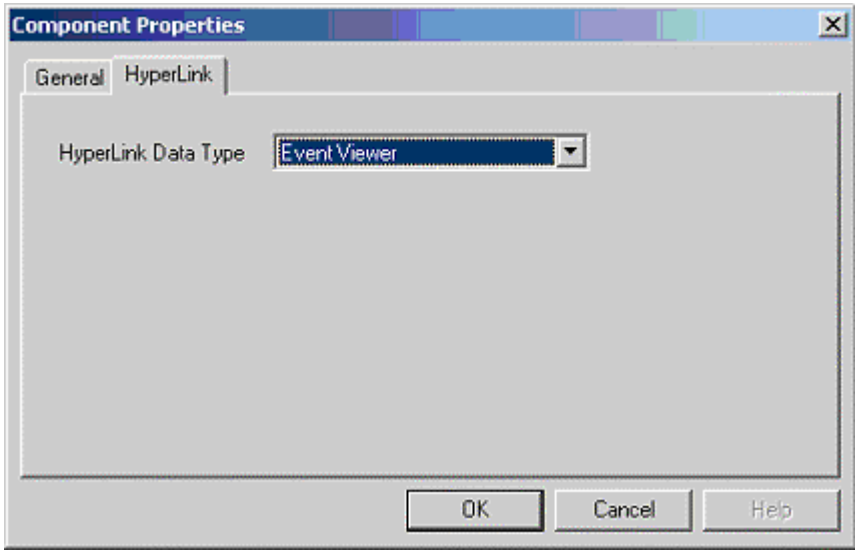

Viewer

When the user clicks/selects the HyperLink object, launch the Events Viewer application. If the Events Viewer application is already opened, bring the application to the front.

Report Chart

Editor

After selecting 'Report Chart' for the Data Type, the user must then select a chart from a list of Available Charts. This list contains all the charts from all of the current configured reports.

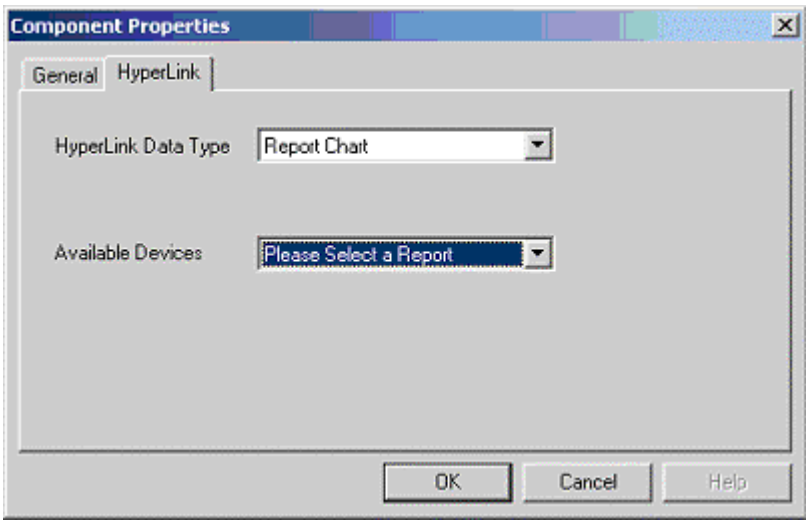

Viewer

When the user clicks/selects the HyperLink object, open the selected chart. If the chart is already opened, bring the chart to the front.

Waveform Tools

Editor

After selecting 'Waveform Tools' for the Data Type, no additional information is required since there are no associated devices or files.

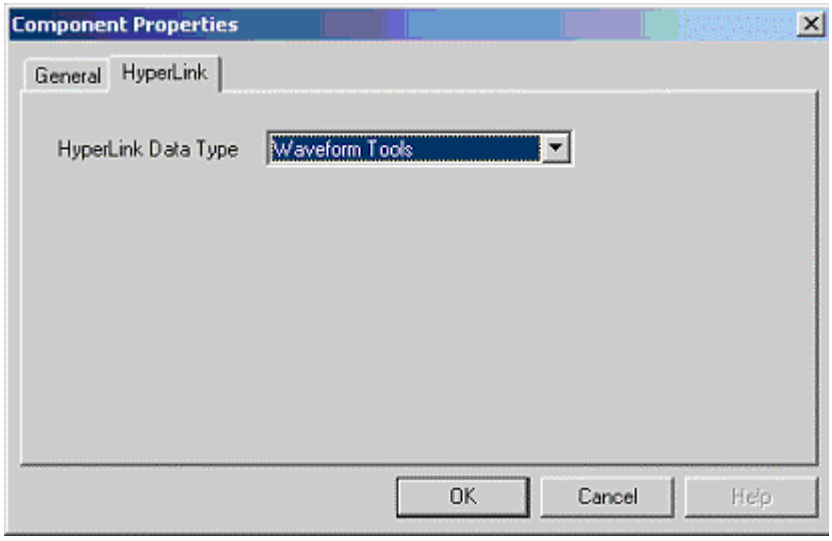

Viewer

When the user clicks/selects the HyperLink object, open up the COMTRADE dialog.

Launch Application

Editor

After selecting 'Launch Application' for the Data Type, the user can either enter in the filename or select the file from a standard File Dialog. The File Dialog will filter for files with the EXE extension.

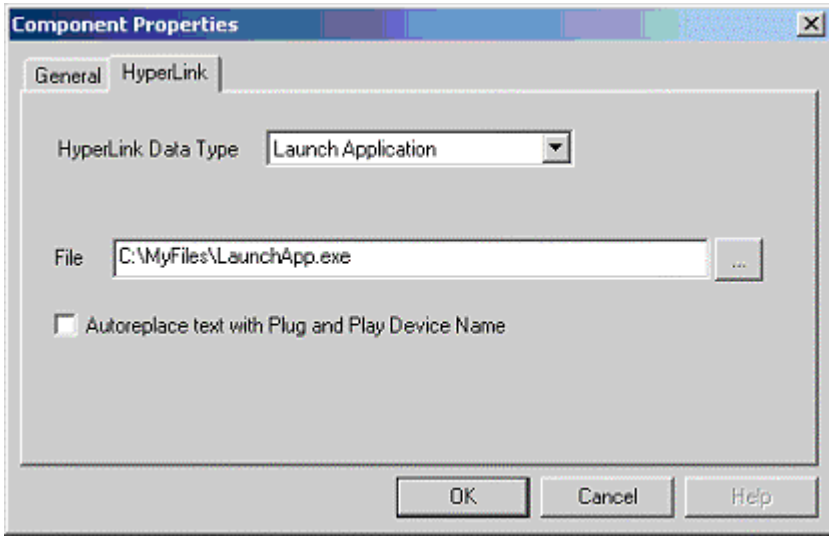

Viewer

When the user clicks/selects the HyperLink object, launch the selected application. If the application has already been launched, bring the application to the front.

How to use One Shot Test

You can use the One Shot Test command in the One-Line Editor to see a one-time, actual value update for all digitals and analog components that have connected and configured in your current schema.

Follow these steps to use the One Shot Test function:

1. Make sure you can see the One-Line Editor toolbar on your screen. To display it, click on **[VIEW]** > **[TOOLBAR]** > **[One-Line Editor]** to make the toolbar viewable.

2. Click on the One Shot Test button

Any readings or values for any of your measurable components will be now be cleared and within a 5-15 second period, new values will show up showing you the current reading for those connected and configured devices.

Modifying Properties of a Component

There are two methods of modifying the properties of a selected component.

METHOD 1

- Double-click on the component and the COMPONENT PROPERTIES box will pop up.
- Edit the properties of the component.
- Click on [OK] to save your changes.

METHOD 2

- Right-click on the component
- Select [Properties]
- the COMPONENT PROPERTIES box will pop up.
- Edit the properties of the component.
- Click on [OK] to save your changes.

Saving Schemas

To save the current schema that you are working on, click on the Save button or Save As button on the One-Line Editor toolbar

Simultaneously Editing and Viewing the Same Schema

When editing a schema, should you decide to view the schema in the One-Line Viewer at the same time (so that you can view your changes in real-time), all you have to do is the following:

1. While in the One-Line Editor, click on the [TOOLS] menu bar and then click on [One-Line Viewer] to open up the EnerVista VIEWPOINT One-Line Viewer

2. Within the One-Line Viewer, open the same schema file that you are currently editing in the One-Line Editor.

3. You can now switch between the Editor and Viewer by the tabs on the bottom of the screen. The tab with the letter "E" enclosed in a box is the Editor and the tab with the blinking indicator is the Viewer.

As you switch back and forth between Editor and Viewer, EnerVista VIEWPOINT will ask if you want to save your changes.

Sample Screen

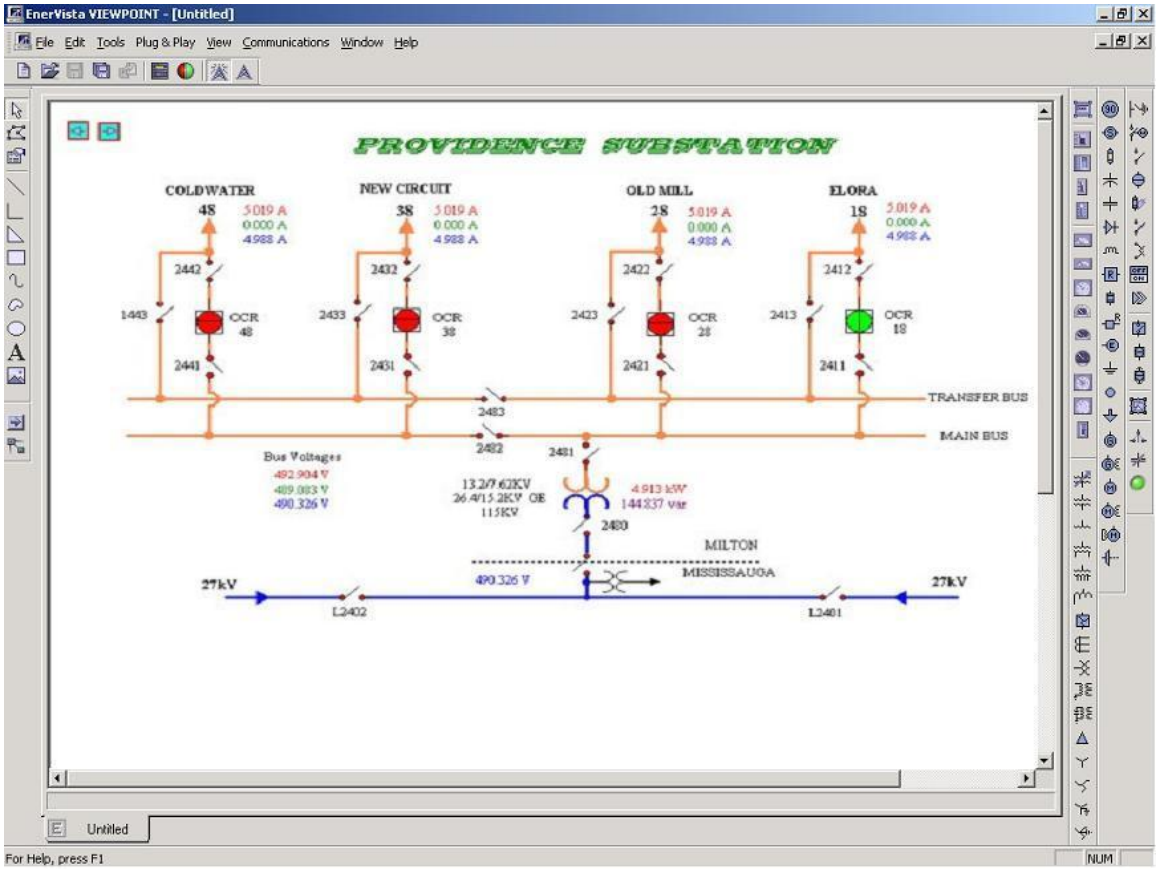

Here's the schema "PROVIDENCE" in the One-Line Editor. Note we can easily switch to the Viewer to view this schema by clicking on the tab PROVIDENCE with the blinking editor

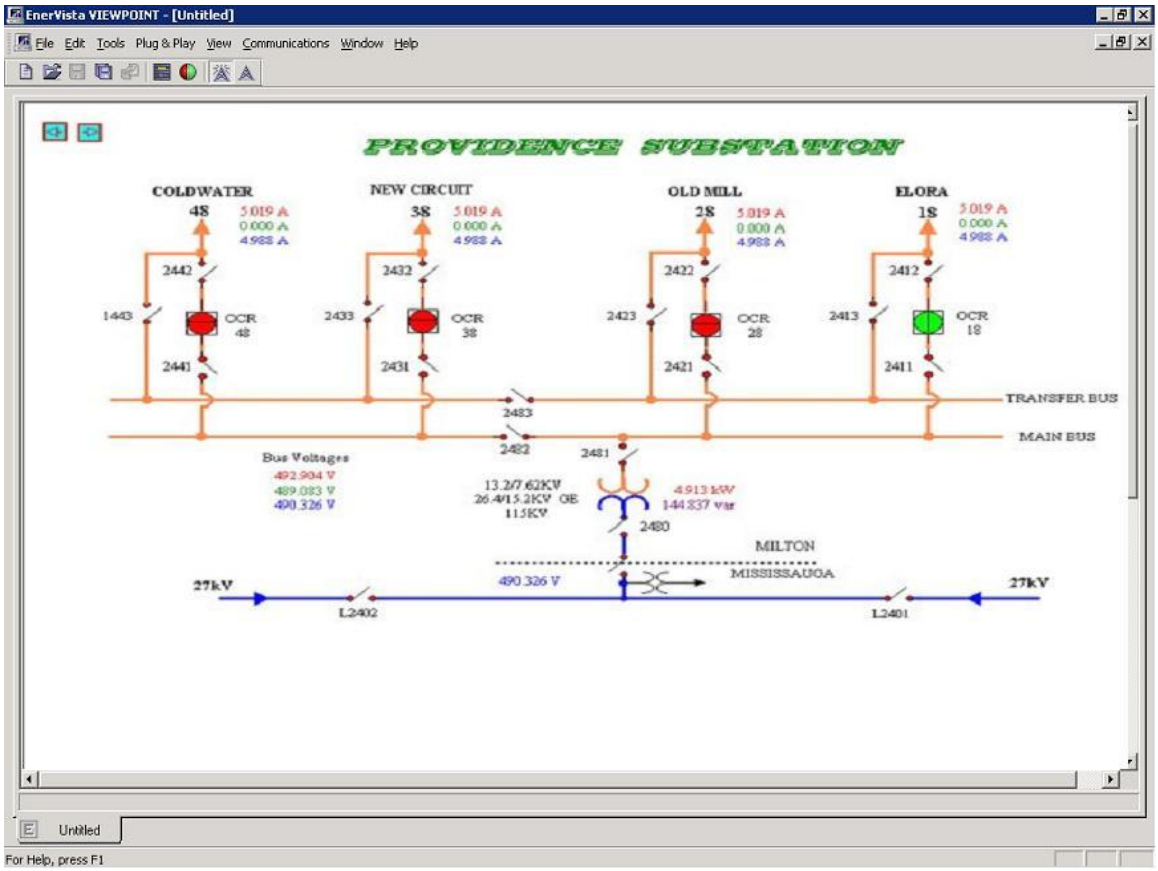

Here's the schema "PROVIDENCE" in the One-Line Viewer. Note we can easily switch to the Editor to edit this schema by clicking on the tab PROVIDENCE with the boxed "E"

System Viewer

Introduction to One-Line Viewer

The One-Line Viewer tool is used to view and provide control to your remote sites and their corresponding devices through graphical one-line diagrams created with the One-Line Editor tool. Upon accessing the One-Line Viewer screen from the EnerVista VIEWPOINT main menu, the following screen will appear.

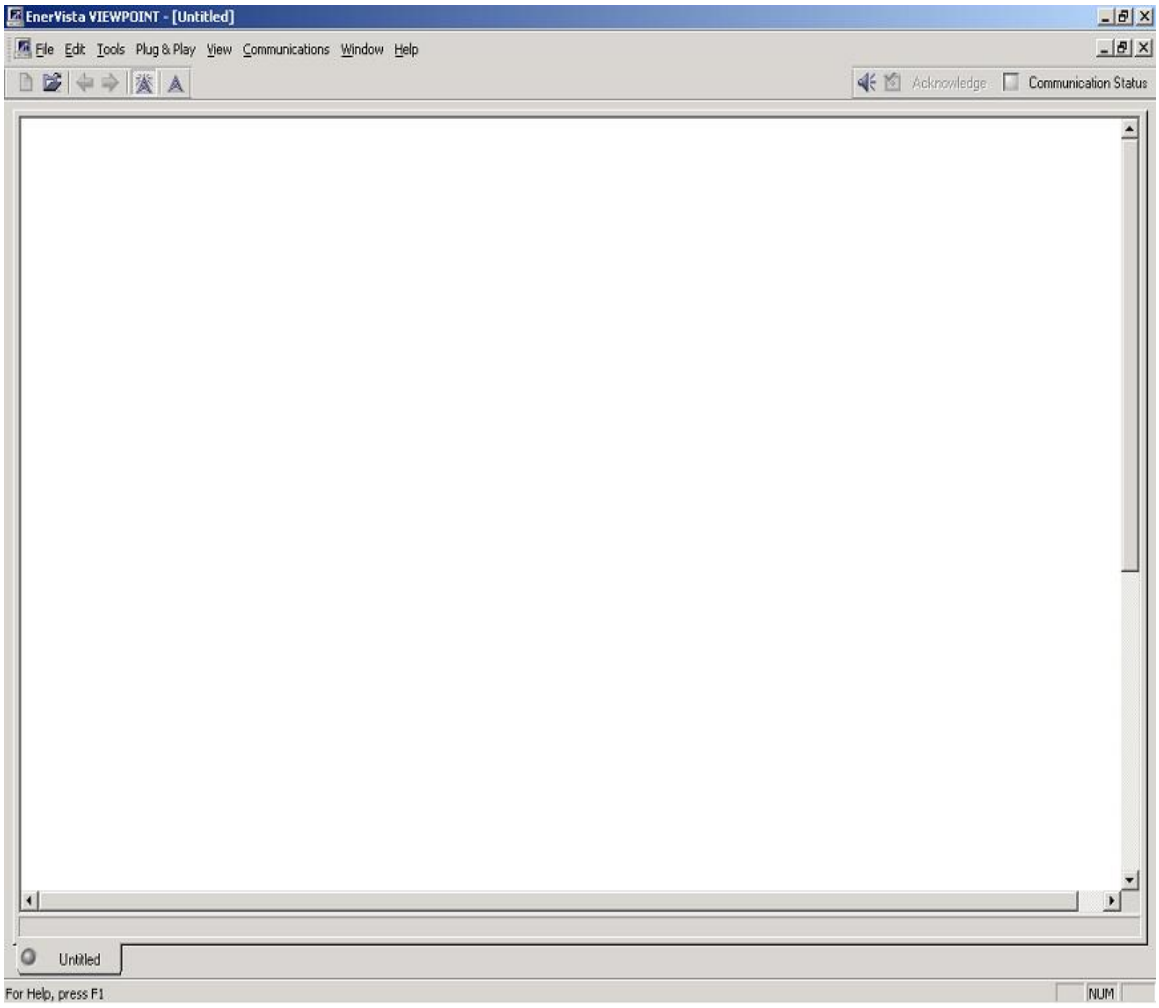

One-Line Viewer Toolbar

By default, once you enter the One-Line Viewer Tool, you will see a toolbar at the top of the screen. In terms of the One-Line Viewer, the following buttons and their functionality are available.

	Open File	Open an EnerVista VIEWPOINT schema file (.sf).
	Left arrow	Jumps backward to previous schema (only available for schemas that contain links).
	Right arrow	Jumps forward to next schema (only available for schemas that contain links).
	Reconnect Devices	In the event that at least one device loses communication (ie: due to a possible bad network connection), EnerVista VIEWPOINT will attempt to automatically reconnect 3 times within a span of approximately 2 minutes. If a connection cannot be re-established, you can press this button to force EnerVista VIEWPOINT to try to reconnect to all non-communicating devices for another 3 attempts each.
	Master Connect On	Allows for but does NOT initiate connections to devices.
	Master Connect Off	Disconnects all connected devices.

Opening / Loading a Schema File

There are two ways to open a EnerVista VIEWPOINT schema (.sf) files:

Method #1

1. Click on the icon in the toolbar
2. Browse or Specify where to find the scheme file
3. Click [OK] when done.

Your schema file should now be viewable on screen.

Method #2

1. Click on the [FILE] button on the menu bar
2. Click on the [OPEN] button in the dropdown menu.
3. Browse or Specify where to find the scheme file
4. Click [OK] when done.

Your schema file should now be viewable on screen.

Equipment and Switchgear Indication

When viewing schemas created with the One-Line Editor, you can manually convert non-connected, digital components to their other state (ex: from switch ON to switch OFF) by following these steps.

1. Select the digital component to be switched by clicking on it once. The following prompt should appear:

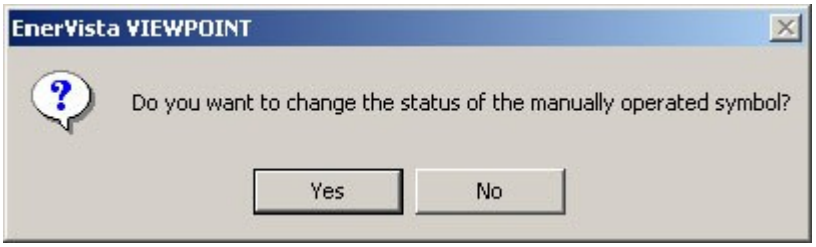

2. Click the [YES] button to confirm

The digital component that you have selected should now be switched to the opposite state.

Equipment and Switchgear Control

When viewing schemas in the One-Line Viewer, you can toggle the state of a correctly configured and connected digital components (ie: from switch ON to switch OFF or vice-versa) by following these steps.

1. Select the digital component to be toggled. A prompt similar to this should appear:

2. Control requires a two-handed approach. This means you must use both hands to issue the control command. In EnerVista VIEWPOINT, you must hold down the Control key and simultaneously press the button with the state you wish the component to be in (in this case CLOSE or OPEN). If you just click the button without pressing the Control key, nothing will happen. Similarly, if the state of the item being controlled is already set (ie. you send an OPEN command when the state is already OPEN), nothing will happen.

The digital component that you have selected should now be switched to the desired state.

LED Indicator Colours

Explanation behind the colour indicators in the Device Status Window:

Every Device has a coloured indicator associated with it that can be one of 4 colours. The following chart explains the meaning behind each of the states of the indicator which are ordered from highest to lowest priority:

Red	At least one correctly configured Device is not communicating.
Yellow	All correctly configured devices are communicating but at least one analog or digital device on the schema is incorrectly configured.
Green	All devices are communicating and configured correctly.
Gray	Either no analog or digital device exist on the schema or they are ALL incorrectly configured.

Screen Capturing in One-Line Viewer

Within the One-Line Viewer tool, follow these steps to take a screen shot of your current schema to be placed in your window's clipboard.

1. Click on **[Edit]** button on the menu bar

2. Select Screen Capture

A copy of your screen has now been copied to your window's clipboard. You can paste this in another document that supports 'cut and pasting'.

Device Status

Device Status Window

Introduction

The device status window is a floating, hierarchical menu driven interface that allows you to view the status and values of your connected devices. It is accessed via the "Communication Status" button located on the right side of the top toolbar in the One-Line Viewer. Only one “Device Status” window can be open for one schema drawing (.sf file). If you have multiple schemas opened, you can have the same number of Device Status windows open.

Here is a sample screen shot of what the Device Status Window looks like:

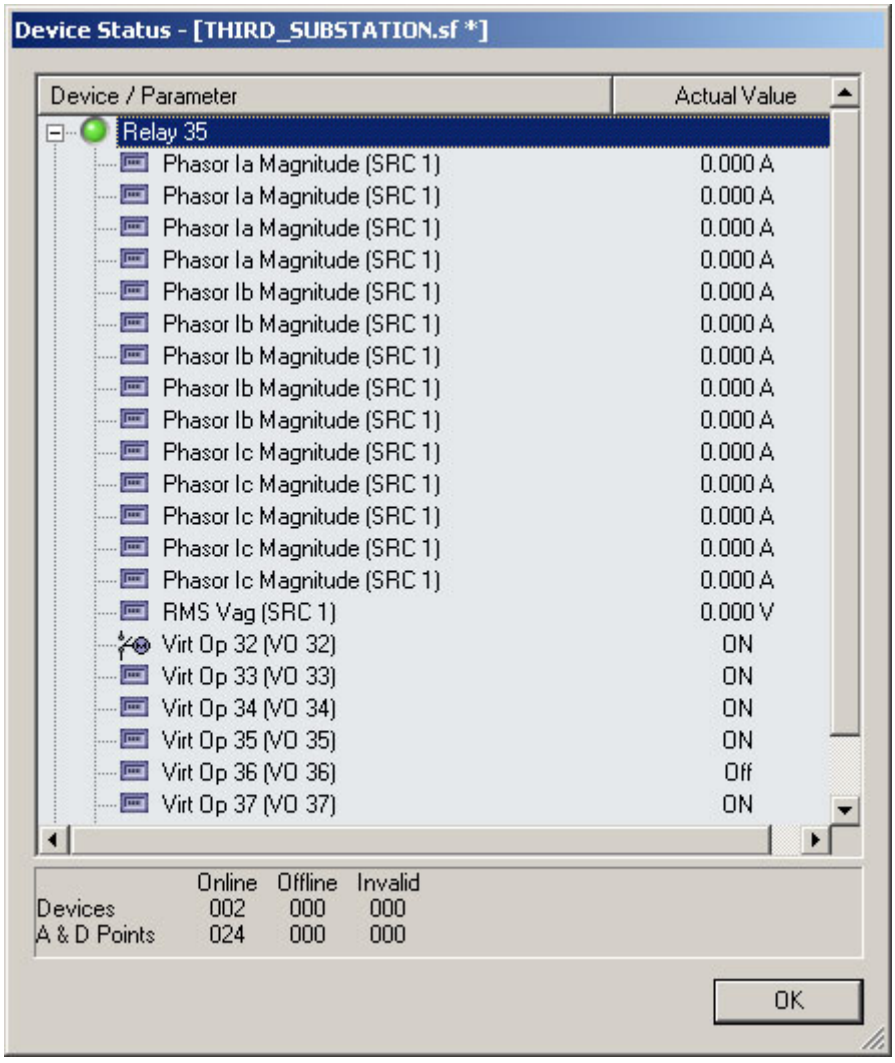
Device Status - [THIRD_SUBSTATION.sf *]
Device / Parameter
Actual Value
Relay 35
Phasor Ia Magnitude (SRC 1) 0.000 A
Phasor Ia Magnitude (SRC 1) 0.000 A
Phasor Ia Magnitude (SRC 1) 0.000 A
Phasor Ia Magnitude (SRC 1) 0.000 A
Phasor Ib Magnitude (SRC 1) 0.000 A
Phasor Ib Magnitude (SRC 1) 0.000 A
Phasor Ib Magnitude (SRC 1) 0.000 A
Phasor Ib Magnitude (SRC 1) 0.000 A
Phasor Ib Magnitude (SRC 1) 0.000 A
Phasor Ic Magnitude (SRC 1) 0.000 A
Phasor Ic Magnitude (SRC 1) 0.000 A
Phasor Ic Magnitude (SRC 1) 0.000 A
Phasor Ic Magnitude (SRC 1) 0.000 A
Phasor Ic Magnitude (SRC 1) 0.000 A
RMS Vag (SRC 1) 0.000 V
Virt Op 32 (VO 32) ON
Virt Op 33 (VO 33) ON
Virt Op 34 (VO 34) ON
Virt Op 35 (VO 35) ON
Virt Op 36 (VO 36) Off
Virt Op 37 (VO 37) ON
Online Offline Invalid
Devices 002 000 000
A & D Points 024 000 000
OK

As you can see, the Device Status window consists of two major areas. The **Device/Parameter Monitoring List** (top section) and the **Device/Parameter Summary** (bottom section)

Device/Parameter Monitoring List

This section contains a list of all connected Devices, their respective Parameters and also their corresponding values (which are updated every few seconds). The window is conveniently split up into two columns: “Device/Parameter” (which lists Devices and associated Parameters) and “Actual Value” (which shows the status or reading of the Parameter to the left of it).

To begin viewing readings, follow these steps:

1. Select the Device which contains the Parameter(s) you wish to view by double clicking on it or clicking on it’s associated [+] button
2. You are now able to view all the Parameters and their associated reading for this device.

Explanation behind the colour indicators:
Every Device has a **coloured indicator** associated which can be one of 4 colours. The following chart explains the meaning behind each of the states of the indicator which are ordered from highest to lowest priority:

	Red	At least one correctly configured Device is not communicating.
	Yellow	All correctly configured devices are communicating but at least one analog or digital device on the schema is incorrectly configured.
	Green	All devices are communicating and configured correctly.
	Gray	Either no analog or digital device exist on the schema or they are ALL incorrectly configured.

Device/Parameter Summary

This section contains a brief overview of all Devices and A&D (Analog and Digital) Points being monitored in the currently loaded schema. There are three column headings which are used to describe the status of the your connected Device/Parameters:

- **Online** – Device is connected properly and readings are being updated by EnerVista VIEWPOINT on a real-time basis

- **Offline** – Device is not connected properly. No readings are being read by EnerVista VIEWPOINT. Note if you want to attempt to reconnect all Parameters of a device, right click on the Device and select “Connect Device”.

- **Invalid** – Device/Parameter is not configured properly according to current schema settings.

To quickly locate a parameter on the schema

Double click the desired Parameter in the Device/Parameter Monitoring List and the corresponding Parameter will be highlighted in the schema.

Understanding Online, Offline and Invalid Status

In the Device/Parameter Summary section, a brief overview of all Devices and A&D (Analog and Digital) Points being monitored in the currently loaded schema are shown. There are three column headings which are used to describe the status of the your connected Device/Parameters:

- **Online** – Device is connected properly and readings are being updated by EnerVista VIEWPOINT on a real-time basis

- **Offline** – Device is not connected properly. No readings are being read by EnerVista VIEWPOINT. Note if you want to attempt to reconnect all Parameters of a device, right click on the Device and select “Connect Device”.

- **Invalid** – Device/Parameter is not configured properly according to current schema settings.

What is an Unassigned Device ?

An Unassigned Device is a device component created in the One-Line Editor that has not been assigned/connected to a real device yet (ie: the component is not reading values or states from a connected device).

Annunciator

Introduction to Annunciator

The Annunciator tool is used to create and view visual dashboards or alarm status screens so that an operator can monitor and acknowledge the status of their remote Sites and Devices all on one convenient screen. Upon accessing the Annunciator screen from the EnerVista VIEWPOINT main menu, the following screen will appear.

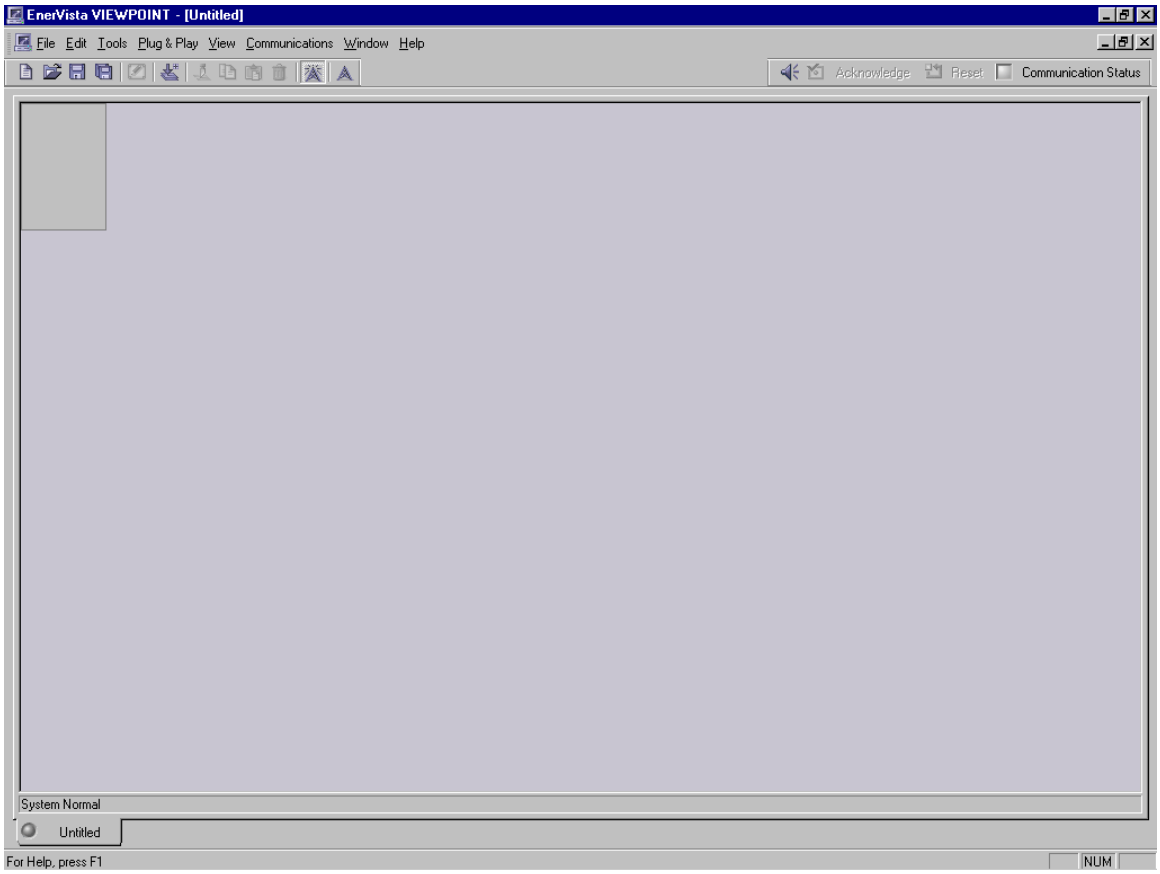

Annunciator Toolbar

The Annunciator contains an assortment of tools used to perform File Management (save, open, etc.), Alarm/Alert Acknowledgement and Configuring of Indicators. Here are the following tools specific to this toolbar and their function.

	New	Create a new annunciator panel file (.ap).
	Open	Open/Load an existing annunciator panel file (.ap).
	Save	Save current .ap file with existing filename. If a filename has not been specified, EnerVista VIEWPOINT will prompt you to name it now.
	Save As	Save current .ap file with a new filename.
	Edit	Edit current Indicator Settings and Configuration.
	Insert Indicator	Insert a new Indicator panel which can later be configured to monitor Device Settings.
	Cut	Copy and remove the current selected Indicator and place it in your Windows clipboard.
	Copy	Copy the current selected Indicator and place it in your Windows clipboard.
	Paste	Paste the current selected Indicator that is in your Windows clipboard.
	Erase	Delete the current selected Indicator.
	Reconnect Devices	In case of your Indicators not being able to communicate to their respected Devices. Clicking on this button will result in EnerVista VIEWPOINT trying to reconnect to those Devices.

	Master Connect On	Allows for but does NOT initiate connections to devices.
	Master Connect Off	Disconnects all connected devices.
	Mute Sound	Allows the user to turn the sound on and off.
	Acknowledge	Acknowledge all Indicator whose alarms have been triggered. The Indicators will go from a blinking colour to a solid colour.
	Reset	Reset all Indicators whose alarms have been triggered and Acknowledged. The Indicators will go from a solid colour, back to a grey colour.
	Communication Status	Displays the Device Status window for the corresponding schema. The Device Status window allows the user to view the status and values of your connected devices in the schema.

Indicators

Inserting an Indicator into the Annunciator Panel

To insert a new Indicator into the Annunciator Panel, follow the steps below:

1. Right-click anywhere in either an empty rectangle space or on an already existing Indicator in the INDICATOR VIEWING AREA.

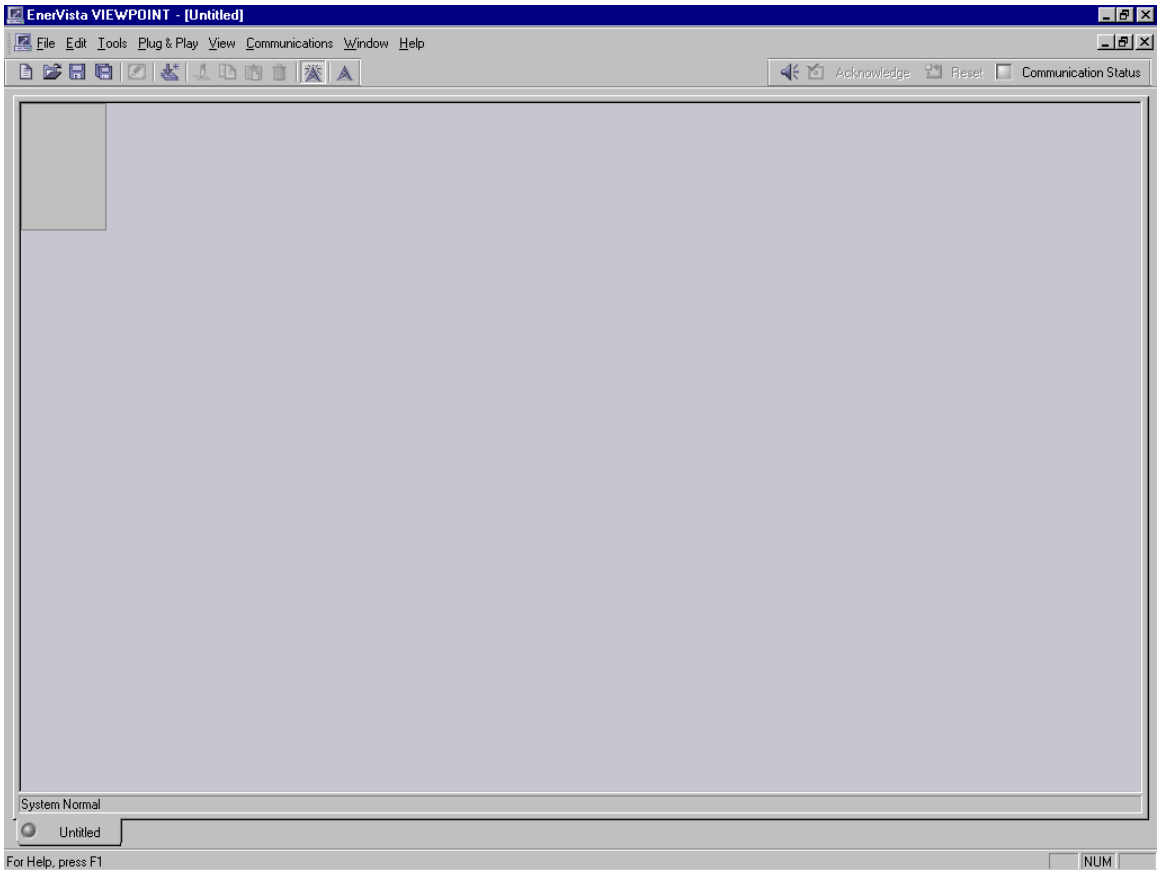

Should you have no Configured Indicators yet, just right click on one of the empty rectangle areas to add a new Indicator

2. Select [INSERT] in the drop-down menu. A new Indicator should now appear.

* - Note, you can also click on the Insert Indicator button to perform the same function as Step #1 and #2.

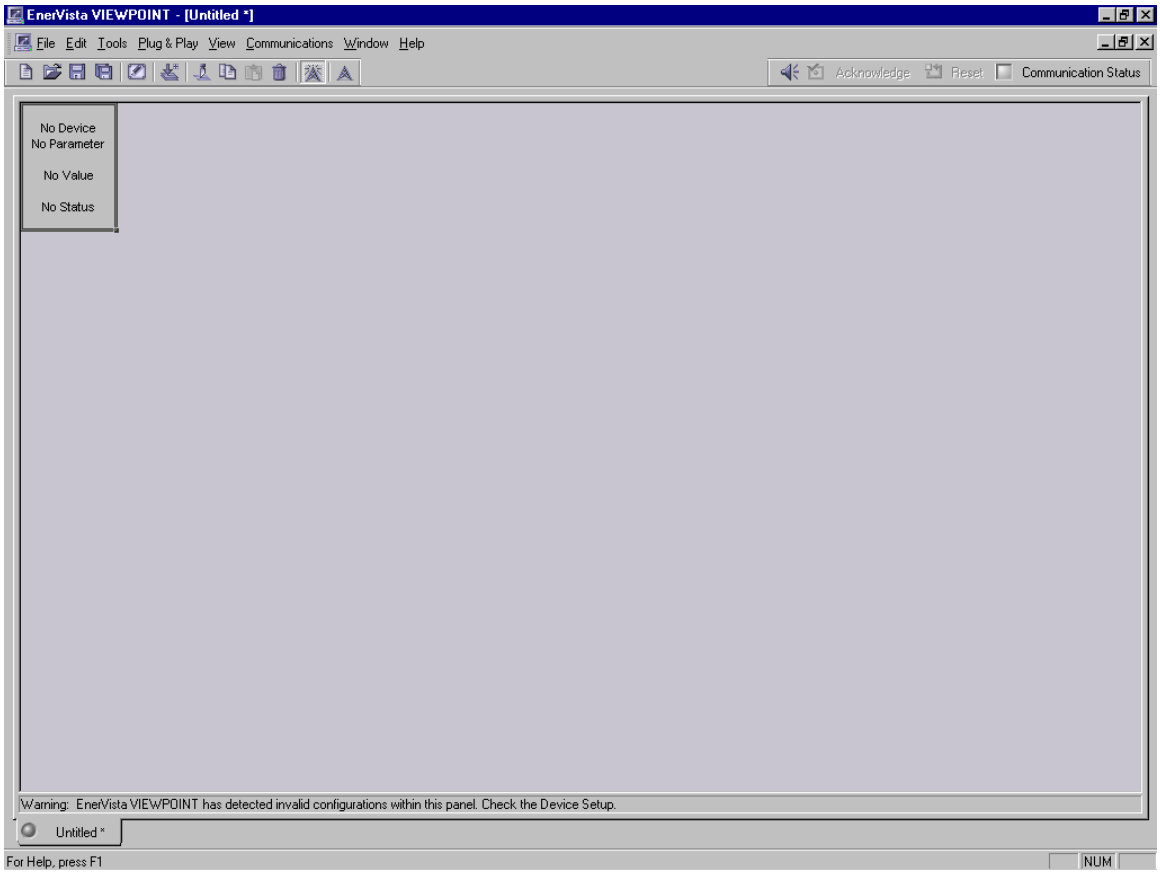

Please note, that this Indicator is not configure yet. You will have to **Configure it to a Device** before it will begin monitoring.

Each Annunciator Panel can have a maximum of 100 Indicators.

Configuring / Editing an Indicator to a Device

To configure or edit an Indicator's properties to a Device, follow these steps:

1. Either right click on the Indicator that you wish to Configure/Edit and select the [PROPERTIES] option in the dropdown menu

OR

select the Indicator you wish to edit and click on the Edit button on the toolbar. The following properties box should now appear:

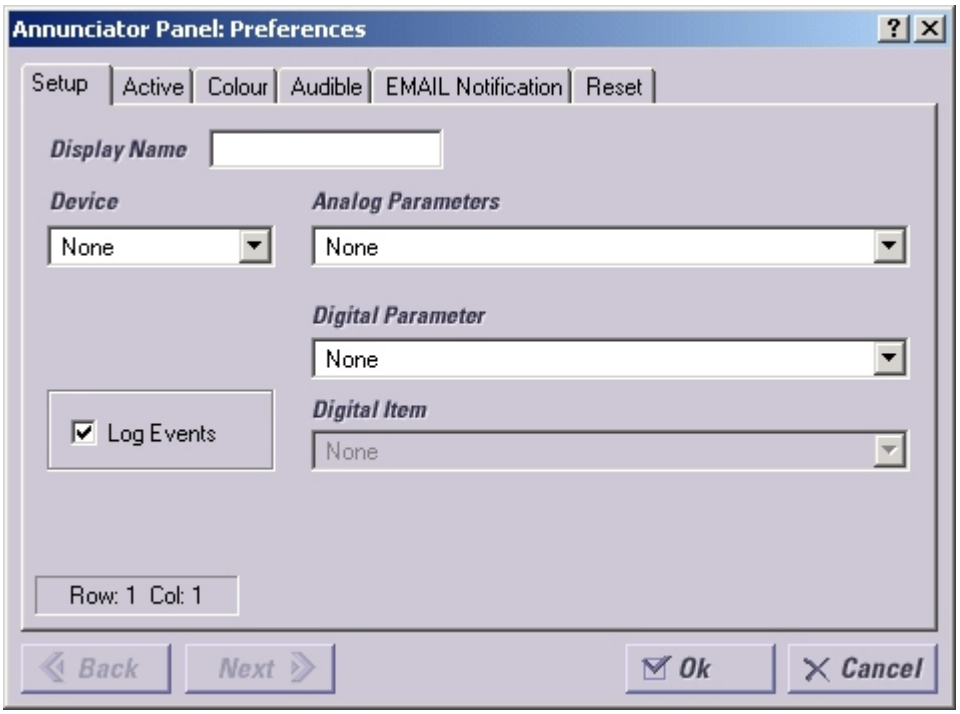

2. **GENERAL SETUP**

To begin. Within the [SETUP] tab, fill in the following information:

- Display Name
- Select the Device to attach this Indicator to
- Select either the Analog Parameter **or** the Digital Parameter to monitor. Note you cannot have both configured. It's either one or the other. If you have selected a Digital Value, please select a Digital Time as well.
- Select whether or not you want to Log Events by clicking on the respective check box.

* Note: The Row and Column number tell you where on your annunciator panel screen this Indicator resides on.

You have now connected an Indicator to a Parameter of a Device.

Configuring / Editing the Active State Properties of an Indicator

To configure or edit an Indicator's ACTIVE/ALARM STATE PROPERTIES, follow the steps below:

1. Either right-click on the Indicator that you wish to Configure/Edit and select the **[PROPERTIES]** option off the drop down menu

OR

Select the Indicator you wish to edit and click on the Edit button on the toolbar. The following properties box should now appear:

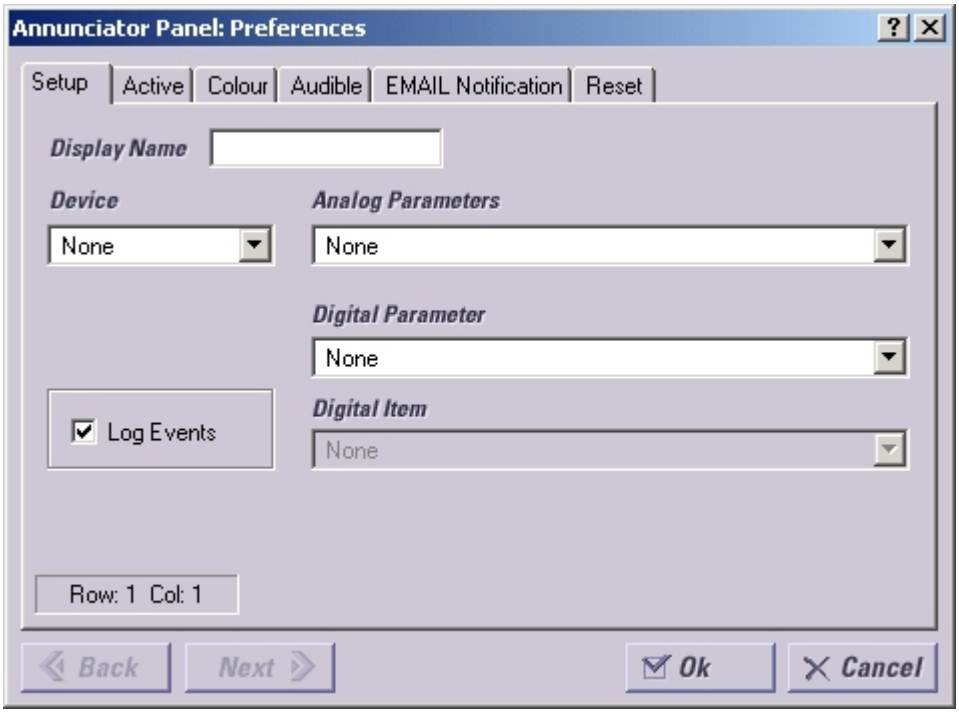

The **SETUP** tab contains the following settings:

- **Display name** - The name of the indicator.
- **Device** - The device to which the indicator will trigger from.
- **Analog Parameters** - The Analog parameter to use as the Alarm trigger.
- **Digital Parameter** - The Digital parameter that contains the digital item to use for triggering.
- **Digital Item** - The digital item used as the Alarm trigger.
- **Log Events** - Select this in order to add this alarm to the event log.

2. ACTIVE CONDITION SETTINGS

Select the **[ACTIVE]** tab and the following screen will appear:

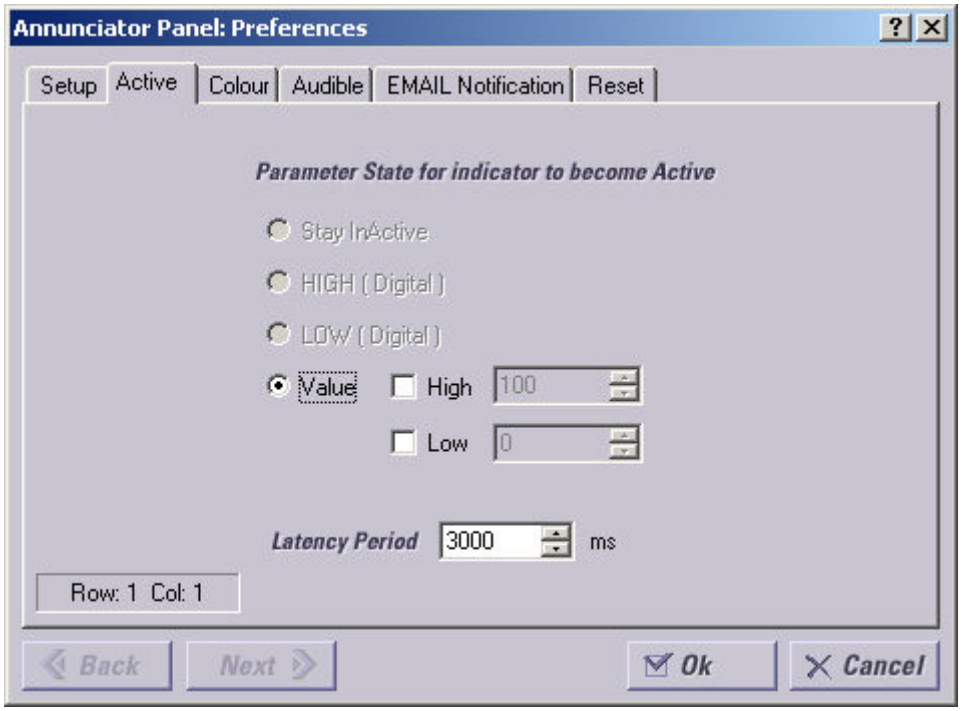

Fill in the following information:

- Select the **HIGH** and/or **LOW** conditions that will trigger the indicator alarm.
- Select the Latency Period (ie: the amount of time the value is in the alarm state before the alarm is triggered).

3. ALARM COLOR SETTINGS

Click on the **[COLOR]** tab:

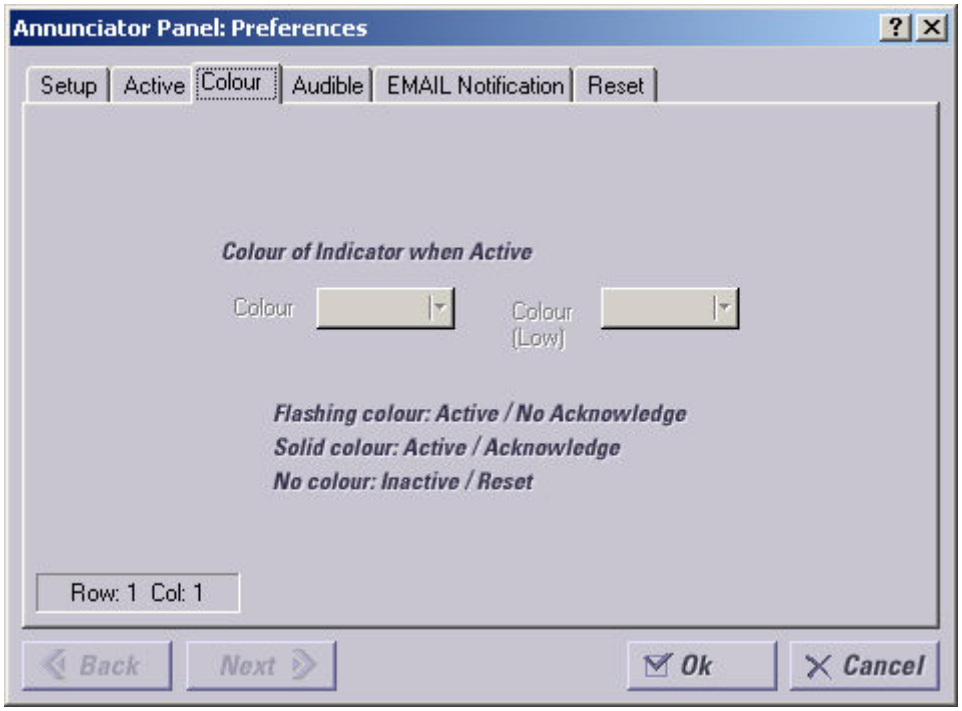

Fill in the following information:

- Select the alarm condition color for the indicator.
- Select the Low condition color for the indicator.

4. ALARM AUDIBLE SETTINGS

Click on the **[AUDIBLE]** tab:

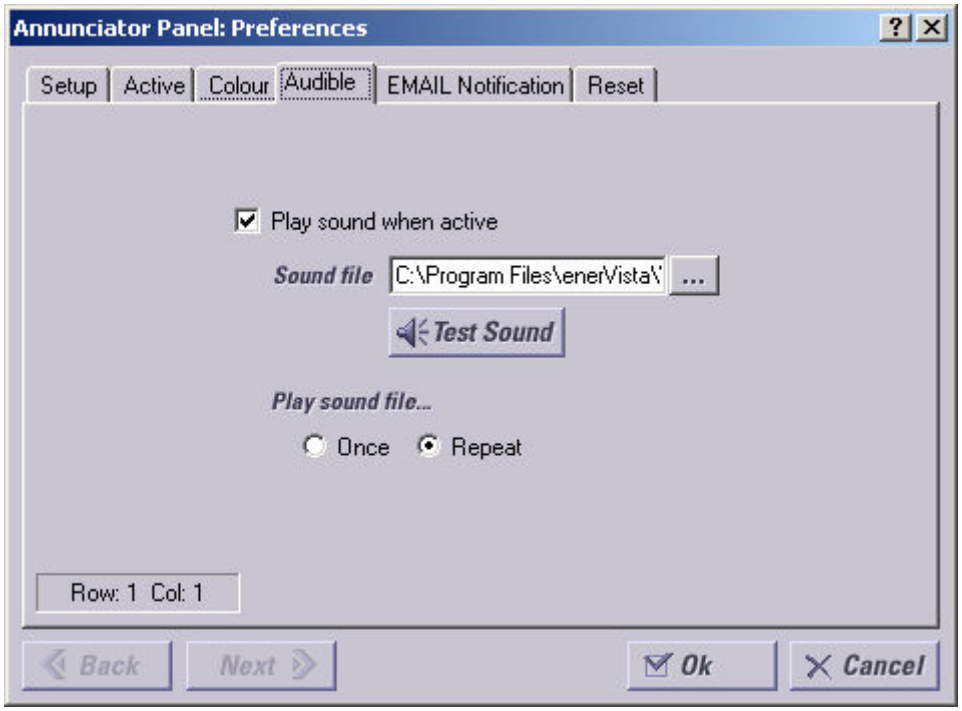

Fill in the following information:

- Select whether or not you want EnerVista VIEWPOINT to play a sound file when the alarm is triggered for this Indicator
- Select the sound file to play.
- Select the Frequency/Repeatability of the Indicator, when the alarm is triggered.

5. **EMAIL Notification**

Click on the **[EMAIL Notification]** tab:

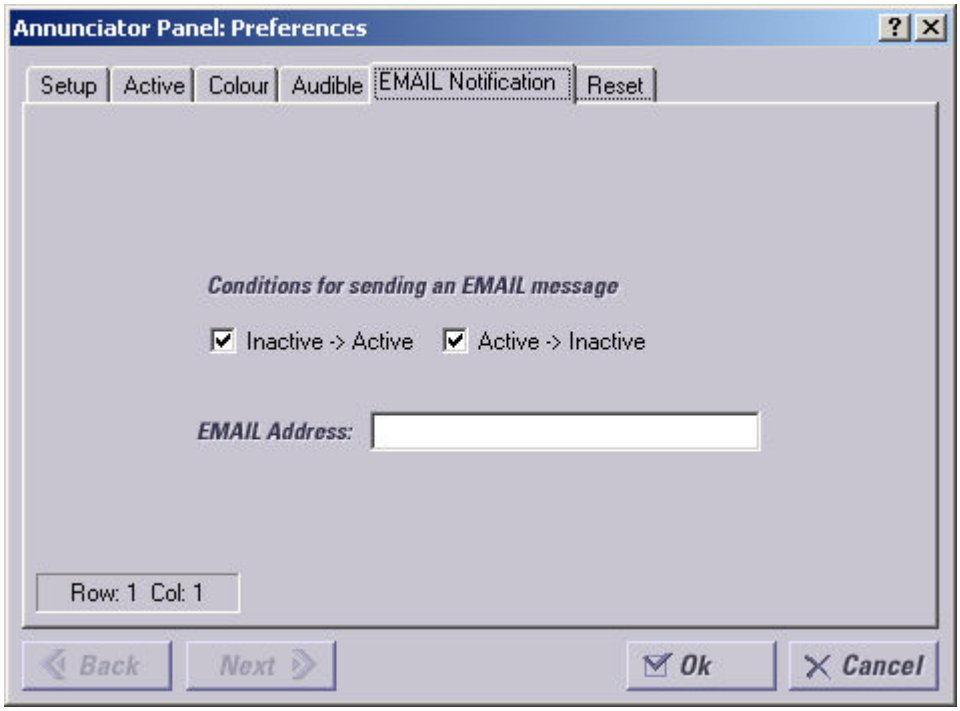

Fill in the following information:

- Select whether or not you want EnerVista VIEWPOINT to send an EMAIL notification message when the alarm state changes state from Inactive to Active.
- Select whether or not you want EnerVista VIEWPOINT to send an EMAIL notification message when the alarm state changes state from Active to Inactive.
- Enter the Email address to be used for notification.

NOTE: This feature supports only SMTP addressing. Please check the configuration in the Preferences screen.

6. ALARM RESET MODE

Click on the **[RESET]** tab:

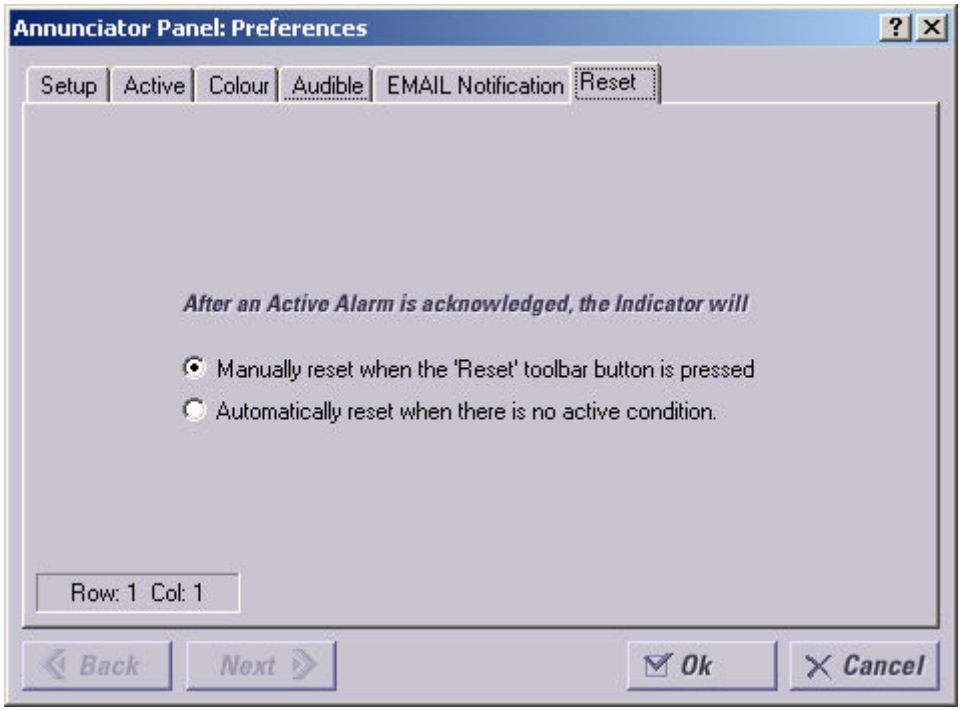

Select whether or not you want the ALARM to be:

Manually reset: Alarm resets back to it's original color setting when the user presses the "Reset" button on the annunciator toolbar.

Automatically reset: Alarm resets back to it's original color setting on it's own once the Alarm condition has been removed.

Once the six steps have been completed click **[Ok]** to save the changes to the indicator. Click **[Cancel]** to abort the changes and return to the annunciator screen.

Acknowledging Alarmed Indicators

Follow the steps below to acknowledge an Indicator on your Annunciator Panel which is in ALARM condition (ie: flashing).

See the sample screens below for an example of an Indicator switching to an ALARMED STATE

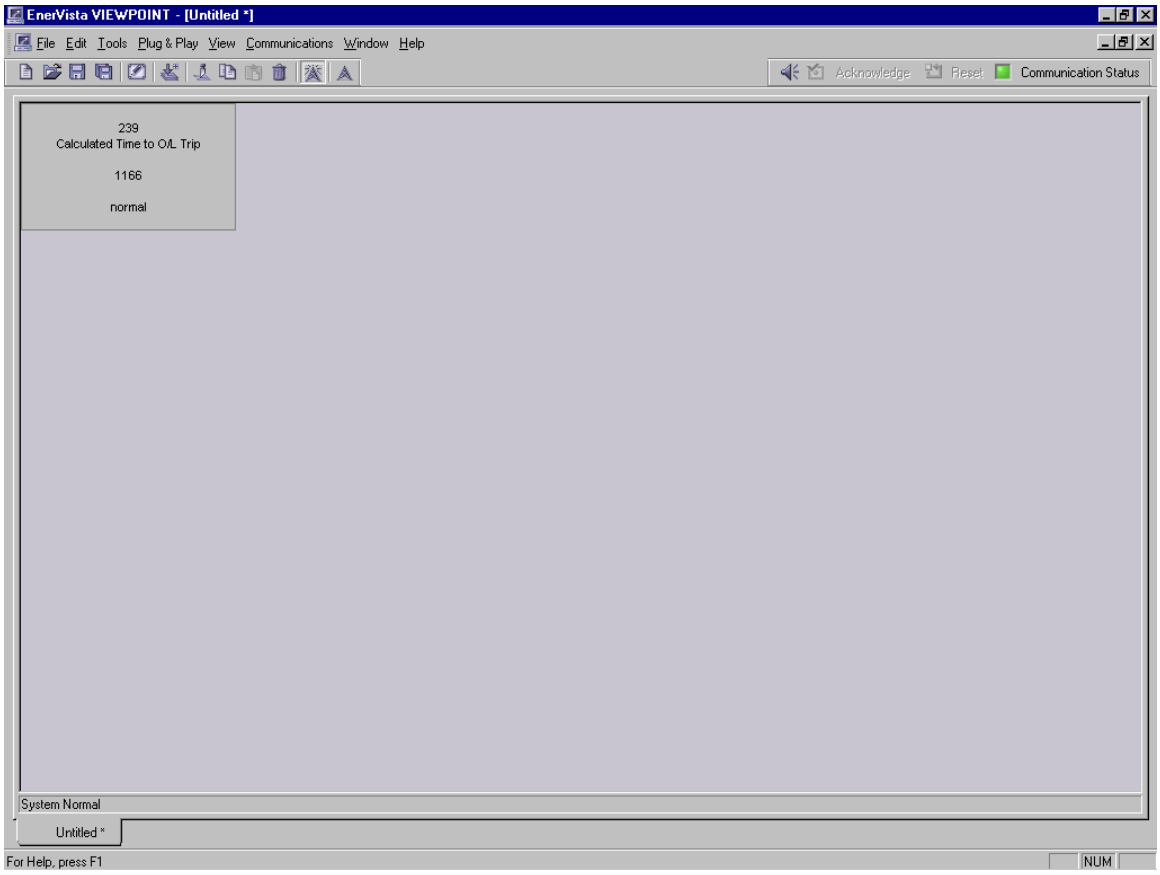

Indicator in Normal State

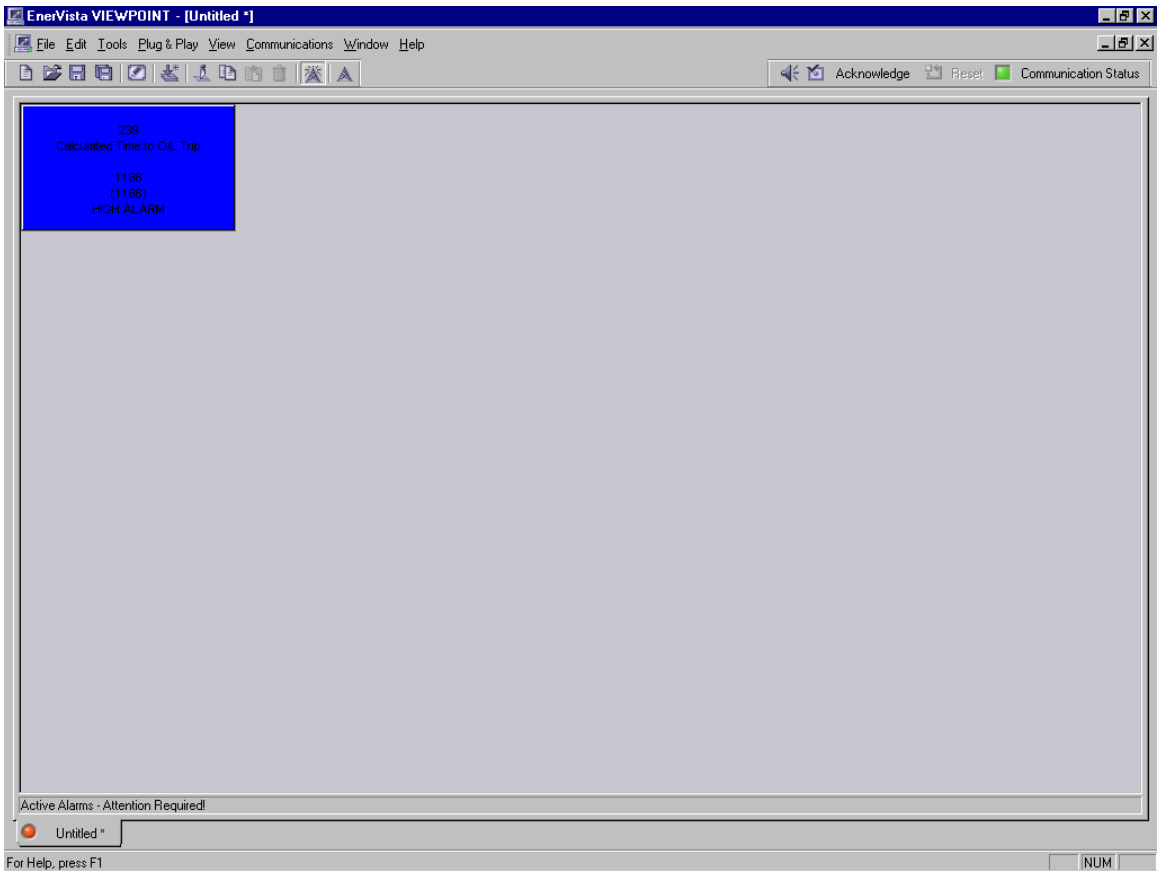

Indicator in ALARM STATE flashing blue.

1. Click on the Indicator in ALARM mode for which you want to acknowledge. Then click on the ACKNOWLEDGE button

on the right side of the Annunciator Toolbar.

All Indicators will now be acknowledge (ie: They will no longer be blinking and will remain in a solid alarm colour).

Resetting an Alarmed Indicator that has been Acknowledge

An Indicator in an ALARM condition can only be reset back into it's NORMAL state under the following conditions.

1. It has been ACKNOWLEDGED.

2. The Indicator's ALARM RESET MODE parameter has been set to MANUAL.

3. The current readings or values from the Indicator are no longer in the range of values that trigger the ALARM state.

If the above conditions are met, follow the steps below to reset the alarm:

1. Click on the Indicator to be reset and then click on the [RESET] button .

All Indicators will now be reset if they meet the conditions above.

Reports

Introduction

A 'Reports' tool is available to the user to configure reports. The user can access this new option from the main screen of Viewpoint as seen below:

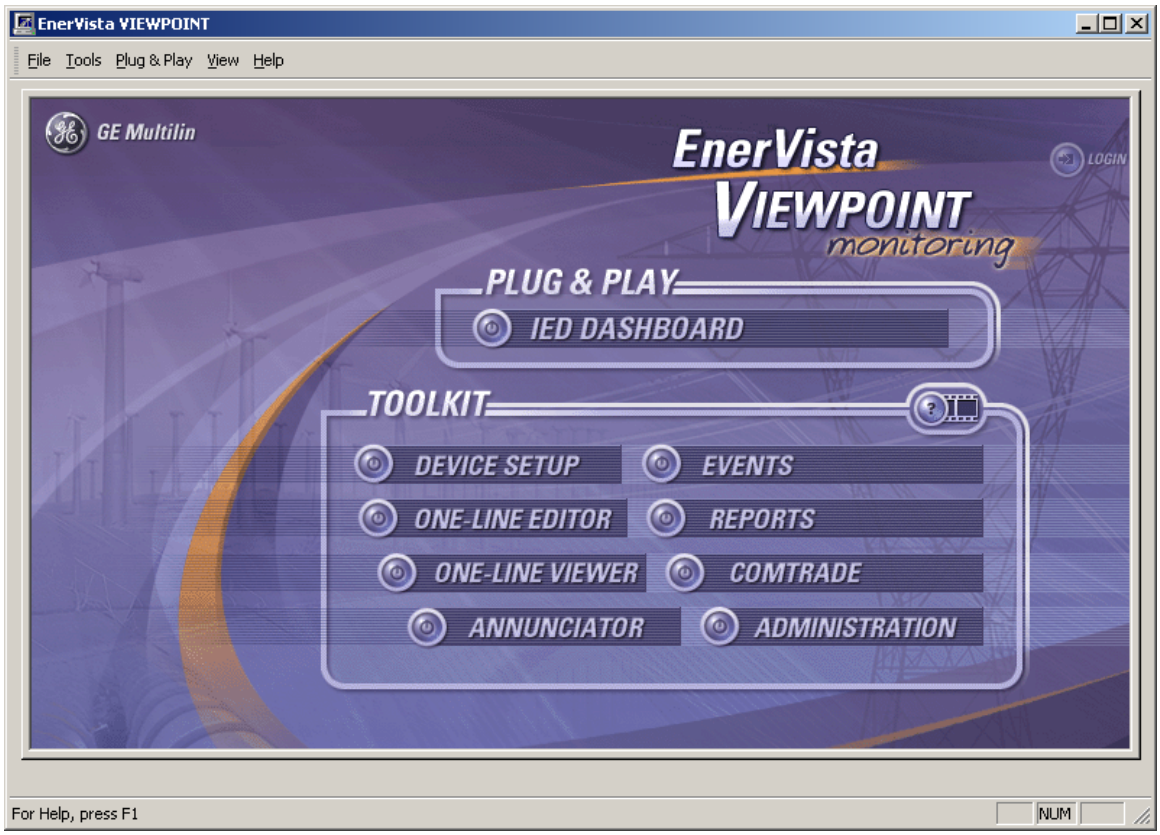

Pressing the 'Reports' button will launch a Reports Configuration window. A message will be displayed in the Reports Configuration screen to inform the user to press the [Add] button on the toolbar to create a new report if there are no reports created as seen below:

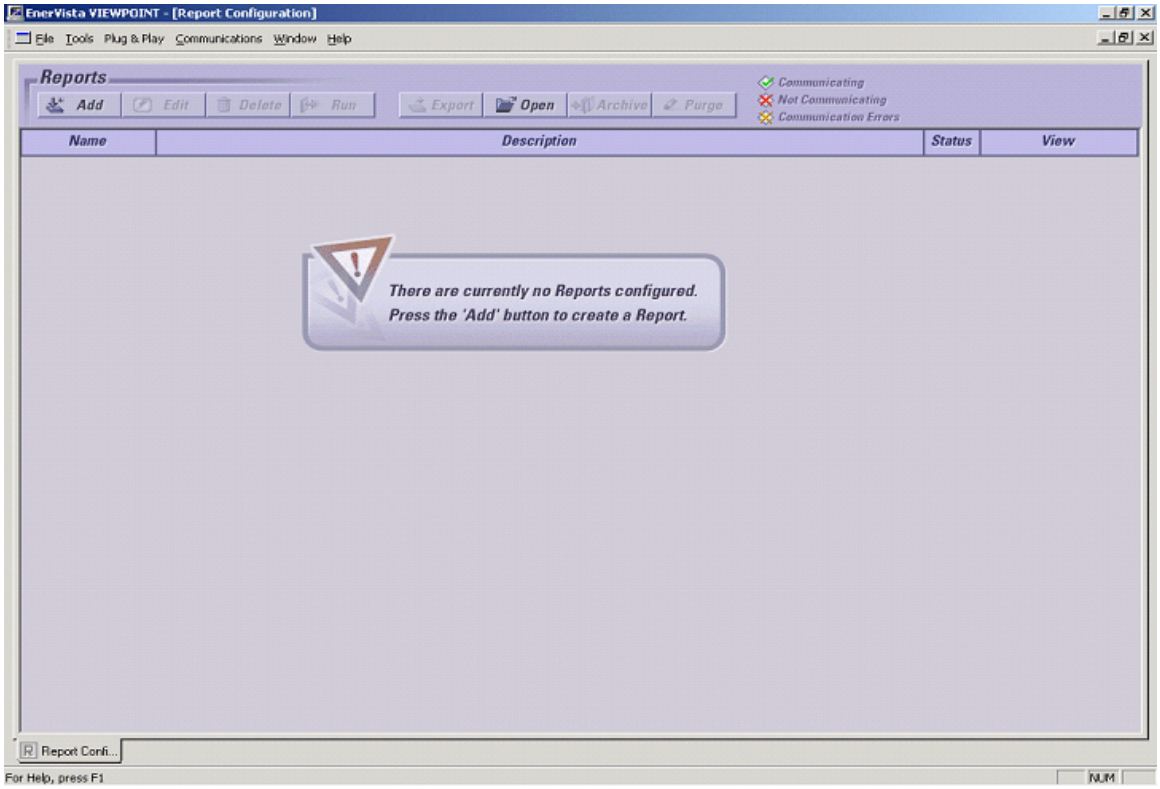

There is a maximum of 10 Reports that can be created and running concurrently within a Viewpoint session. The Reports Configuration screen contains a table listing the reports. The description for each column in the table is described below:

Name:
Name of parameter.

Description:
Description of the parameter.

Status:
The Status will show the current communication state. The Status may be:

- GREEN –100% successful communications
- YELLOW –communication problems with at least 1 device
- RED – communication problems with ALL devices

View:
The View button will list the available charts for the report, so that the user can quickly jump to a pre-configured chart.

Report Creation

To add a report, Press the [Add] button on the toolbar to add a report. The Report Properties screen will pop up as seen below:

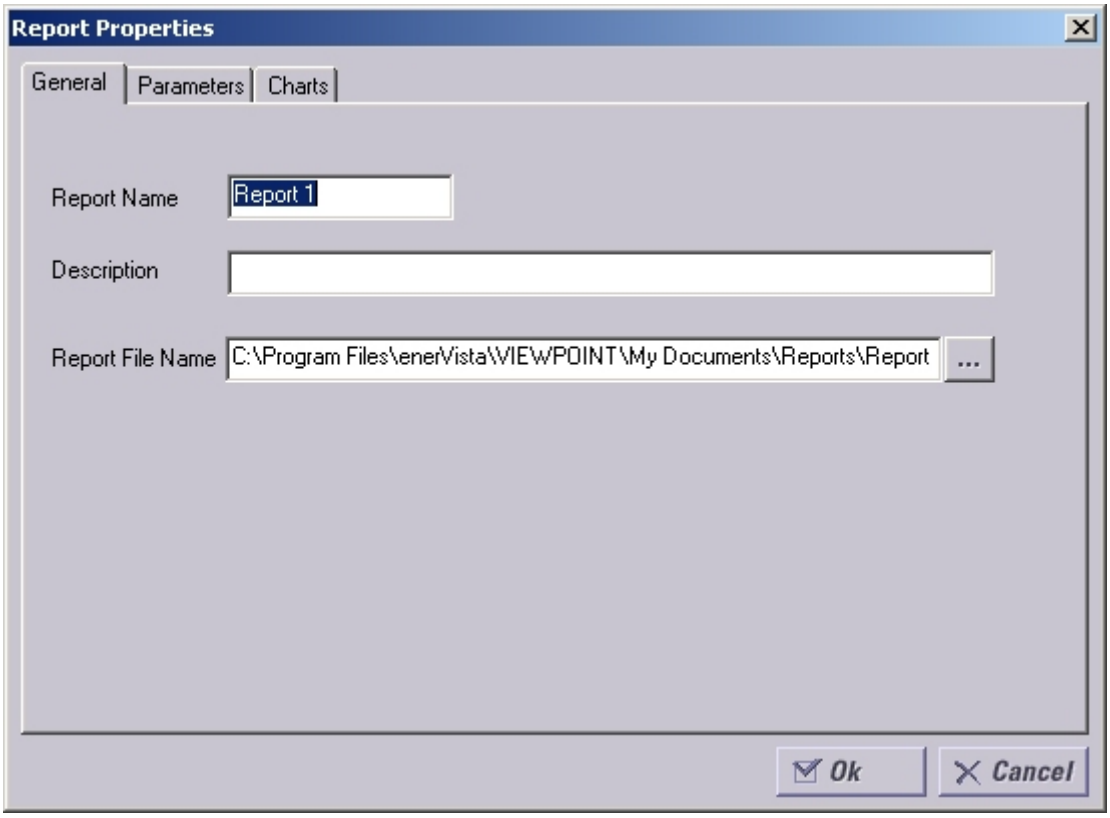

The user is required to enter the following three attributes in the general tab seen above:

- Report Name – Defaulted to 'Report n', where n represents the number of reports.
- Description - Field to enter text that would best describe the report's purpose.
- Filename – Location to store the report's information.

Click [OK] to proceed with creating the report.

The user is then prompted to start the newly created report as seen below:

Report Parameters

Follow the instructions below to add parameters to a report:

1. Select a report listed in the report configuration screen.
2. Click the [Stop] button to stop running the report if it is running.
3. Click the [Edit] button.
4. Select the 'Parameters' tab to begin adding data items to the report that will be monitored as seen below:

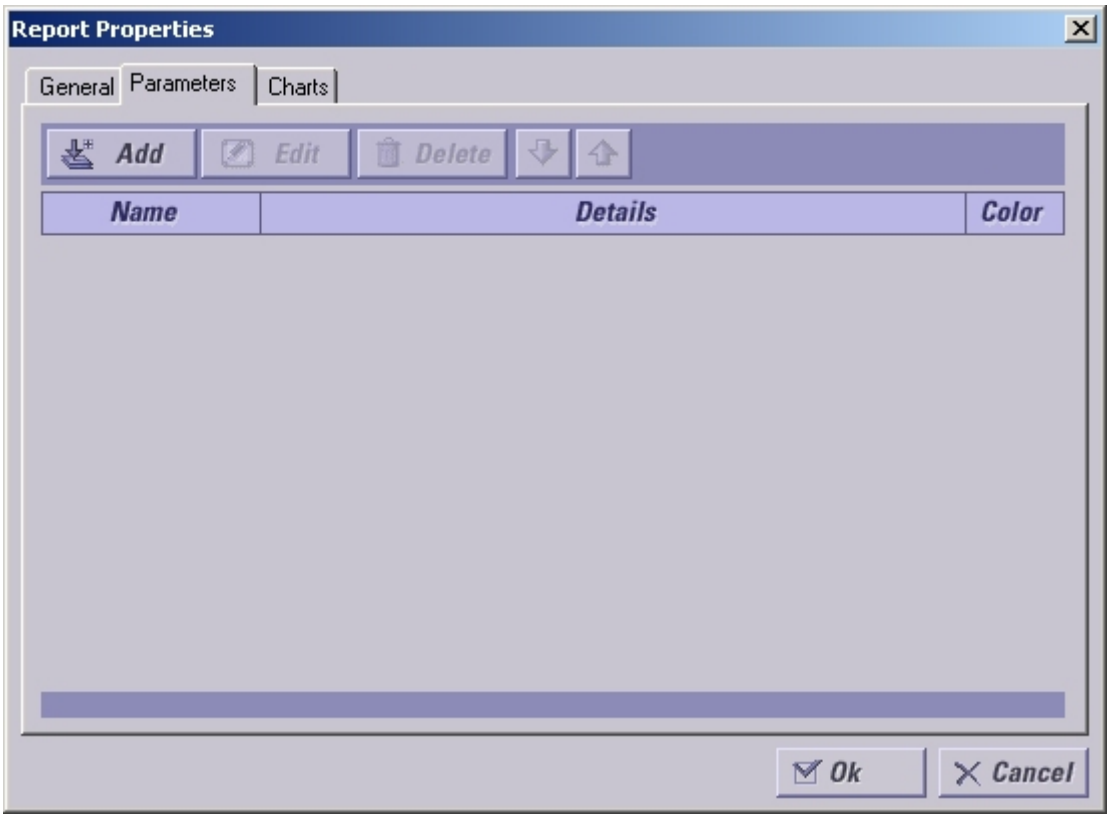

Description of each button in the 'Parameters' tab is described below:

- **Add button -** Select the [Add] button to add a parameter to the current report.
- **Edit button -** Select the [Edit] button to edit the selected parameter.
- **Delete button -** Select the [Delete] button to delete the selected parameter from the current report.
- **Up and Down Arrows -** Use the up and down arrow buttons to customize the ordering of the data items in the report. This ordering determines how the data is displayed and exported.

5. Select the [Add] button. The following prompt will be displayed:

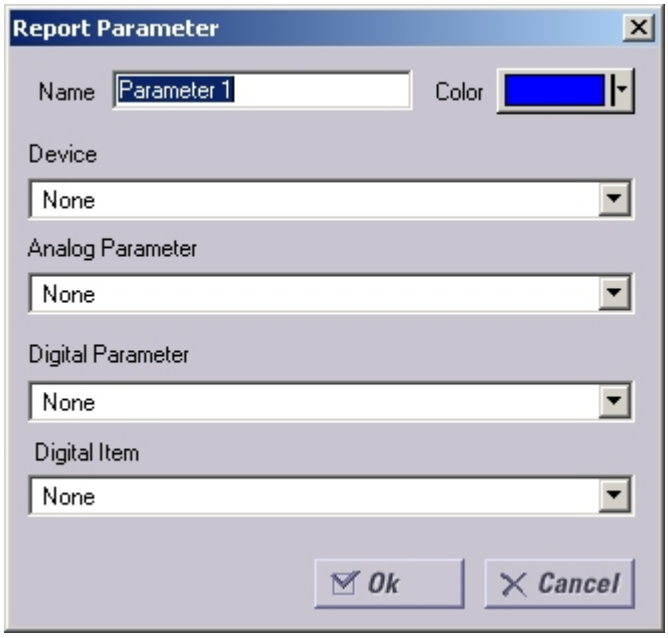

6. The user can now fill in the following fields for the current data item:

   - Name - Enter the parameter name.
   - Color - Select the color for the parameter.

   NOTE: The same color must be used for the same parameter across all charts.

   - Device - Select the device.
   - Type of parameter (digital or analog) - Selecting an Analog Parameter will force 'None' to be displayed for the Digital Parameter. Selecting a Digital Parameter will force 'None' to be displayed for the Analog Parameter.

7. Click [OK] to proceed.

NOTE: A total of 50 parameters can be added to each Report.

Report Charts

Each Report requires you to create Charts used to view the information gathered by the Report.

Follow the instructions below to add charts to a report:

1. Select a report listed in the report configuration screen.
2. Click the [Stop] button to stop running the report if it is running.
3. Click the [Edit] button.
4. Select the 'Charts' tab.

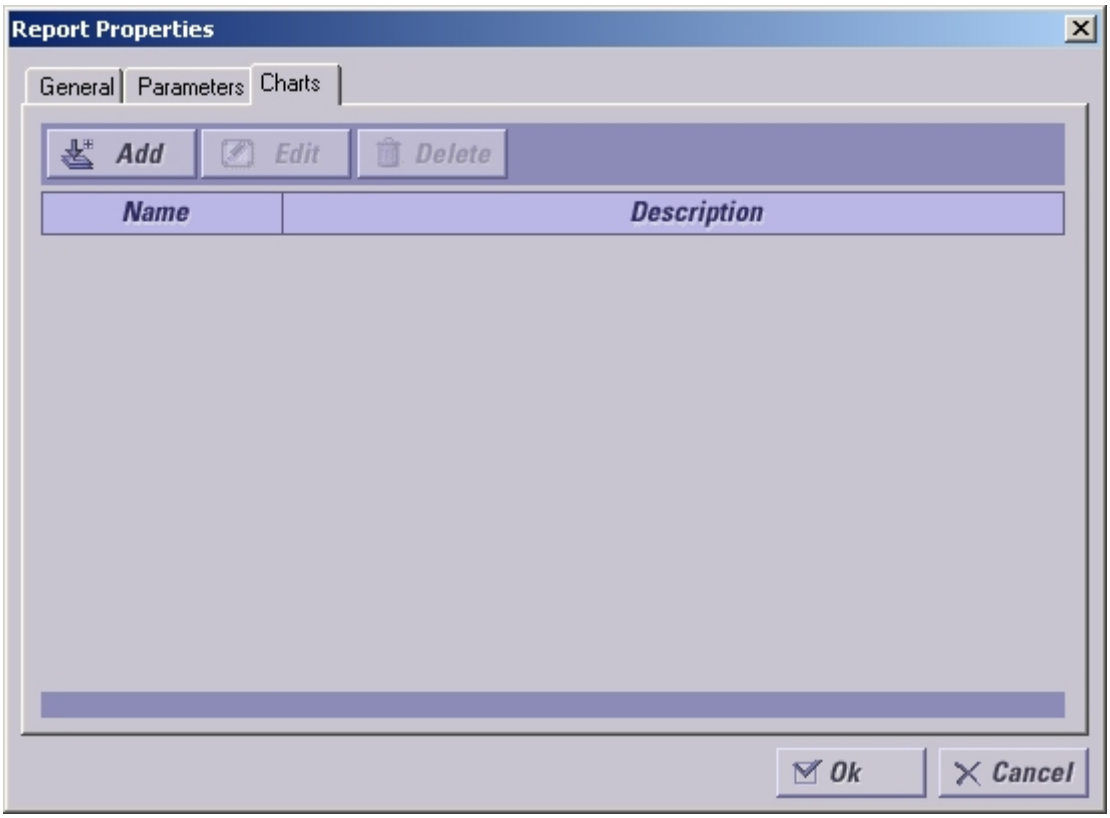

Description of each button in the 'Charts' tab is described below:

- **Add button -** Select the [Add] button to add a chart to the current report.
- **Edit button -** Select the [Edit] button to edit the selected chart.
- **Delete button -** Select the [Delete] button to delete the selected chart from the current report.

5. Select the [Add] button to create a new Chart. The following prompt will be displayed:

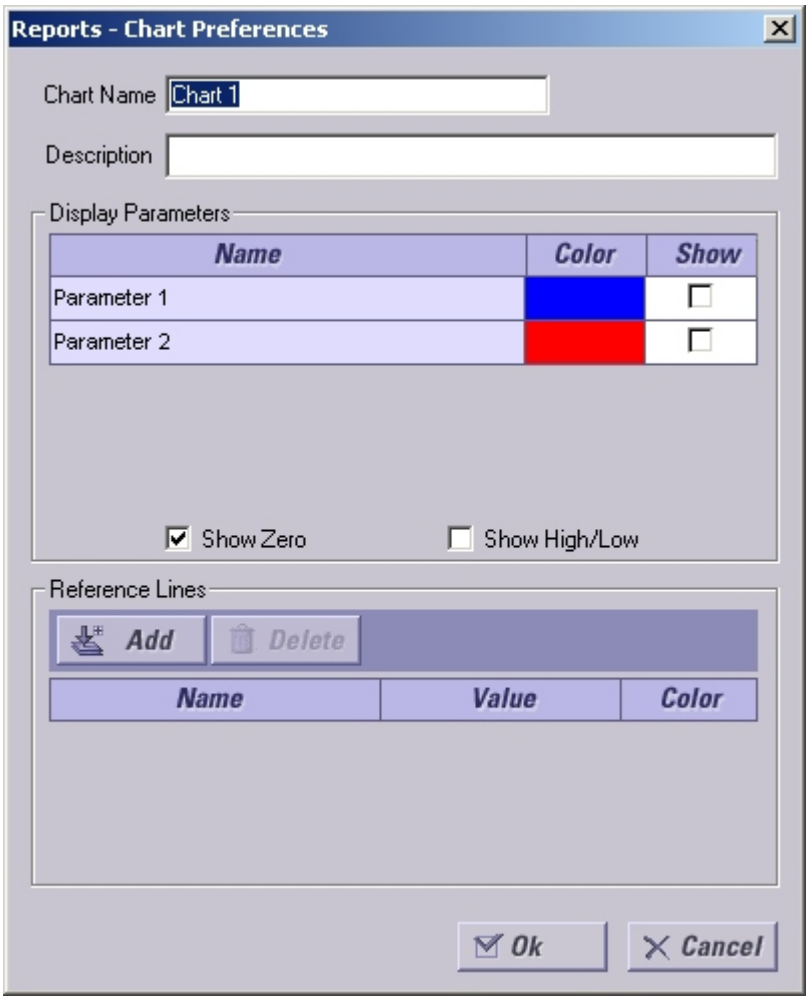

6. The user can now fill in the following fields for the current chart:

- Chart Name - Enter the name for the chart.
- Description - Enter the description for the chart.
- Display Parameters - Select the parameters to be displayed in the chart.
- Customize the chart with the following options:

  Show Zero

  Show High/Low

  Enabling this selection will draw separate lines to indicate the High and Low values when averaging is used to plot values.

  Add Reference lines

  Each Reference line is defined by a name, value to graph the line, and the color to plot the reference line.

  NOTE: A total of 10 Reference Lines can be added to each Chart.

7. Click [OK] to proceed.

NOTE: The Time Window for the Chart is selected within the Chart Viewer since this information will be changed often.

NOTE: A total of 50 Charts can be added to each Report.

Report Viewer

There are 2 methods to open the Report Viewer:

Method 1:
From the main 'Report Configuration' screen, there is a 'View' selector that lists all of the Charts. Select a Chart from the list and the chart will then be displayed.

Method 2:
A Chart can be viewed by selecting [File] -> [Open] from the menu and then selecting a Report file (File with extension REP).

Time Range Displayed in the Viewer

The format of the sampled data will vary depending on the size of the Date Window. Data points are constantly sampled and an average for the data point is calculated once every minute.
In order for the data to be displayed properly, the size of the date window will determine the format of the data displayed. The following rules governs how the time range is displayed:

- If the date window is less than one day, the minute data will be charted.
- If the date window is greater than one day and less than 2 months, each data point will be the average for an hour. There will be an option to show the High/Low range on the same graph.
- If the date window is greater than 3 months, each data point will be the average for a day. There will be an option to show the High/Low range on the same graph.
-

Note: The High/Low range will be based on the highest and lowest stored minute samples.

The Report Viewer is seen below:

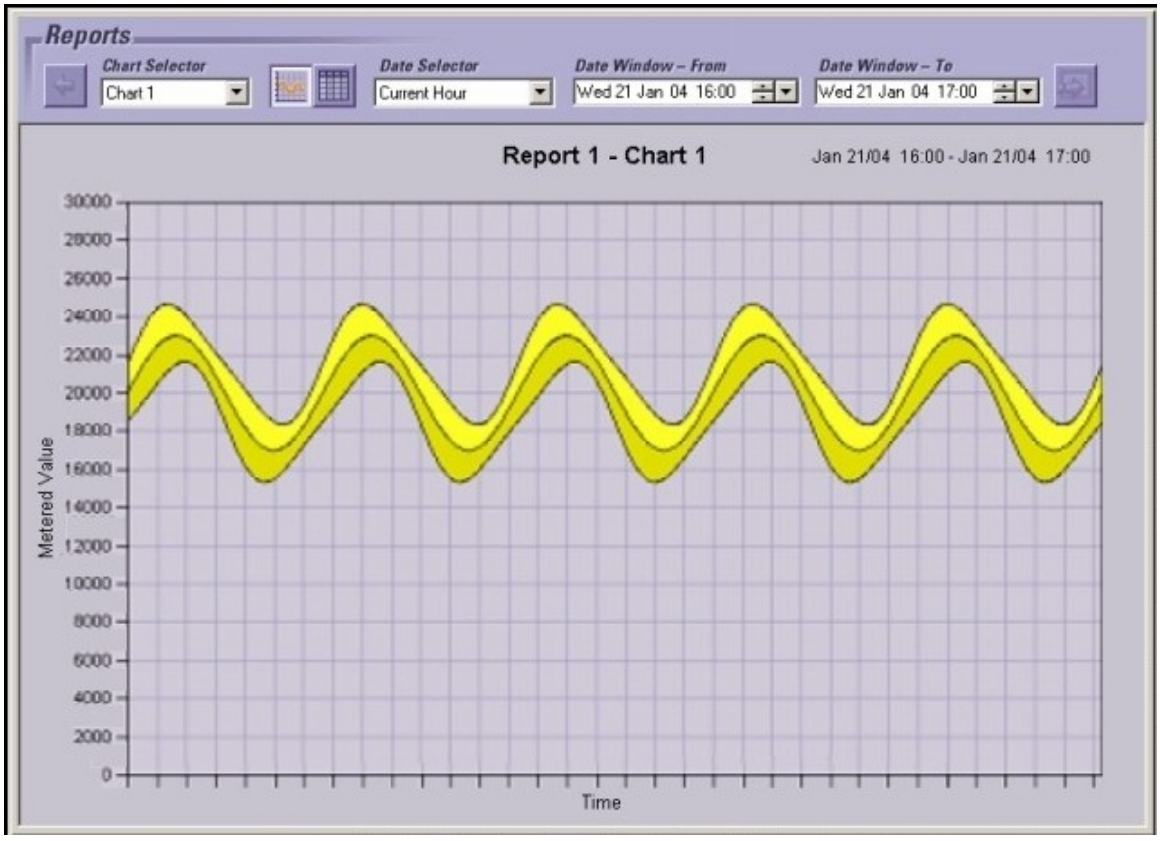

The functionality of each feature in the report viewer is described below:

Left Arrow Button:

When viewing a graph that displays the time in days, the user can click on that day in the graph to display the hours of that days in a graph. Similarly, when viewing a graph that displays the time in hour, the user can click on that hour in the graph to display the minutes of that hour in a graph. The Left Arrow Button is used to return back to the larger time range graph.

Chart Selector:

The user can select any chart that the report contains to display in the viewer.

Graph Button:

Select this button to view the data in a 2D graph.

Chart Button:

Select this button to view the data in a chart format.

Date Selector:

The user must select one of the Report's predefined charts. Selecting from the 'Date Selector' list will initialize the Date Window to the specified date range. Options for the 'Date Selector' are:

- Current Hour
- Last Hour
- Today
- Last 24 Hours
- Yesterday
- Current Week (M-S)
- Current Week (S-S)
- Last 7 days
- Current Month
- Last 30 days
- Current Year
- Custom Date

Date Window From & Date Window To:

The user can select a custom time range to view the data. Simple select the start and end time in 'Date Window From' and 'Date Window To' drop down boxes. When the user edits these drop down boxes, the 'Date Selector' drop down box displays 'Custom Date'. The user must then click the Right Arrow Button to display the 'Custom Date' in the viewer.

Right Arrow Button:

Once the user selects a custom date with the 'Date Window From' and 'Date Window To' drop down boxes, the user must click the Right Arrow Button to display the time range in the viewer.

Exporting the Chart

The user can select the ‘Export’ icon on the toolbar to export the data from the Chart to a CSV file that can be easily imported into a spreadsheet application.

Printing the Chart

The user can select the ‘Print’ icon on the toolbar to print the Chart.

Additional Features

From the Configuration screen the user can choose to Purge, Archive, and Export data from the currently select Report as seen from the respective buttons below:

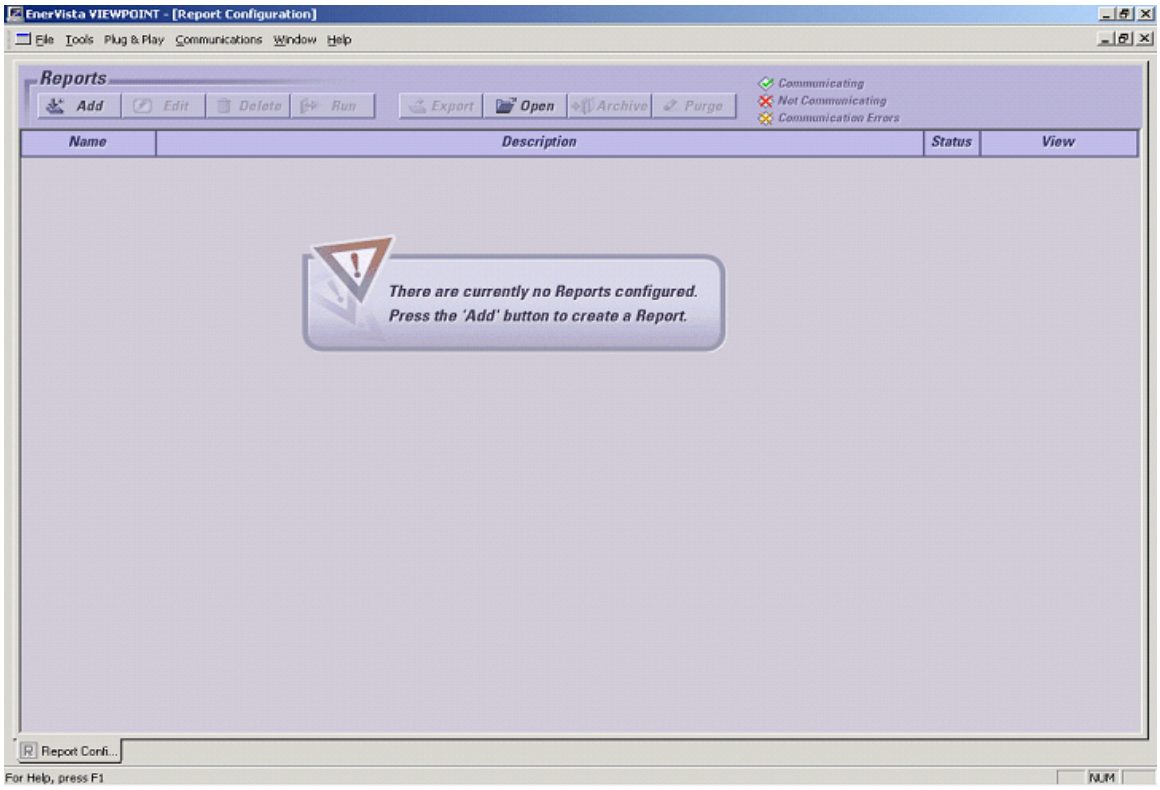

Purge Data

Select the [Purge] button to purge the data. The following dialog will appear that allows the user to select the end date.

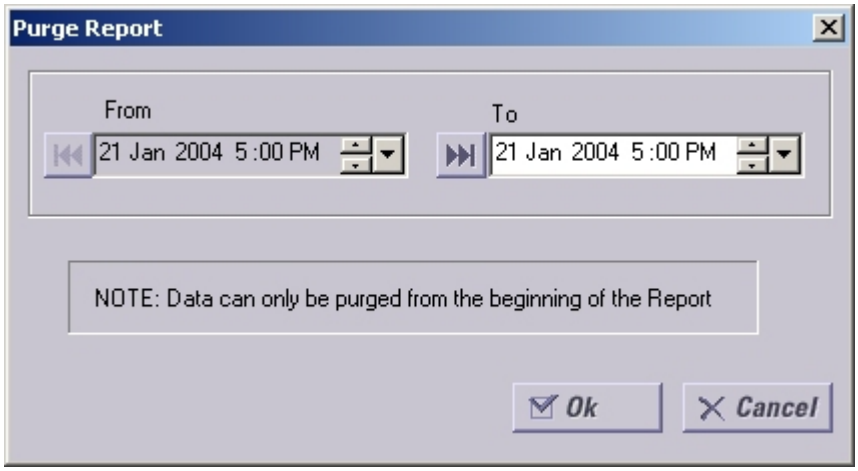

Purging of data must always begin with the oldest data.

The button is disabled since purging has to be always be done starting from the oldest date recorded in the Report.

Selecting the button will set the End Date to the last date recorded in the Report.

Archive Data

Select the [Archive] button to archive the data. The following dialog will appear that allows the user to select a Date Window to Archive data from.

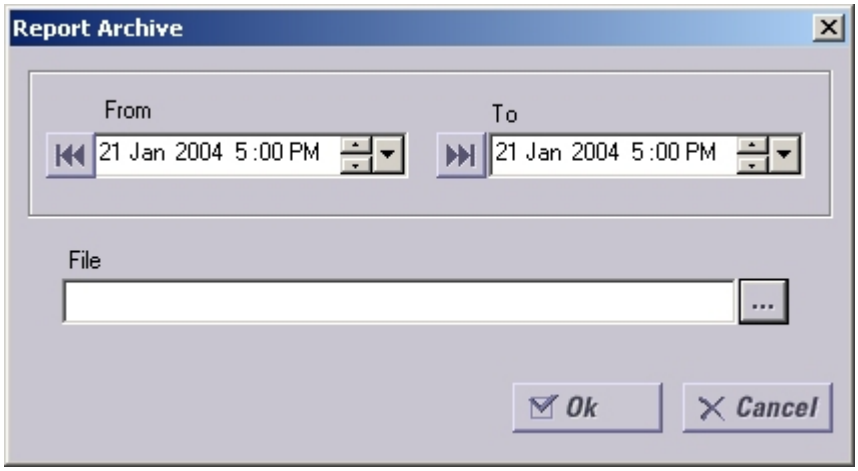

If the Start Date selected is the Start of the Report data, the user will be asked if the user would like to purge the Data after the archiving is completed.

Selecting the button will set the Start Date to the oldest date recorded in the Report.

Selecting the button will set the End Date to the last date recorded in the Report.

Export Data

Select the [Export] button to export the data. The following dialog will appear that will allow the user to select the channels to export.

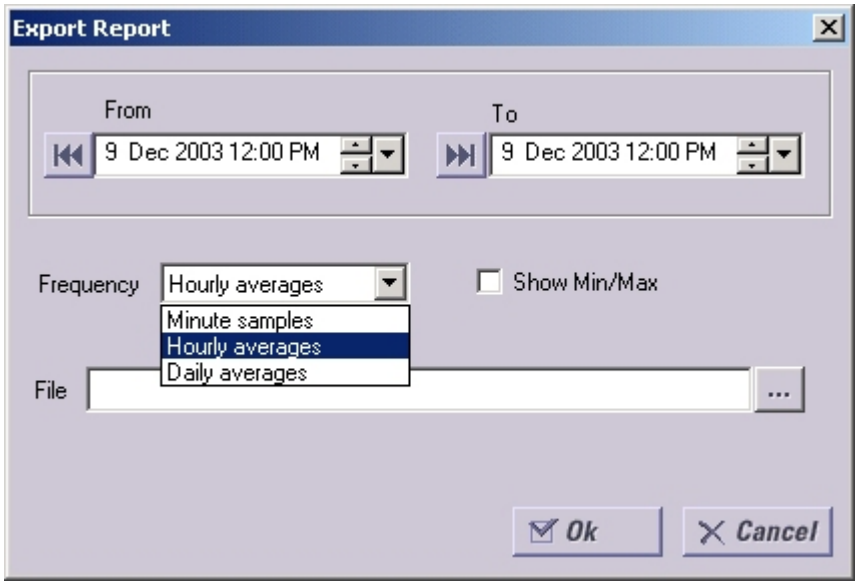

A Date Window will allow the user to define the Start and End dates to be exported. The user can also select the format of the data; either minute samples, hourly averages, or daily averages. If the user selects hourly or daily averages, they will also have the option to export the minimum and maximum values. The user needs to only specify a destination file and press the 'Export' button to complete the task.

Selecting the button will set the Start Date to the oldest date recorded in the Report.

Selecting the button will set the End Date to the last date recorded in the Report.

COMTRADE

Introduction to COMTRADE

The COMTRADE viewer feature within EnerVista Viewpoint provides a visual display of power systems data and relay operation data captured during a specific triggered event.

Previously captured and saved Oscillography COMTRADE files (.CFG) can be viewed while off-line. Oscillography data has to be first extracted from a device while on-line, but once extracted, the data can be saved to disk. CSV files retrieved from GE Multilin products may be combined with existing COMTRADE files and viewed within a single window.

These files can then be opened in EnerVista Viewpoint and allows the user to analysis the captured waveforms.

EnerVista Viewpoint supports the C37.111-1991 and C37.111-1999 COMTRADE Standards.

The following screen shows the options available for viewing and manipulating COMTRADE files.

Convert

Converting File Format

The convert utility converts a CSV oscillography file into a COMTRADE file viewable by COMTRADE viewer. If converted into an ASCII Data file, an oscillography COMTRADE (.cfg) file can be readable by spreadsheet applications. GE Multilin products that create CSV oscillography files are: 369PC, 469PC, 489PC, 745PC, 750/760PC, PQMPC, and PQMIIPC.

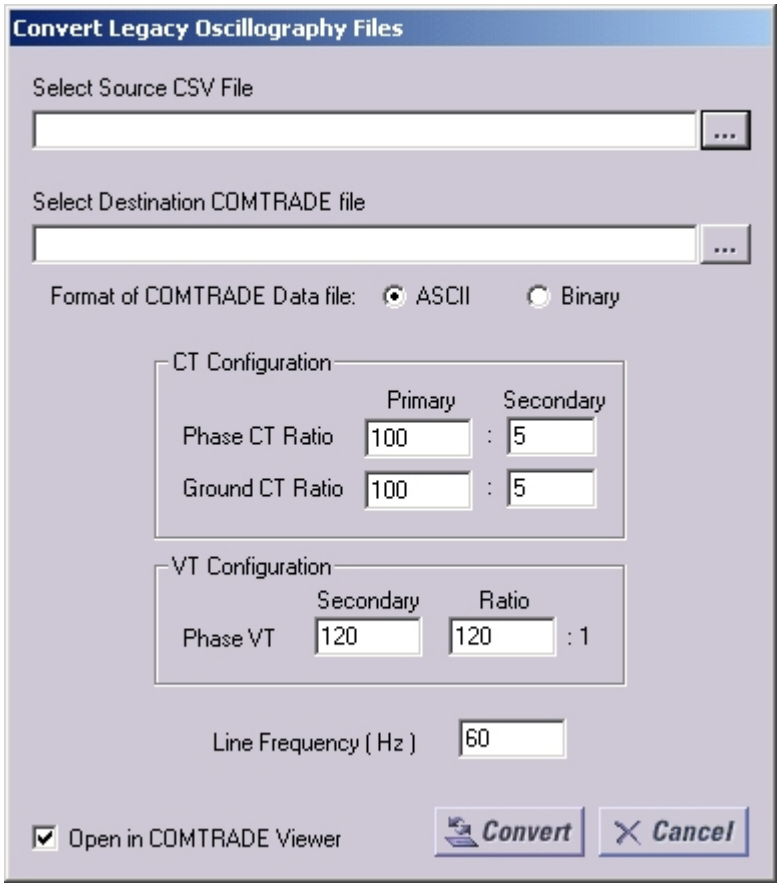

To Convert to COMTRADE Format:

- Under the title, "Select Source CSV File" enter the CSV file to convert. The file may be found from the file browsing dialog box by clicking the following icon ...
- Under the title, "Select Destination COMTRADE File" enter the CFG file to output to. The file may be found from the file browsing dialog box by clicking the following icon ...

- Next to the title, "Format of COMTRADE Data file:" select between **ASCII** and **Binary**. ASCII files are in a text format and maybe viewed in a spreadsheet document while the binary format is smaller but only viewable by the COMTRADE viewer.

- Specify the CT Ratios for the Phase and Ground CTs for the current channels. The CSV file displays only Primary values, but COMTRADE has support for displaying current information in either Primary or Secondary quantities.

- Specify the VT Ratio for the voltage channels. The CSV file displays only Primary values, but COMTRADE has support for displaying voltage information in either Primary or Secondary quantities.

- Specify the Line Frequency that the CSV information was recorded at.

- Use the "Open in COMTRADE Viewer" check box to open the COMTRADE file in the COMTRADE viewer once the converting process is complete.

- The **[Convert]** button will then convert the source CSV file into the target CFG COMTRADE file in the format (ASCII/Binary) selected. To ignore all changes and cancel the operation select **[Cancel].**

Resample

Resample a COMTRADE file

Resampling a COMTRADE file allows for the user to convert a COMTRADE file with a variable sampling rate to a COMTRADE file with a fixed sampling rate. Additionally, the fixed sampling rate of a COMTRADE file may be changed to a new value.

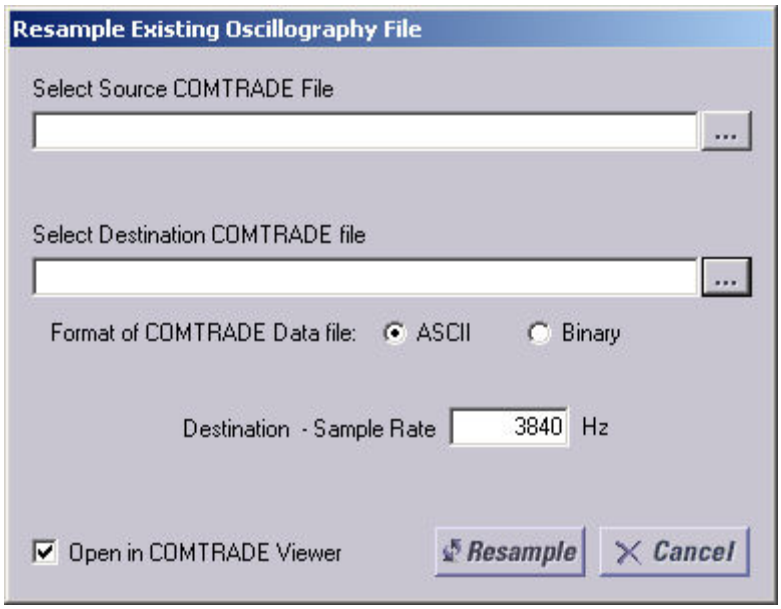

To Resample a COMTRADE File:

- Under the title, "Select Source COMTRADE File" enter the CFG file to resample. The file may be found from the file browsing dialog box by clicking the ... icon.
- Under the title, "Select Destination COMTRADE File" enter the CFG file to output to. The file may be found from the file browsing dialog box by clicking the ... icon.
- Next to the title, "Format of COMTRADE Data file:" select between **ASCII** and **Binary**. ASCII files are in a text format and maybe viewed in a spreadsheet document while the binary format is smaller but only viewable by the COMTRADE viewer.
- Use the "Open in COMTRADE Viewer" check box to open the COMTRADE file in the COMTRADE viewer once the resampling process is complete.
- The **[Resample]** button will then resample the source CFG file into the target CFG COMTRADE file in the format (ASCII/Binary) selected. To ignore all changes and cancel the operation select **[Cancel].**

Merge

Merging COMTRADE files

The convert utility converts a CSV oscillography file into a COMTRADE file viewable by COMTRADE viewer. If converted into an ASCII Data file, an oscillography COMTRADE (.cfg) file can be readable by spreadsheet applications.

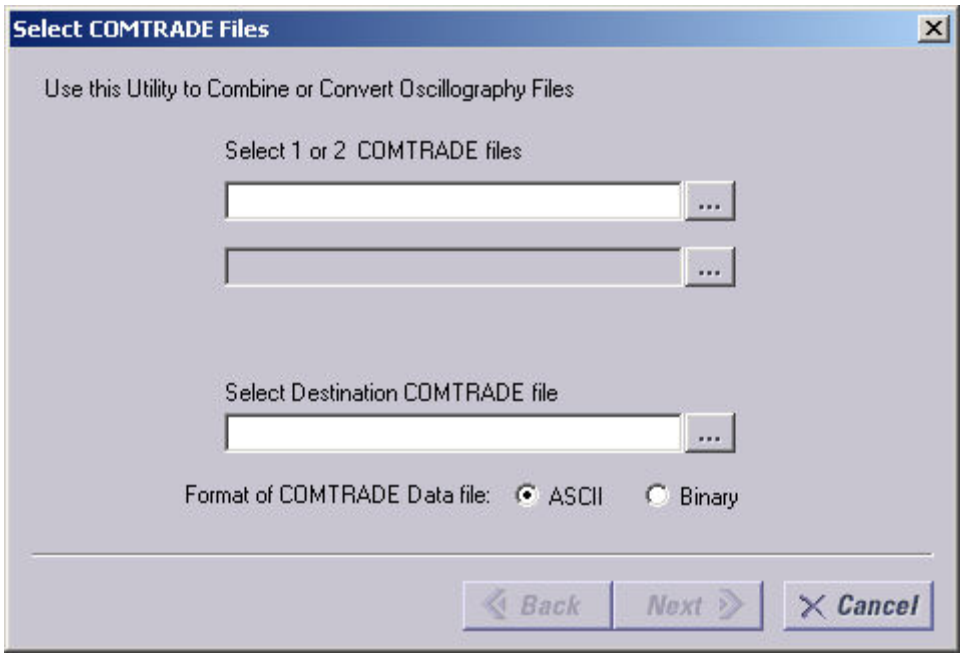

To merge two COMTRADE files:

- Under the title "Select 1 or 2 COMTRADE files" enter the CFG files to merge. The files may be found from a browsing dialog box by clicking the following icon .

  NOTE: The first COMTRADE file entered in the list will be considered the reference file. The reference file is used to determine the start time and trigger time of the merged file.

- Under the title "Select Destination COMTRADE File" enter the CFG file to output to. The file may be found from a browsing dialog box by clicking the following icon .

- Next to the title "Format of COMTRADE Data file:" select between **ASCII** and **Binary**. ASCII files are in a text format and maybe viewed in a spreadsheet document while the binary format is smaller but only viewable by the COMTRADE viewer.

- The **[Next]** button will become accessible when the above information is entered. Click on **[Next]** to continue with the Merge process. To ignore all changes and cancel the operation select **[Cancel].**

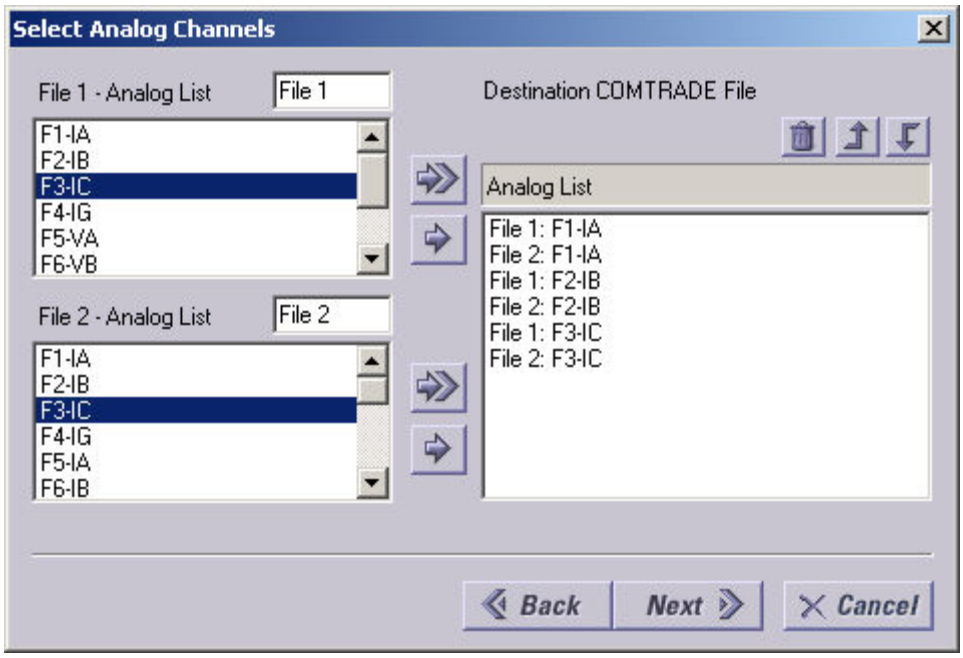

- The select analog channels dialog box will appear. On the left is the available waveforms from both source COMTRADE files. On the right is the selected waveforms for the destination COMTRADE file. Highlight the required waveforms from the source files and use the button to move it to the destination file. Use the button to move all the waveforms from the analog list to the destination file. In order to remove incorrectly selected waveforms from the destination list use the trash can icon. The buttons are provided for re-ordering the analog list of the destination file. Select **[Next]** to continue.

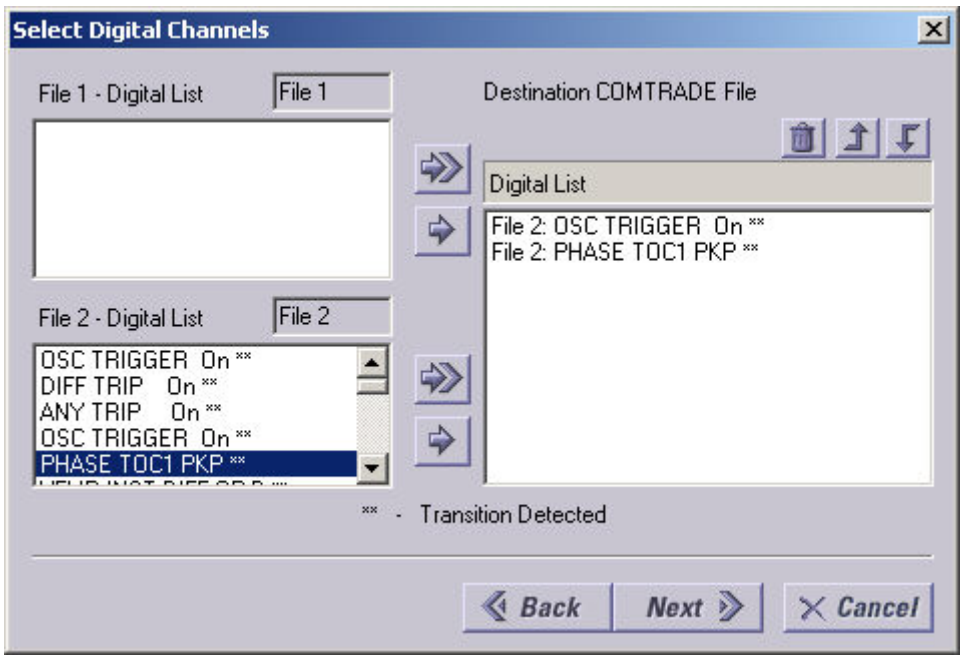

- The select Digital channels dialog box will appear. This screen is identical to the "Select Analog Channels" screen and operates in the same manner. On the left is the available waveforms from both source COMTRADE files. On the right is the selected waveforms for the destination COMTRADE file. Highlight the required waveforms from the source files and use the button to move it to the destination file. Select **[Next]** to continue.

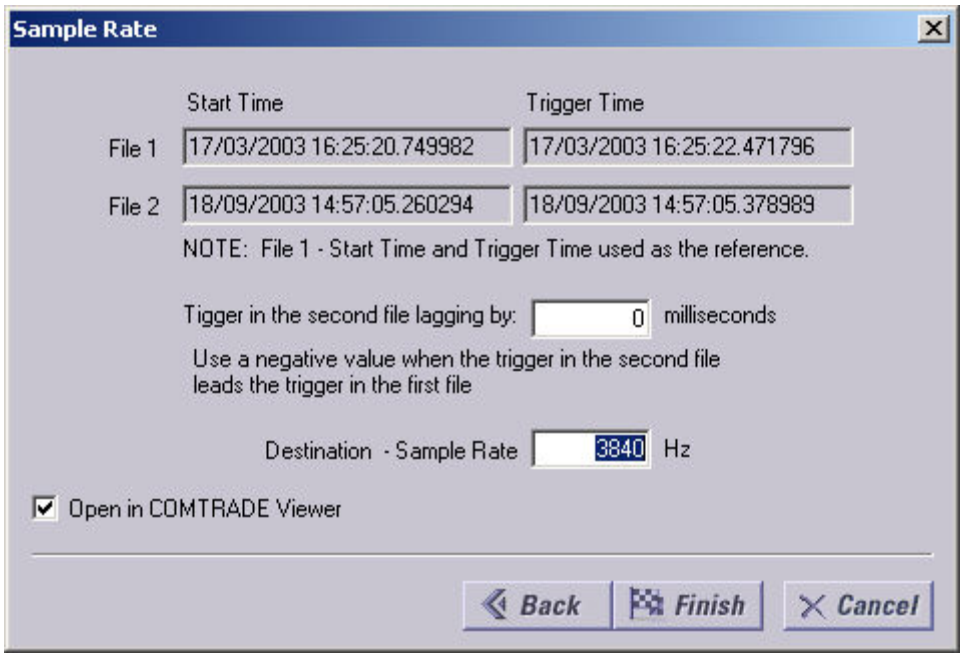

- The "Sample Rate" dialog will appear next and is the last step in the process. At the top of the window is four boxes each detailing the start and end times of the two source COMTRADE files. If synchronization is required, the field "Trigger in the second file lagging by" is given to add an offset to the second file. This offset can be negative in which case the first file will be lagging the second file.

- The field "Destination - Sampling Rate" is available so that the sampling rate for the destination file is configurable.

- In order to view the now merged COMTRADE file, leave the check box "Open in COMTRADE Viewer" checked.In order to finish the process click **[Finish]**.

The two source COMTRADE files have now been merged into the specified destination file. If three or more files are to be merged, this process may be repeated using the destination file from the first merge as one of the source files for a second merge.

View

Introduction to COMTRADE View

The COMTRADE viewer feature within EnerVista Viewpoint provides a visual display of power systems data and relay operation data captured during a specific triggered event. The viewer application can display oscillography, phasors, harmonics and actual values retrieved from a COMTRADE file.

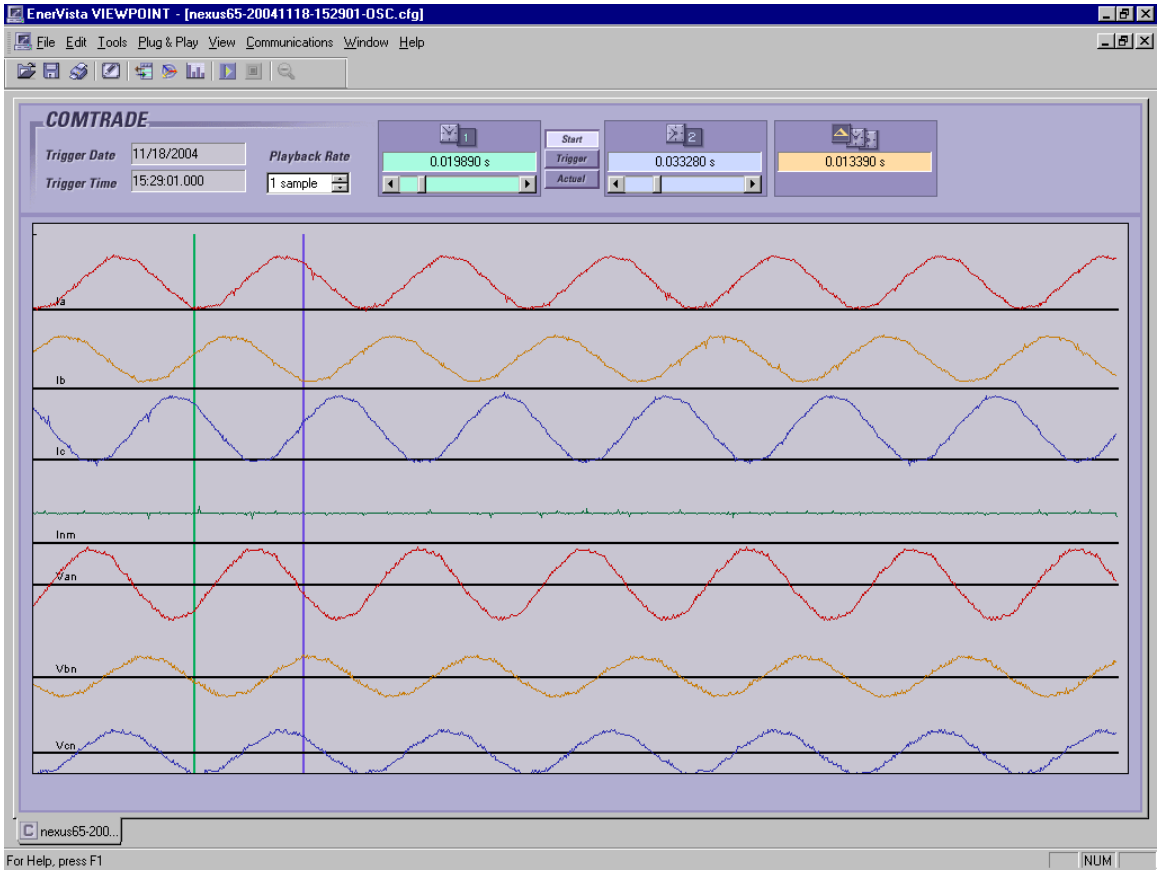

To exit back to the main menu open **[File]** and select **[Close]**.

COMTRADE View Toolbar

The COMTRADE viewer contains an assortment of tools used to perform File Management (save, open, etc.) and playing/viewing of COMTRADE files. Here are the following tools specific to this toolbar and their function.

	Open	Open/Load an existing COMTRADE file (.CFG).
	Save	Save current .CFG file with existing filename. If a filename has not been specified, EnerVista VIEWPOINT will prompt you to name it now.
	Print	Prints the waveform.
	Preferences	Opens the COMTRADE Viewer preferences dialog box.
	Data	Show the actual value of the waveform at the specified cursor position.
	Phasors	Show the phasor diagram of the waveform at the specified cursor position.
	Harmonics	Show the harmonic spectrum of the waveform at the specified cursor position.
	Play	Begin moving the first cursor through waveform samples at the specified sampling rate.
	Stop	Stop moving the first cursor through the waveform
	Zoom out	Zoom out from the previous selected scale.

View Oscillography

Displayed on the top of the window are the following parameter fields:

- The Blue field (labeled) displays the parameter value at the blue cursor 2 position.
- The Green field (labeled) displays the parameter value at the green cursor 1 position.
- The Yellow field (labeled) indicates the relative parameter difference between the two cursor amplitude values.

- Select the Start button to have the cursor times displayed as an offset from the ‘Start Time’ of the COMTRADE file. These times will always be a positive value.

- Select the Trigger button to have the cursor times displayed as an offset from the ‘Trigger Time’ of the COMTRADE file. A negative time indicates a time that occurs before the trigger and a positive time indicates a time that occurs after the trigger.

- Select the Actual button to have the cursor times displayed as an actual time stamp. The format for the time stamp is “mm/dd/yy HH:mm:ss.ssssss” and the hours are based on a 24 hour system.

- The vertical Red line indicates the trigger position (%) of the data capture.

- The Blue and Green vertical cursors indicate initial and final time.

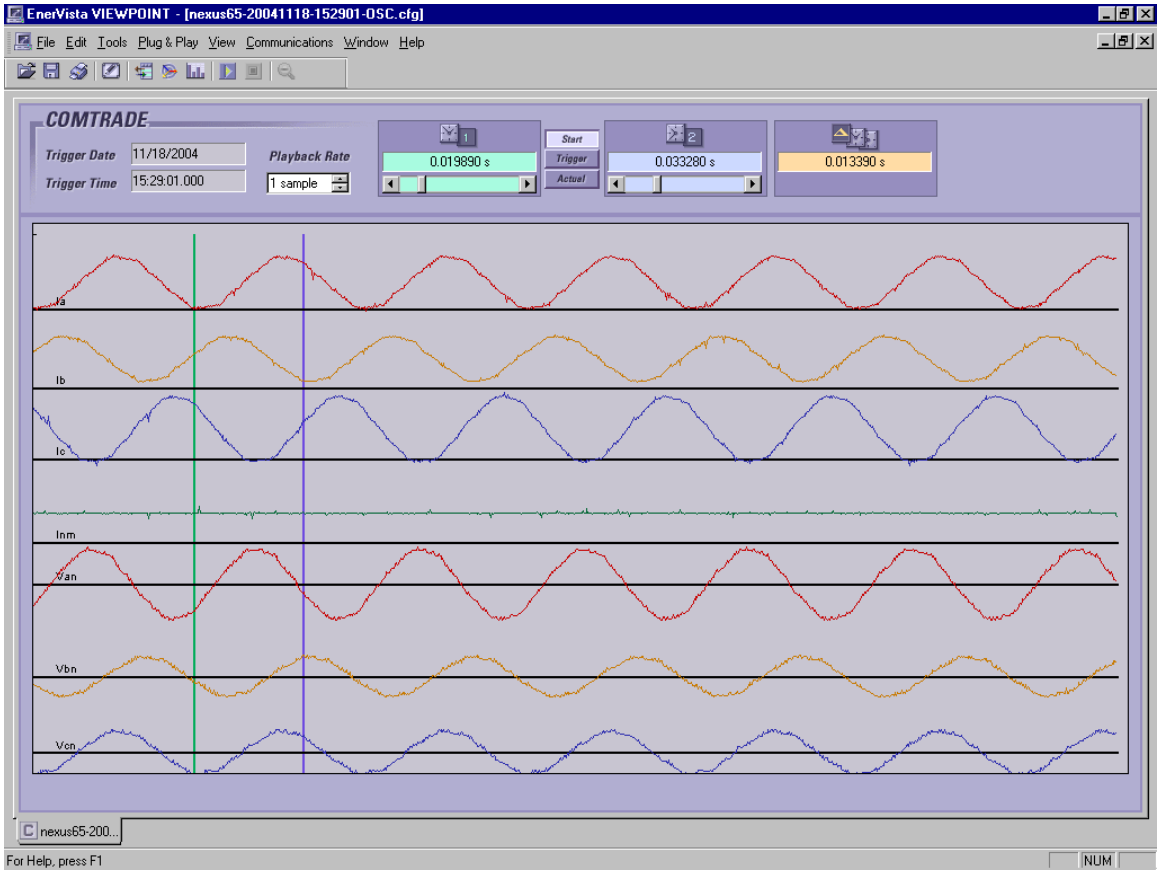

- The top left of the screen shows the trigger time/date as well as the playback rate. The playback rate is related to the number of samples shown every second and can be increased/decreased in order to improve the resolution of the playback.

- **Cursors** can be moved either by clicking and dragging them left and right across the duration period of the signal, or by using the Cursor 1, Cursor 2 scrolling bars at the top of the window. The Red line is the Trigger position and can not be moved across the captured waveforms. There are three time values indicated in the top right boxes listing the selected time for Cursor 1, Cursor 2 and the Delta value. The delta value is the calculated time difference between Cursor 1 and Cursor 2.

- The **Play** button may be used to play Cursor 1 throughout the entire period or sections of the waveform(s). The speed of play is controlled by the **Playback Rate** which is by default **1 Sample**. The larger the value the faster

the cursor will travel across the signal. (**Note**: Playback rate can be changed on the spot during playback) During playback, the **Phasors** screen and **Harmonic** screen will also be updated accordingly in real time based on the position of cursor 1.

- Press the **Stop** button to halt play. The playback automatically rewinds and repeats when the end of oscillography record is reached.

- A selected section of waveform(s) may be **Zoomed** in on by right mouse clicking and dragging the outline box over the desired segment. Multiple zooms are also possible. When utilizing this function, the Zoom Out button becomes active for zooming back out.

- The **Delta** box on the top right side of the screen indicates the difference in magnitude between the two cursors. The box at the top shows the difference in time (milliseconds).

- Waveforms may be super-imposed on top of each other by selecting and dragging them with the left mouse button.

Configure Preferences

Select the **Preferences** button in the **viewer toolbar** to display the Oscillography/Setup Window.

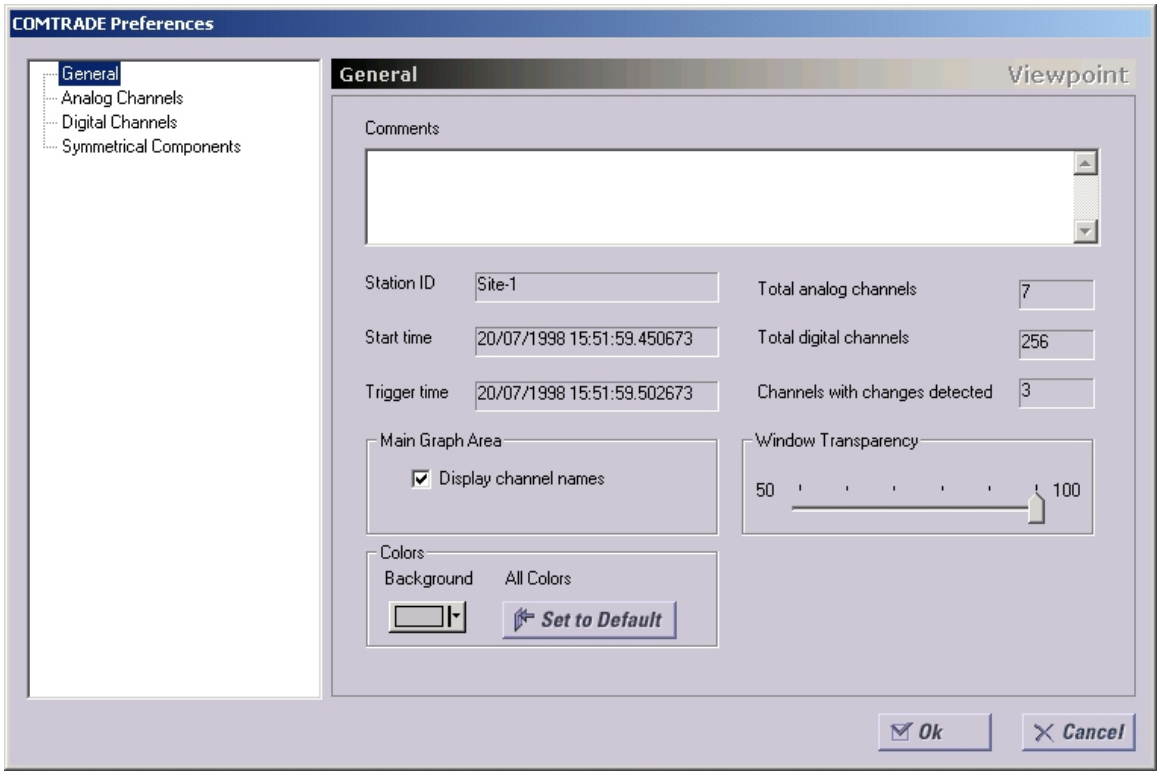

The user has a selection of upto 40 channels to plot in various colors, line styles, and Groups for simultaneous display. These 40 channels can be a combination of Analog and Digital channels. Phasors can only be setup to the number of Analog channels being used. As an example, if only 20 Analog channels is enabled, only 20 Phasors channels can be used.

The four dialogs listed in the left view of the COMTRADE Preferences are described below:

General Dialog:

This dialog allows users to add comments to a COMTRADE file. The user can also customize the display with the option to display channel names, alter the window transparency, and choose a background color. These changes will have an effect on the display of the Oscillography, Phasor, and Harmonics screens.

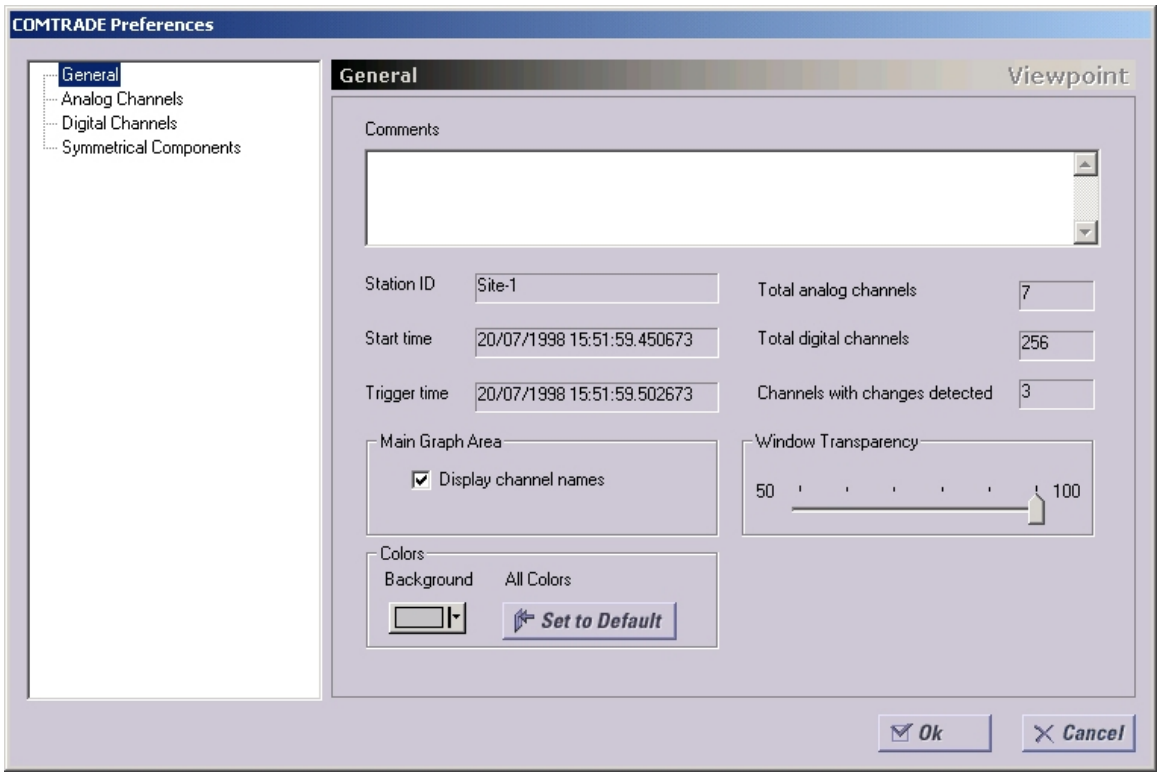

Analog Channels Dialog:

This dialog allows the user to customer the analog channels. The user can customize the following seven columns for each analog channel:

Channel - Displays the name of each channel/waveform.
Color - Click on the color to change the displayed color for that channel.
Scaling - Allows for channels to be grouped so that they share the same scale.
Line Style - Selects the format of the displayed line for that channel.
Graph - Check this to select the channel to be displayed on the waveform graph.
Phasor - Check this to select the channel to be displayed on the phasor graph.
FFT - Check this to select the channel to be displayed on the Harmonic graph.

The user can also customize the Phasor display of the analog channels with the following options:

- **Select Reference:**
  Allows the selection of an analog channel to be used as a zero phase angle reference for the phasor graph. If **None** is selected, the absolute channel magnitudes and phase angles are plotted according to the position of cursor 1
- **Samples/Cycle:**
  For proper display of the phasor angle(s) enter in the sampling rate for the data points of the COMTRADE file. Phasors will be incorrect if an incorrect value is specified for the samples/cycle.

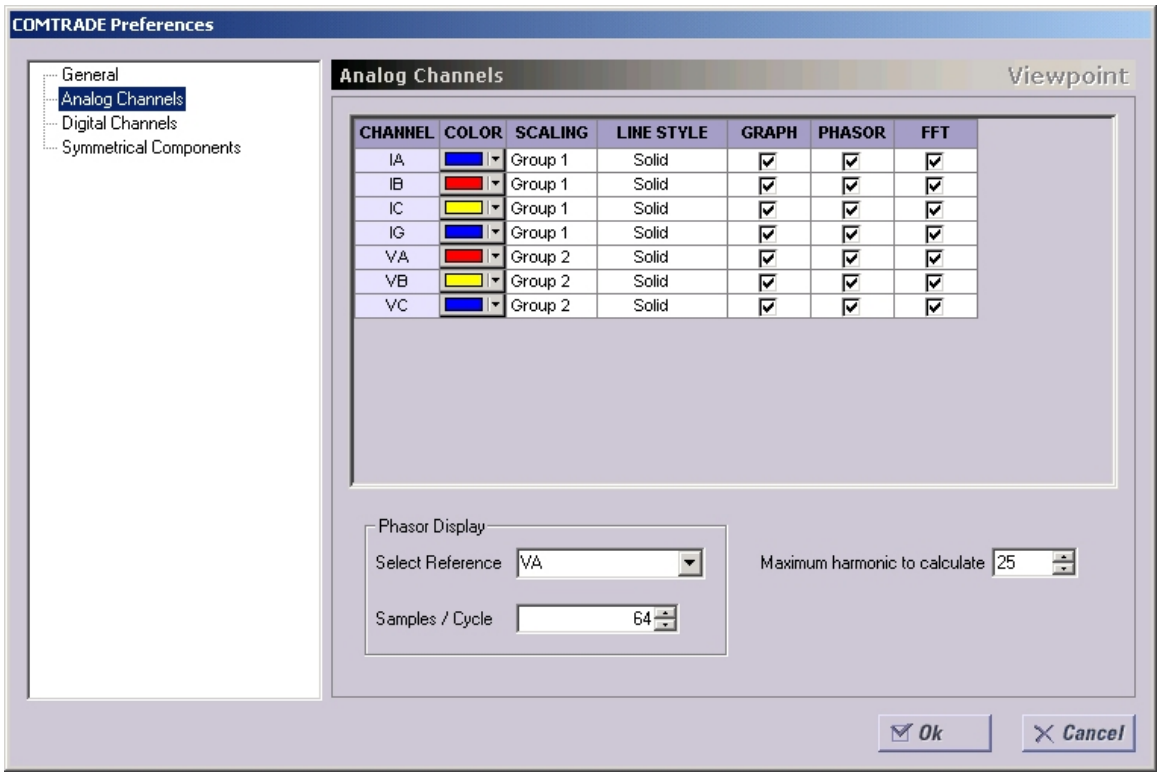

Digital Channel Dialog:

This dialog allows the user to customer the digital channels. The user can customize the following five columns for each digital channel:

Channel - Displays the name of each channel/waveform.
Color - Click on the color to change the displayed color for that channel.
Changed Detected - A checkmark is generated when a change of state is detected.
Line Style - Selects the format of the displayed line for that channel.
Graph - Check this to select the channel to be displayed on the waveform graph.

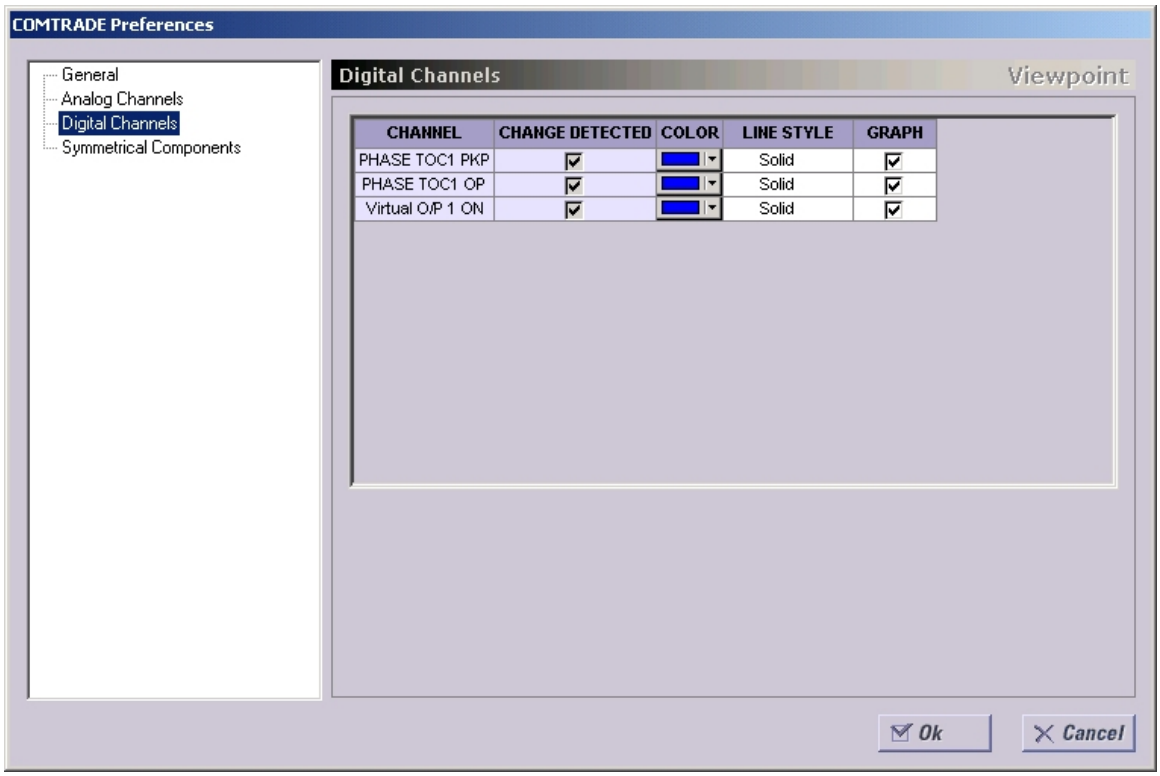

Symmetrical Components Dialog:

This dialog allows the symmetrical components to be calculated and shown for a 3 phase system. The user can customize the following seven columns:

Channel - Displays the name of each channel/waveform.
Color - Click on the color to change the displayed color for that channel.
Scaling - Allows for the channels to be grouped so that they share the same scale.
Phase A - Phase A component to be used.
Phase B - Phase B component to be used.
Phase C - Phase C component to be used.
Phasor - Check this to select the channels to be displayed on the phasor graph.

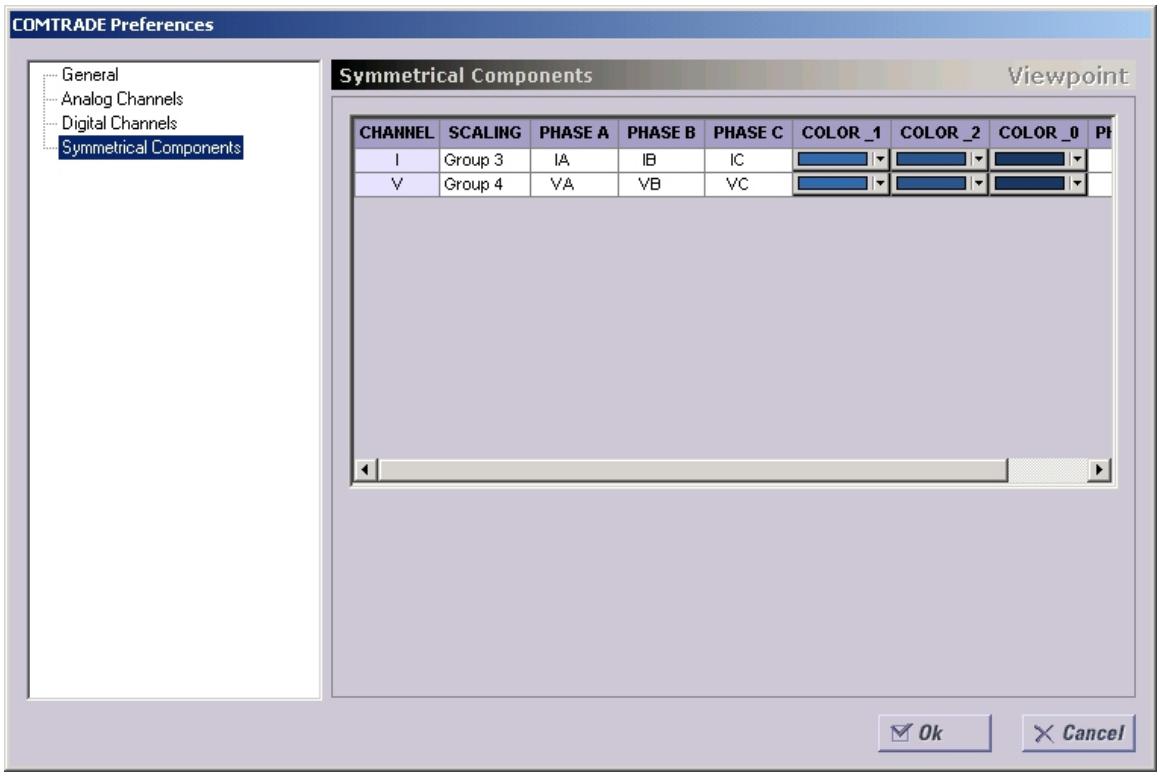
COMTRADE Preferences
General
Analog Channels
Digital Channels
Symmetrical Components
Symmetrical Components
Viewpoint
CHANNEL
SCALING
PHASE A
PHASE B
PHASE C
COLOR _1
COLOR _2
COLOR _0
I
Group 3
IA
IB
IC
V
Group 4
VA
VB
VC
Ok
Cancel

Opening a Saved COMTRADE File

Sample COMTRADE files have already been saved in the EnerVista Viewpoint program DEMO folder.

To Open the Saved File:

- A dialog box will appear when the COMTRADE viewer is opened requesting for the cfg file to load.

  OR

- Click the File menu in the main window menu bar and select Open.

  OR

- Click the open folder icon in the main window tool bar.

This will automatically map to the EnerVista Viewpoint folder located in the GE Power Management Program or to where you last opened an EnerVista Viewpoint program file.

- Open the DATA folder and look in the DEMO folder

A window will appear with a list of files in the current directory. At the bottom will be a drop-down box describing the type of files that are available. By default this is set to Oscillography Files (*.cfg) which means that the files being displayed should contain oscillography data.

- Select the file named OVERCURRENT.cfg and then click on Open.

View Phasors

To Open the Phasors window:

Click on the Phasors button in the Oscillography window, and a new window will open displaying a phasor diagram.

The Phasor Diagram indicates the rotation, magnitude and angle with respect to a selected reference component chosen in the **Preferences** window.

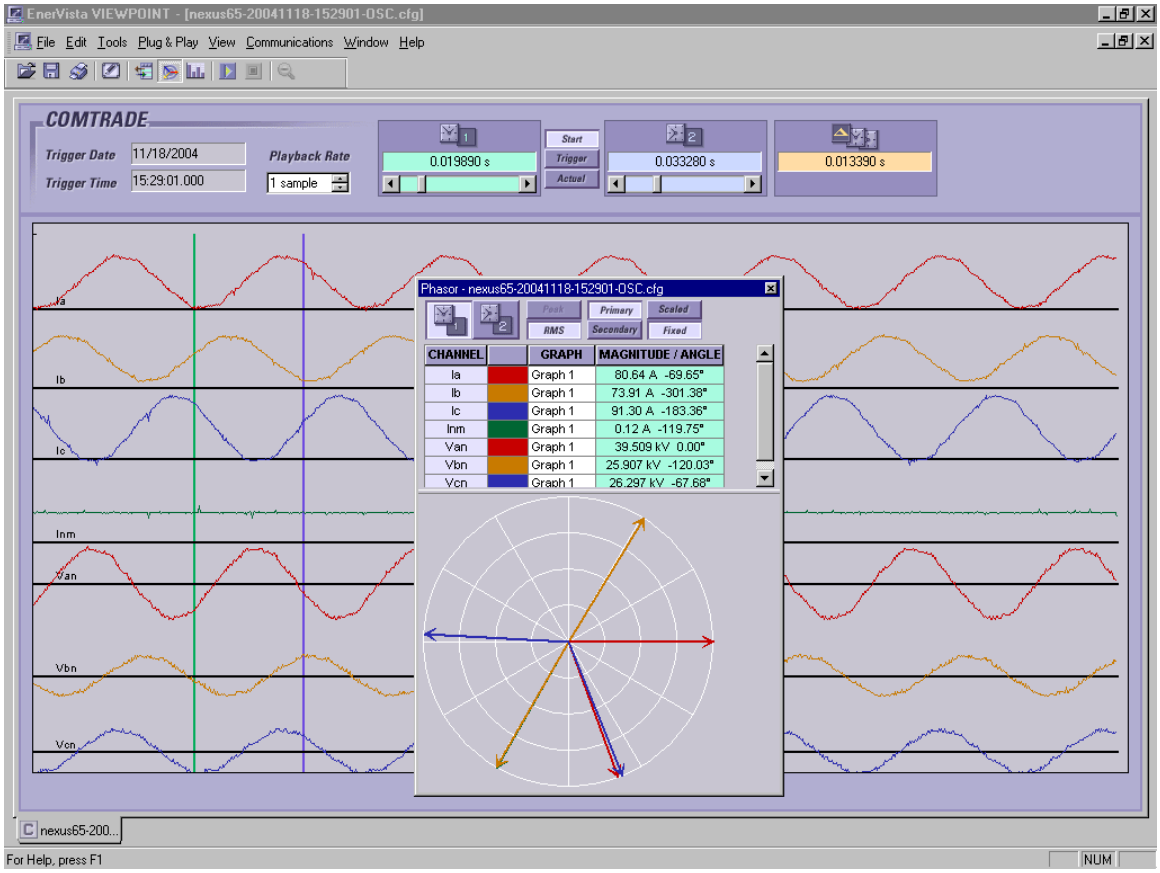

The Phasor diagram is viewed simultaneously with the Oscillography waveforms and can be resized to customize viewing. By either dragging the cursor or pressing **play**, the Phasor diagram will update the position of the cursor based on the **playback rate**.

The following options are available within the phasor viewing window:

- Select between cursor positions. This is done by clicking on the cursor tabs:

- Phasor magnitude view attributes may be set by highlighting these option:
  - **Peak vs. RMS**: Select between peak and RMS phasor magnitudes.
  - **Primary vs. Secondary**: Select between the primary or secondary phase voltages.
  - **Scaled vs. Fixed**: Select between scaled phasors or fixed magnitude phasors. Fixed magnitude phasors will ignore the magnitude value and will only show the angles.



- The actual values for the phasor quantities such as amplitude and phase angle are displayed above the phasor diagram as shown below:

CHANNEL		GRAPH	MAGNITUDE / ANGLE
Ia		Graph 1	80.64 A -69.65°
Ib		Graph 1	73.91 A -301.38°
Ic		Graph 1	91.30 A -183.36°
Inm		Graph 1	0.12 A -119.75°
Van		Graph 1	39.509 kV 0.00°
Vbn		Graph 1	25.907 kV -120.03°
Vcn		Graph 1	26.297 kV -67.68°

The **Preferences** screen can be used to change which values are displayed on the phasor diagram and to configure the number and color of phasors.

A Reminder about Spreadsheets

When you are opening the .dat file into a spreadsheet application, remember that this file is similar to a CSV, Comma Separated Value file. This means that a comma separates each data value.

Most spreadsheet programs will ask what format the data is stored in. CSV is a Delimited data type, and most applications will recognize it.

View Harmonics

The harmonic spectrum may be viewed for the file by using the harmonic button located within the COMTRADE viewer toolbar. The harmonic diagram is viewed simultaneously with the Oscillography waveforms. The harmonic window can be resized to customize viewing.

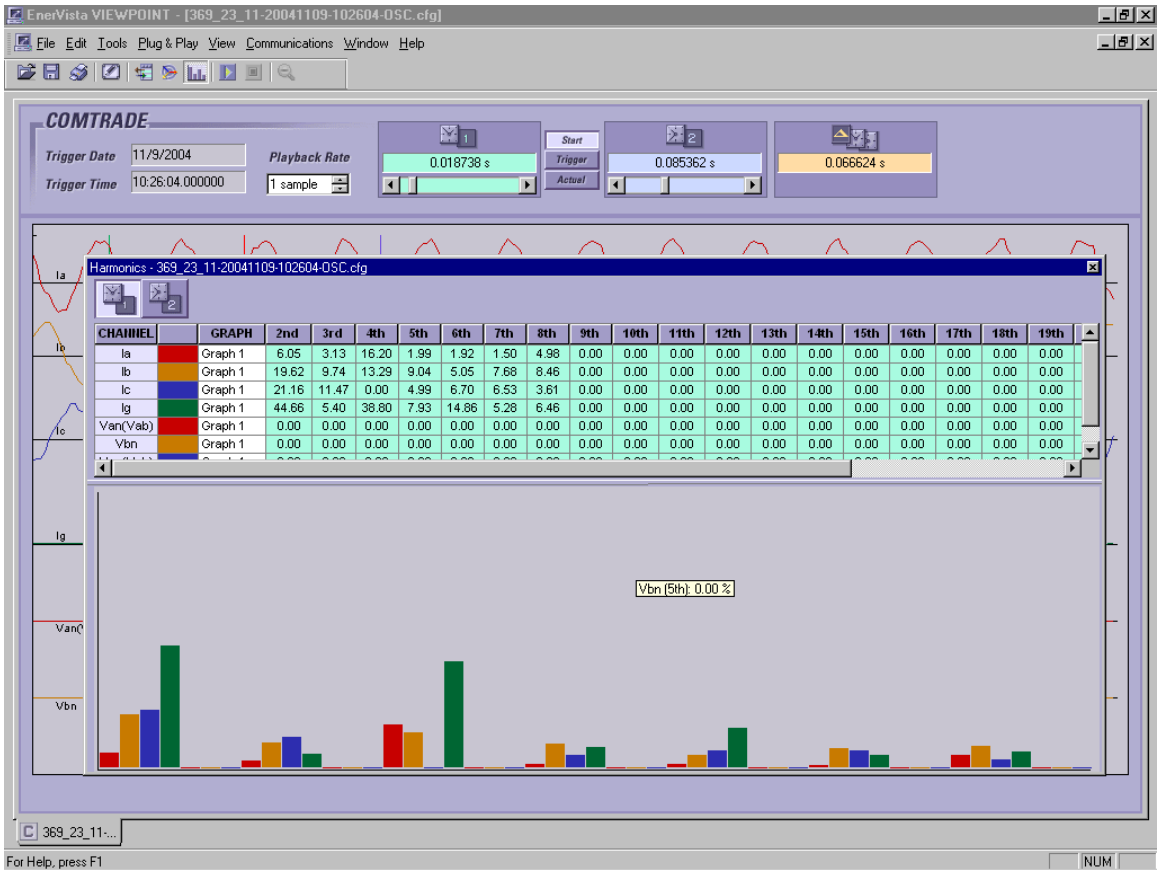

By either dragging or Playing Cursor 1 in the Oscillography window, the Phasor diagram will update to the corresponding position of the cursor.

The following options are available within the phasor viewing window:

- Select between cursor positions. This is done by clicking on the tabs cursor tabs:

- A table listing the calculated percentage of THD (total harmonic distortion) due to each phase is presented:

CHANNEL		GRAPH	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	15th	16th	17th	18th	19th
Ia		Graph 1	6.05	3.13	16.20	1.99	1.92	1.50	4.98	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
Ib		Graph 1	19.62	9.74	13.29	9.04	5.05	7.68	8.46	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
Ic		Graph 1	21.16	11.47	0.00	4.99	6.70	6.53	3.61	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
Ig		Graph 1	44.66	5.40	38.80	7.93	14.86	5.28	6.46	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
Van(Vab)		Graph 1	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
Vbn		Graph 1	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00

The **Preferences** screen can be used to change which values are displayed on the harmonic diagram and to configure the color of the harmonics.

Administration

Introduction to Administration Setup

The Administration tool is used to add/edit/modify various aspects of your Access Groups and their corresponding Users. Upon accessing the Administration button from the EnerVista VIEWPOINT main menu, the following screen will pop up showing all Access Groups and users that you have previously setup:

Note: By default, no Access Groups or Users are setup except for an ADMIN Access Group and a corresponding user named ADMINISTRATOR. These cannot be deleted from the system (though they can be edited) since EnerVista VIEWPOINT requires one administrator account to be present in the system at all times.

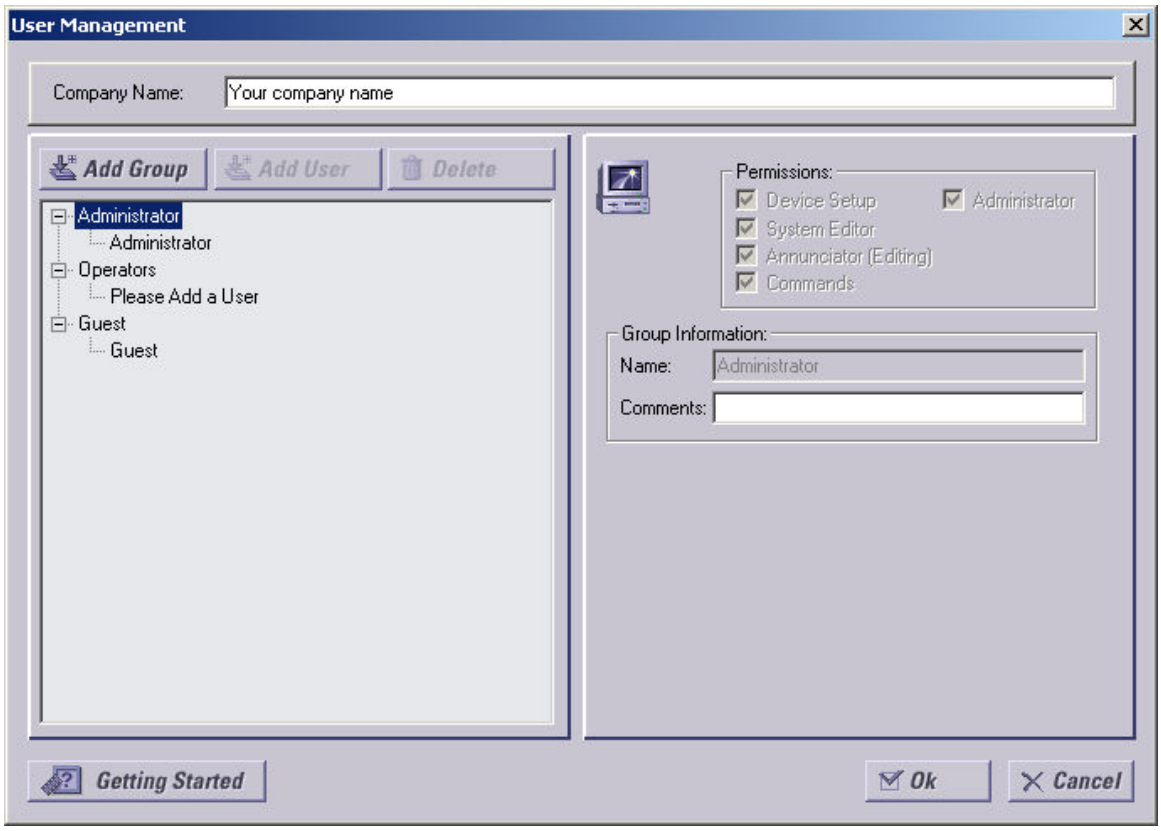

Administrator Setup Menu (Note the ADMIN group and the corresponding ADMINISTRATOR user which are setup by default)

To exit back to the main menu without saving your changes, click on the **[CANCEL]** button, to exit back to main menu, saving your changes, click on the **[OK]** button.

Adding an Access Group

This command can be accessed via the Administration Setup screen shown below:

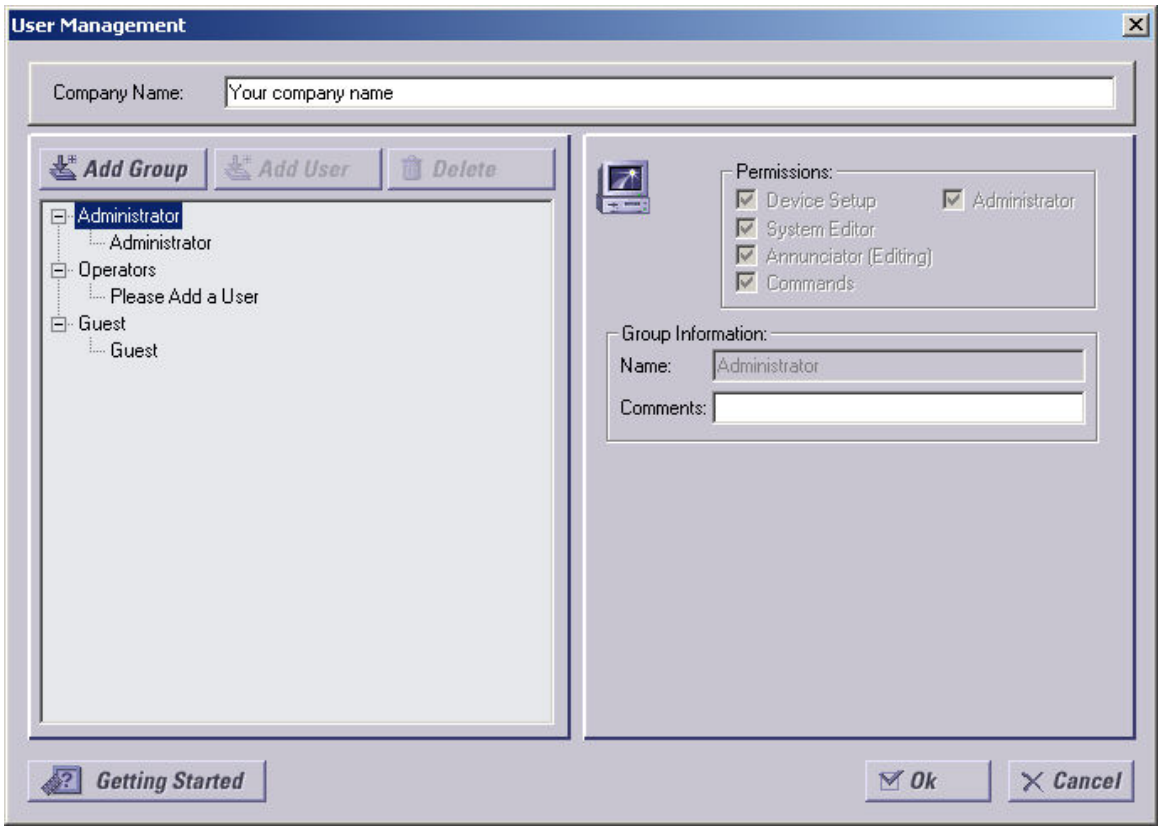

Note: By default, no Access Groups or Users are setup except for an ADMIN Access Group and a corresponding user named ADMINISTRATOR. These cannot be deleted from the system (though they can be edited) since EnerVista VIEWPOINT requires one administrator account to be present in the system at all times.

To add a new Group, perform the following steps:

1. Click on the **[ADD GROUP]** button, the right portion of the screen should now bring up the following parameters:

- Permission Check boxes (for Device Setup, One-Line Editor, Annunciator, Commands)
- Group Name
- Group Comments

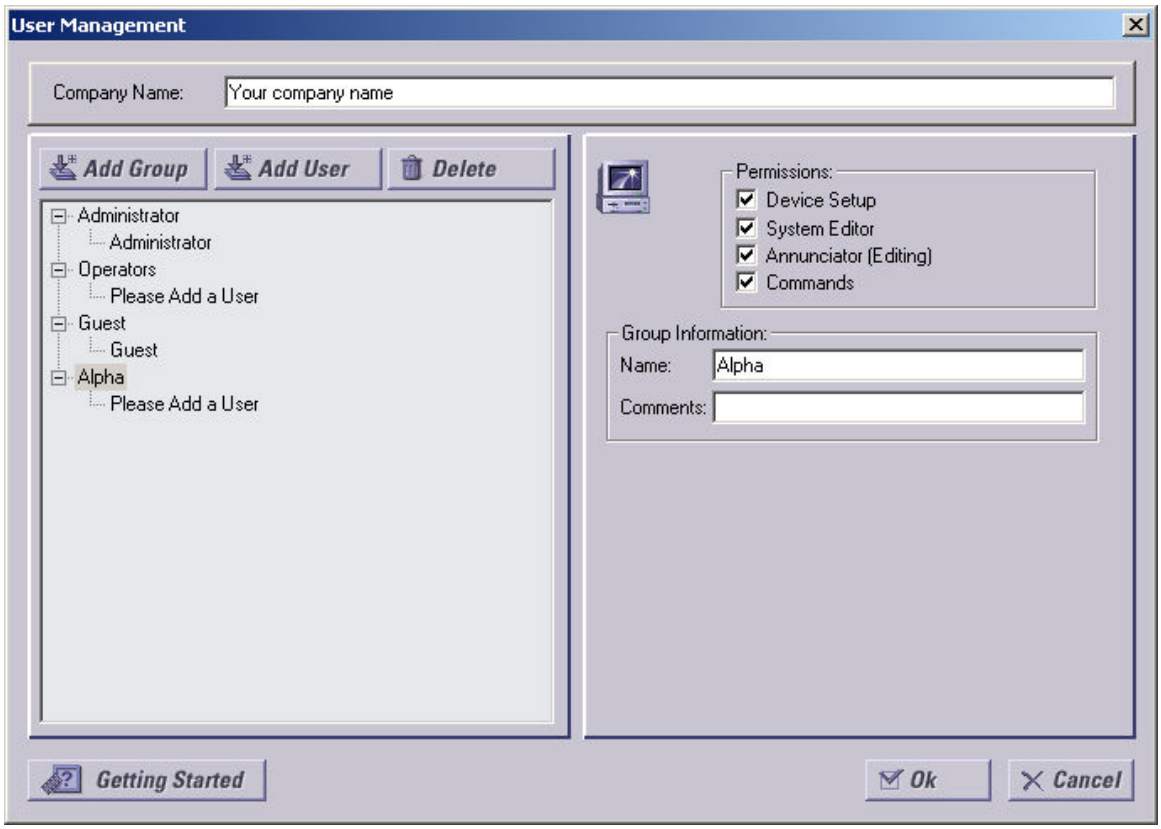

Adding an Access Group. In this case, we have created a new group called "Alpha"

2. Fill out permissions settings you want configured for this group by clicking on the various check-boxes underneath the Permissions Heading. This will indicate to EnerVista VIEWPOINT, the maximum amount of permission that can be given to users in this group. For example, if only Device Setup and One-Line Editor are checked, all users put into this group can have at most those two permission settings granted to them.

3. Fill out the details you want for Group Name and Comments. Your changes in this session are saved automatically and you may now either add another new Group, add another user, or delete Groups and users.

Returning to the Main Menu:

Should you want to cancel your changes made in this session, you can click on the [CANCEL] button to exit back to the EnerVista VIEWPOINT menu without saving. If you wish to confirm the changes you have made in this section, click on the [OK] button.

Editing an Access Group

This command can be accessed via the Administration Setup screen shown below:

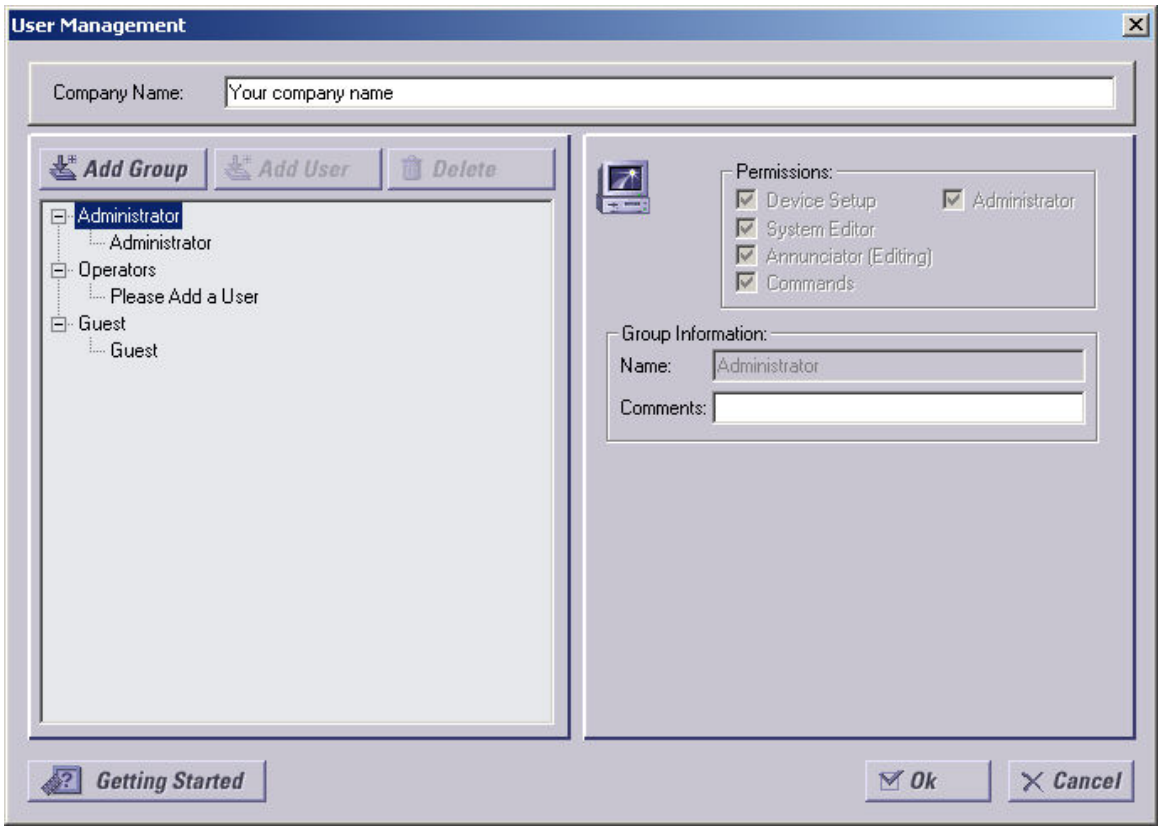

To edit details of an existing Access Group, perform the following steps:

1. Select the Access Group from the site menu that contains the Group you wish to edit. The list of Users corresponding to that site should now appear below the Site.

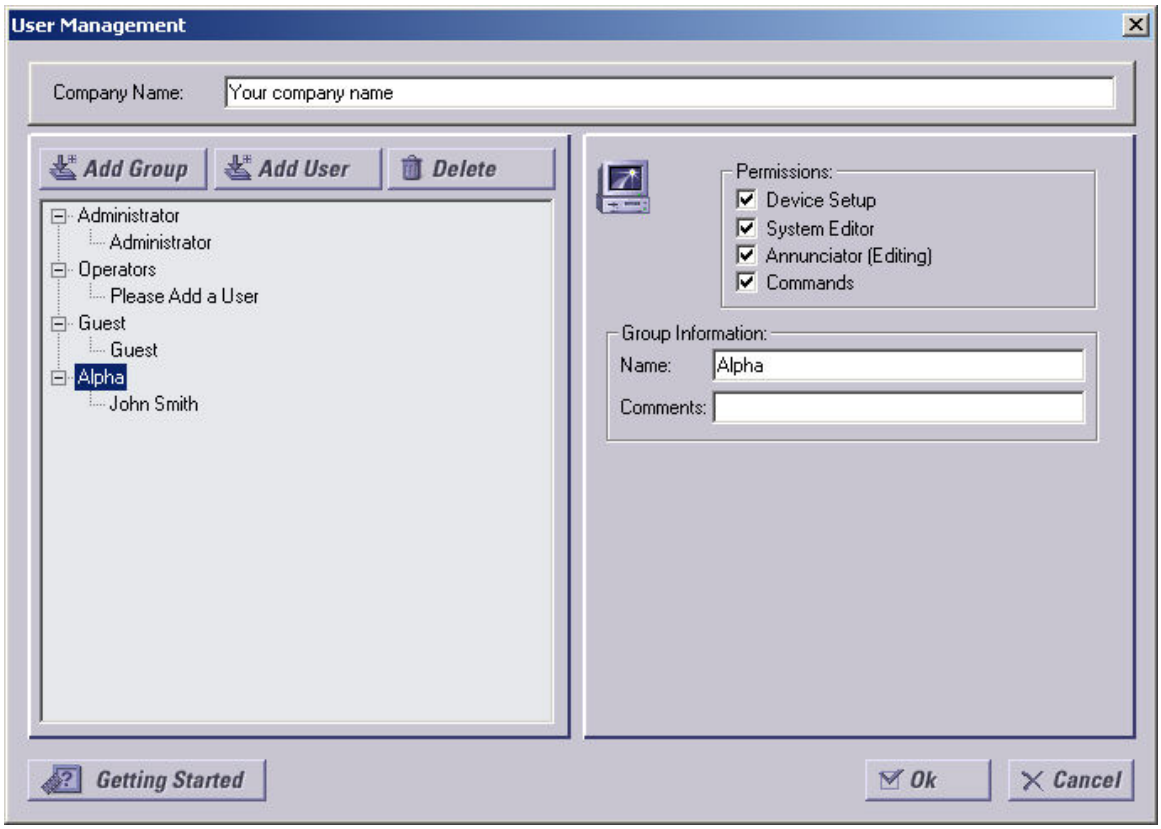

When selecting an Access, it's details show up on the right side of the screen

2. Edit the Access Group details fields (Permission and Group Information).

3. Your changes are saved automatically by EnerVista VIEWPOINT. You may now add/edit/delete other Access Group and Users.

Returning to the Main Menu:

Should you want to cancel your changes made in this session, you can click on the [CANCEL] button to exit back to the EnerVista VIEWPOINT menu without saving. If you wish to confirm the changes you have made in this section, click on the [OK] button.

Deleting an Access Group

This command can be accessed via the Administration Setup screen shown below:

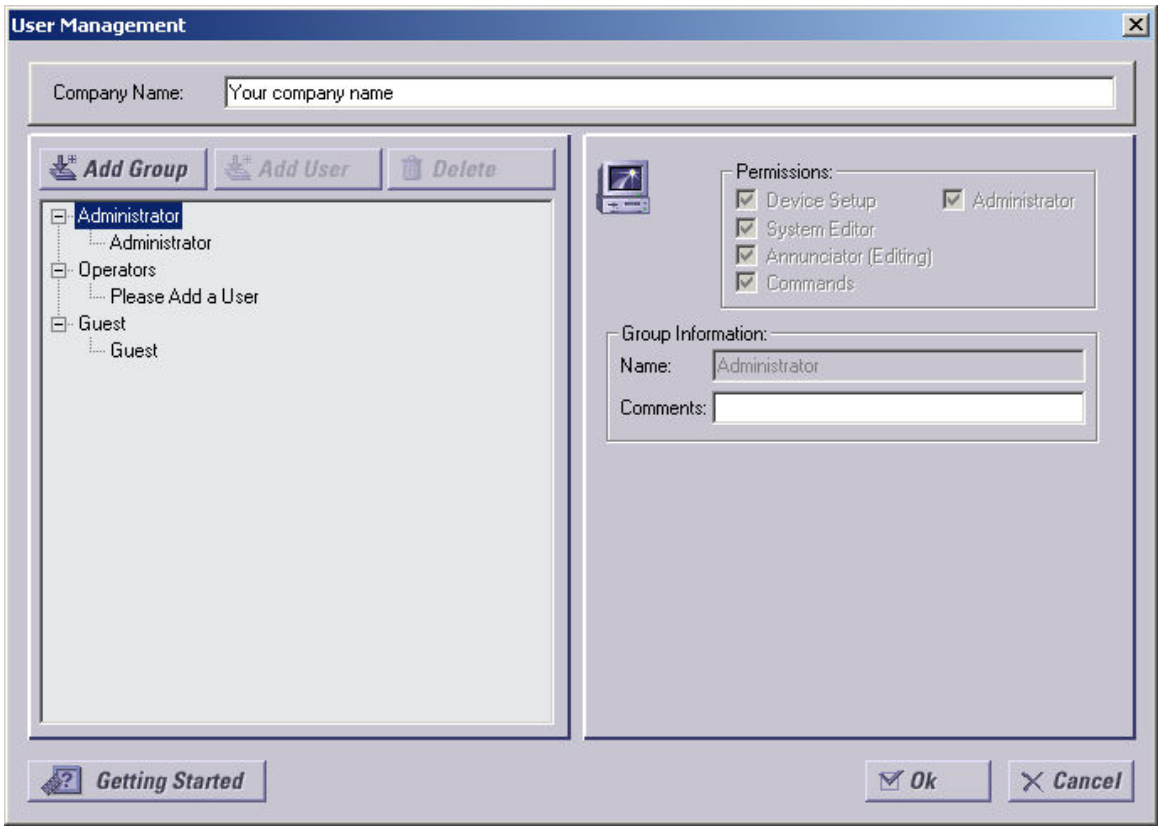

To delete an existing site, perform the following steps:

1. Select the Site from the site menu you wish to delete

2. Click on the **[DELETE]** button to delete the site. You will get a reconfirmation request to make sure that this is the particular site you wish to delete.

*** Note:** The Admin group (which is present all EnerVista VIEWPOINT systems by default) cannot be deleted. Also when you delete a site, all the corresponding Users to that site are deleted as well. Once a site is deleted, the action cannot be reversed.

Adding a User

This command can be accessed via the Administration Setup screen shown below:

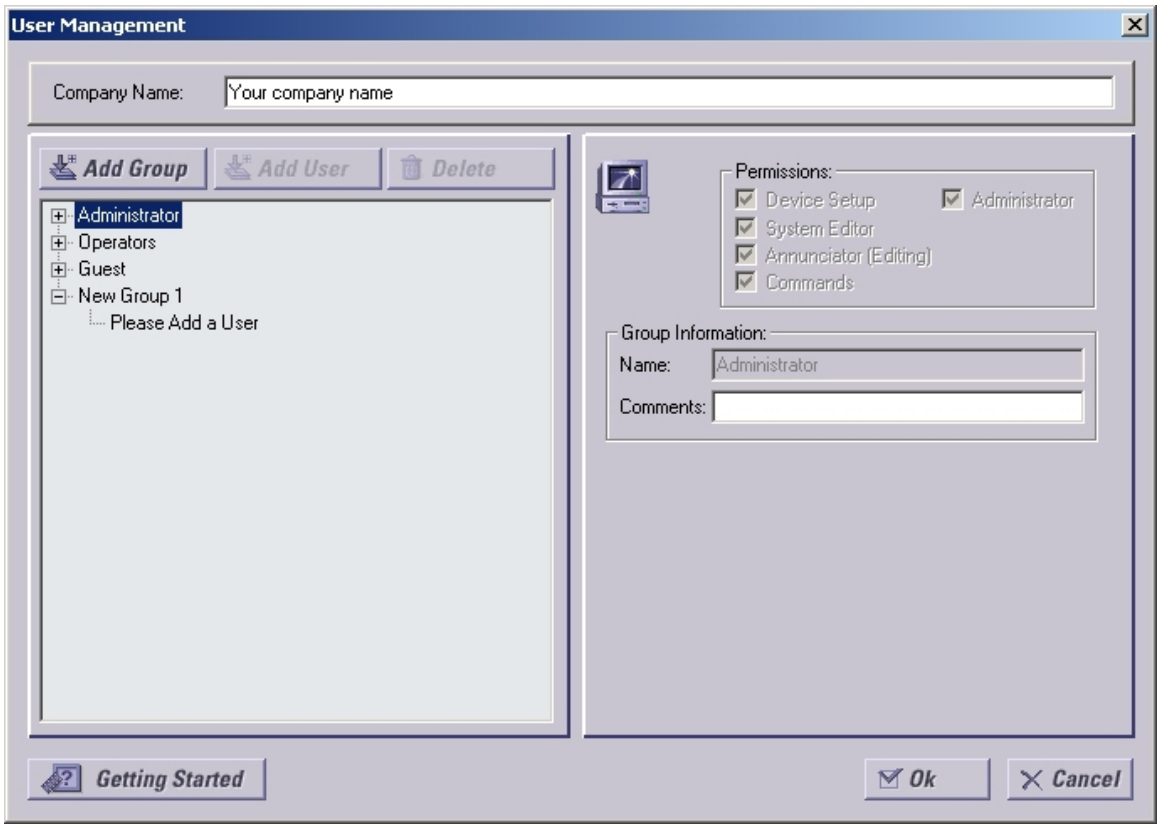

Administration Setup Menu with an Access Group, "New Group 1" already created

To add a user to a Access Group, perform the following steps:

1. An User can only be created within an existing Access Group. So to begin, click on the Access Group in your site list that you wish to add the User to.

2. Click on the **[ADD USER]** button. User parameters should now appear on the right-hand section of the screen.

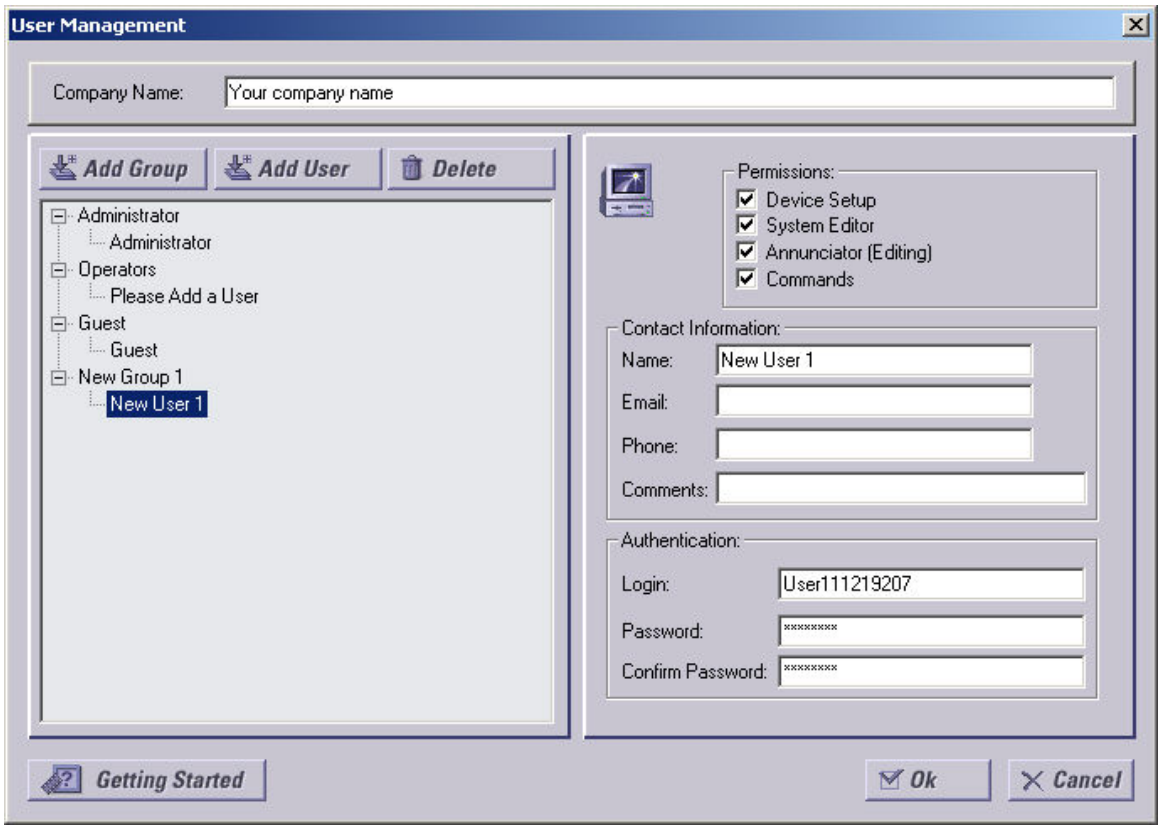

Adding an User to the Access Group "New Group 1"

3. Fill in the permissions for this User. Note that the permissions available for this user are the ones that have been specified by this particular Access Group that the user is being added to. In this example, all permissions can be selected for this user because Group, "New Group 1" has full access rights (ie: Device Setup, One-Line Editor, Annunciator, Commands) associated with it.

4. Fill the details for Contact information (Name, Email, Phone, Comments)

5. Fill in the details for Authentication Information (Login, Password). Please make sure that you confirm your password by retyping it in the 'Confirm Password' field.

6. Your new user is saved automatically by EnerVista VIEWPOINT. You may now either add/edit/delete new users or Access Group.

Returning to the Main Menu:

Should you want to cancel your changes made in this session, you can click on the [CANCEL] button to exit back to the EnerVista VIEWPOINT menu without saving. If you wish to confirm the changes you have made in this section, click on the [OK] button.

Editing a User

This command can be accessed via the Administration Setup screen shown below:

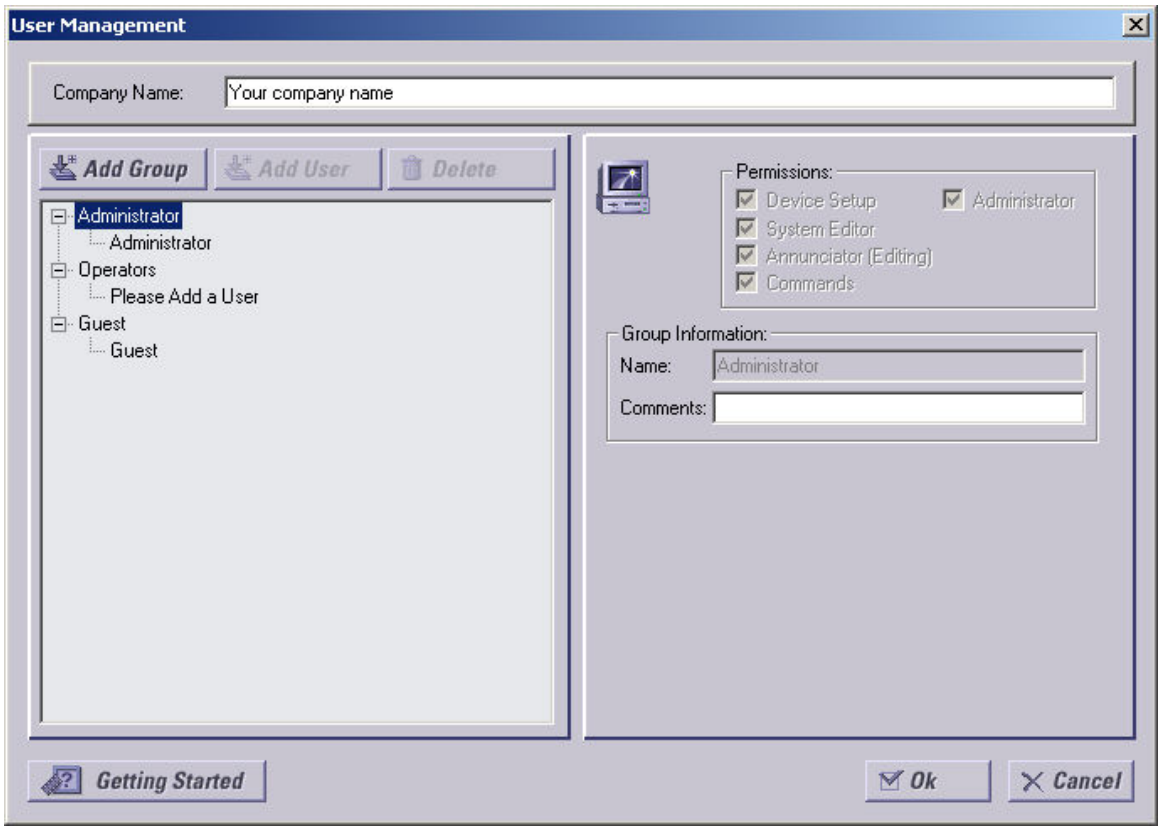

To edit details of an existing User, perform the following steps:

1. Select the User from the Access Group menu that contains the User you wish to edit. The list of Users corresponding to that site should now appear below the Access Group.

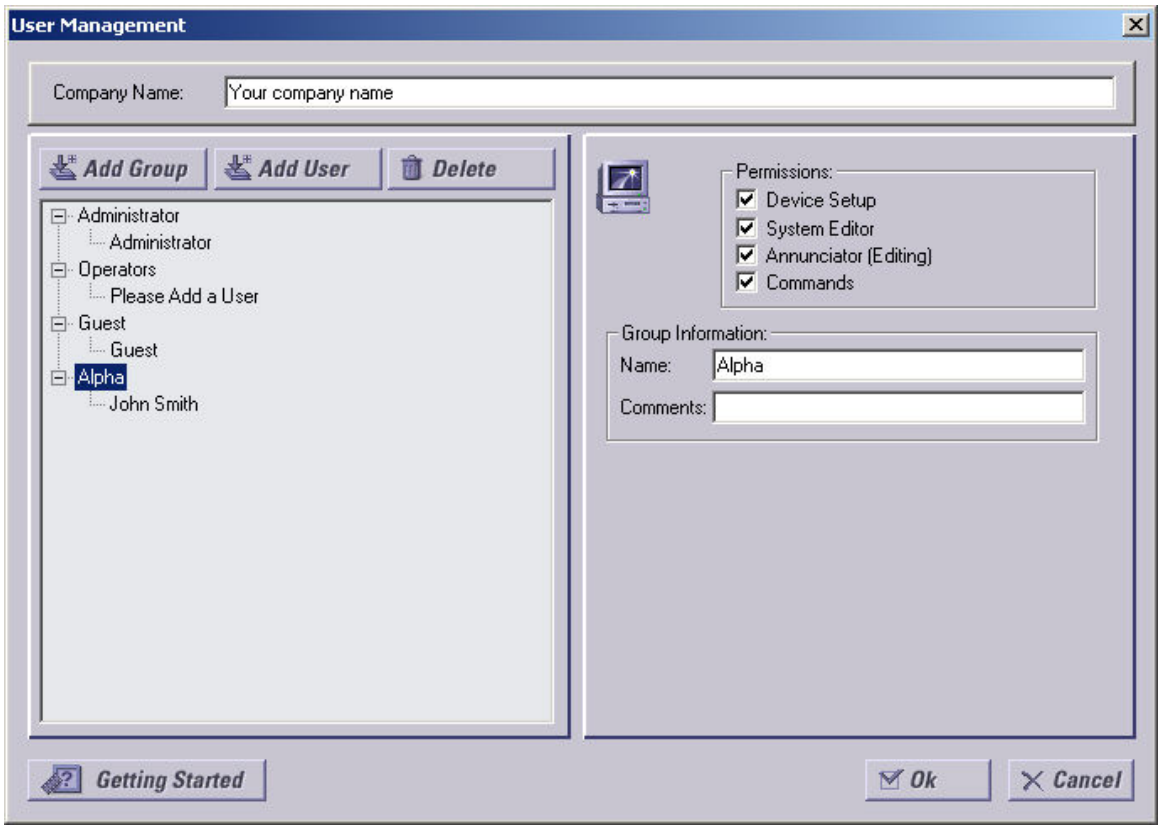

When selecting a site, the list of User associated with it shows beneath the site

2. Now select the User that you wish to edit. It's properties/parameters will now appear on the right side of the screen.

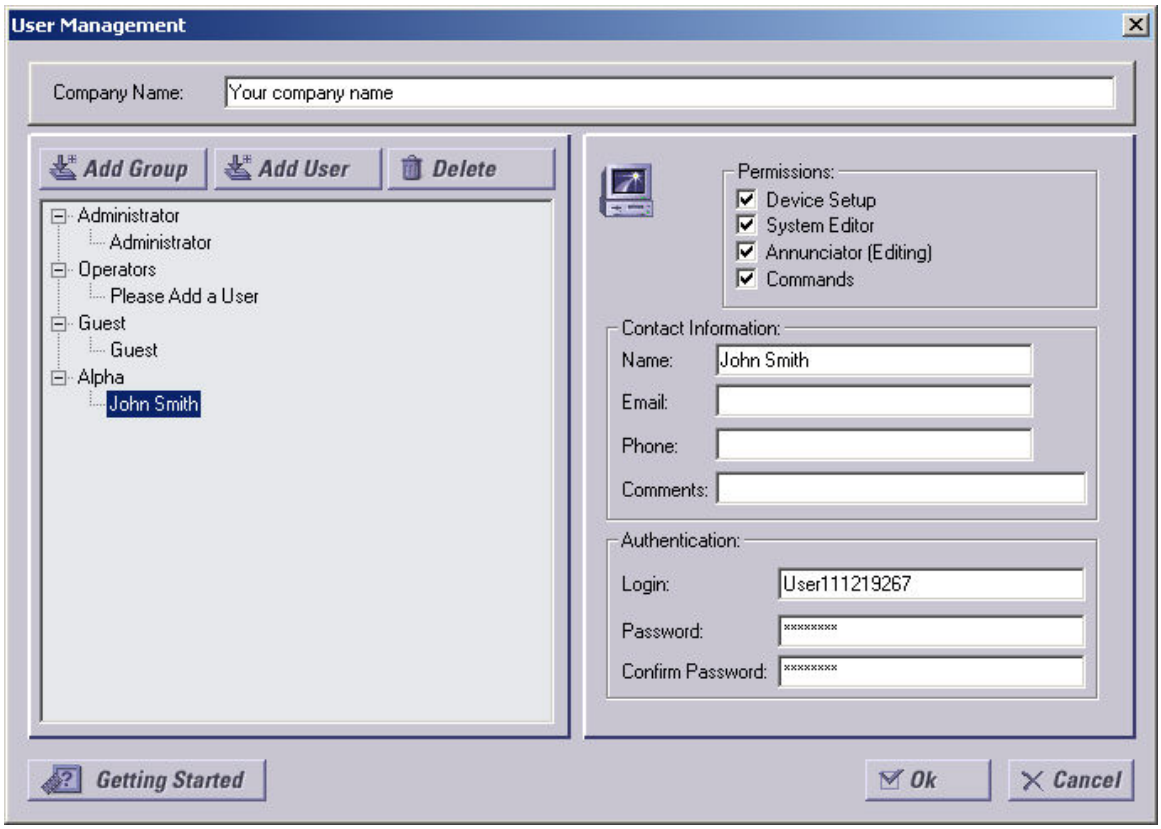

Editing the details of user: John Smith from Access Group: Alpha

3. When you are finished editing the details of your particular user, EnerVista VIEWPOINT automatically saves your changes.

Returning to the Main Menu:

Should you want to cancel your changes made in this session, you can click on the [CANCEL] button to exit back to the EnerVista VIEWPOINT menu without saving. If you wish to confirm the changes you have made in this section, click on the [OK] button.

Deleting a User

This command can be accessed via the Administration Setup screen shown below:

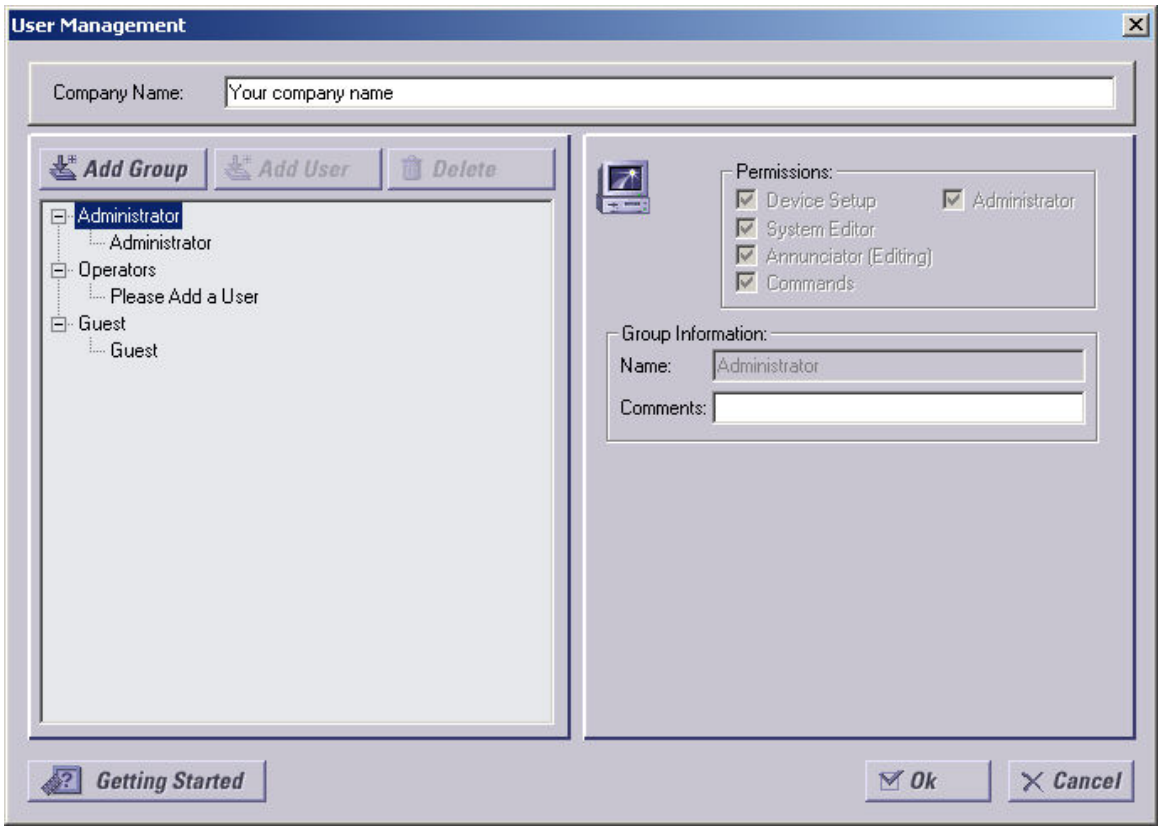

To delete an existing User, perform the following steps:

1. Select the Access Group to which the User is associated to, from the site menu list on the left hand portion of the screen. A list of Users corresponding to that site should now be shown.

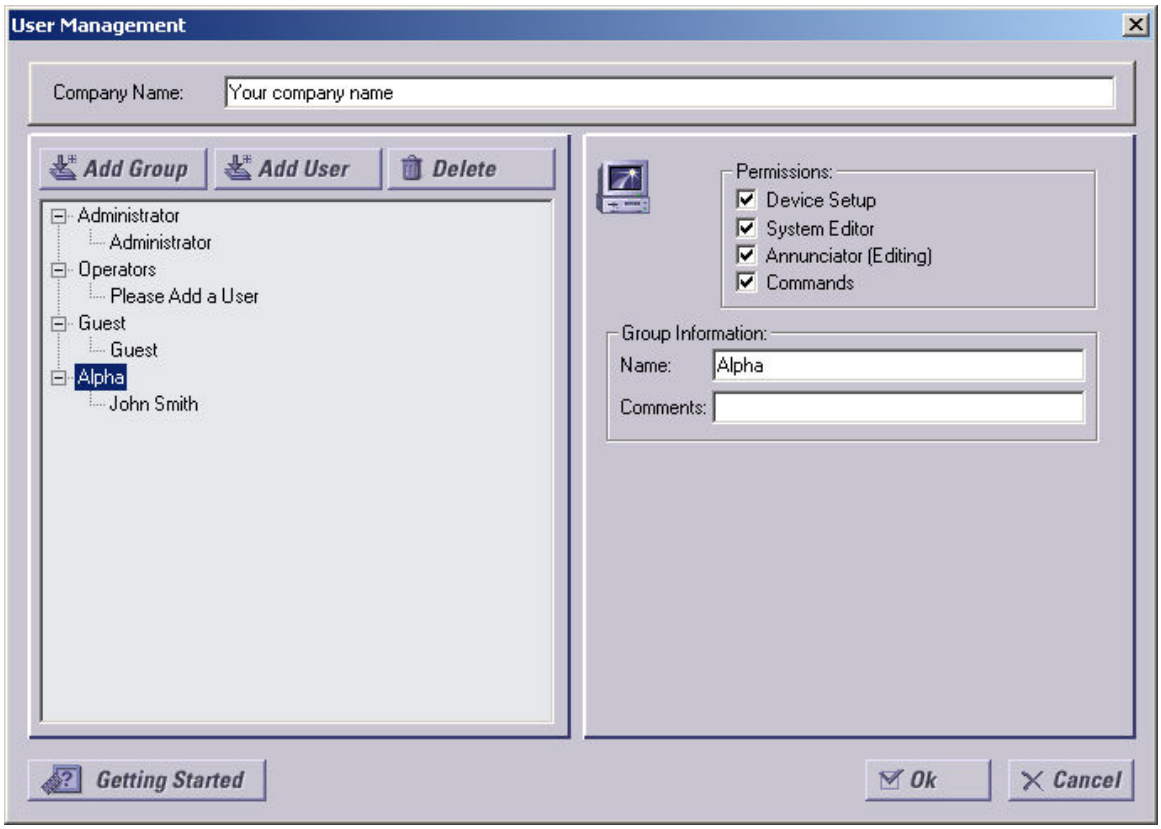

A user named John Smith associated with Group: Alpha

2. Select the User you wish to delete.

2. Click on the **[DELETE]** button to delete the User. You will get a reconfirmation request to make sure that this is the particular User you wish to delete.

*** Note:** The "Administrator" user cannot be deleted. Also, only the User you selected will be deleted, the rest of the remaining Users (if there are any) will still be there.

Plug & Play

Introduction to Plug & Play

The Plug & Play features of EnerVista VIEWPOINT allows you to quickly and automatically create schemas for your devices using a series of built-in templates. The schemas can then be further customized at any time and even automatically updated to reflect new devices you may have setup.

To access the Plug & Play features of EnerVista VIEWPOINT, click on the **IED Dashboard** button on the main screen.

If there are no installed templates for the devices you have setup (or you haven't any devices setup - see *Device Setup* to help setup your devices) the only option available will be "Import Templates.". The screen shown below will appear if the IED Dashboard is empty.

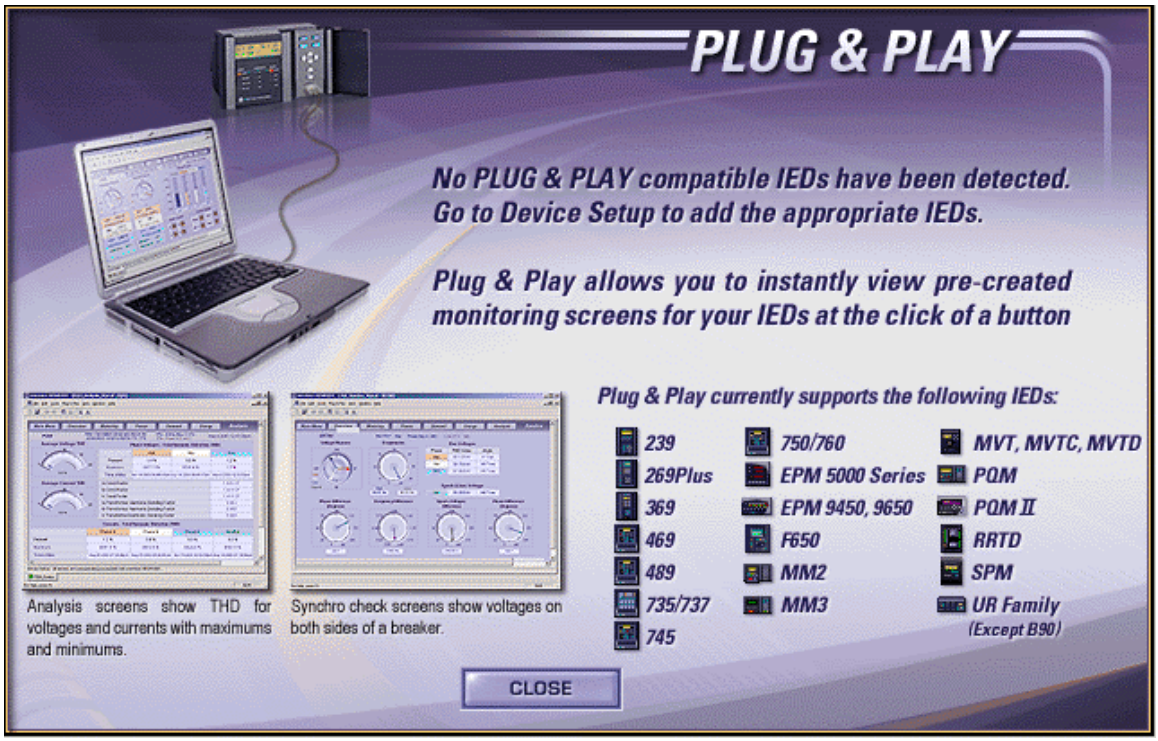

Many IED templates have already been included when you installed EnerVista VIEWPOINT. Please check the VIEWPOINT web site for additional templates that are available.

Open System Schema

This option allows the operator to view all available Plug & Play devices on a single schema.

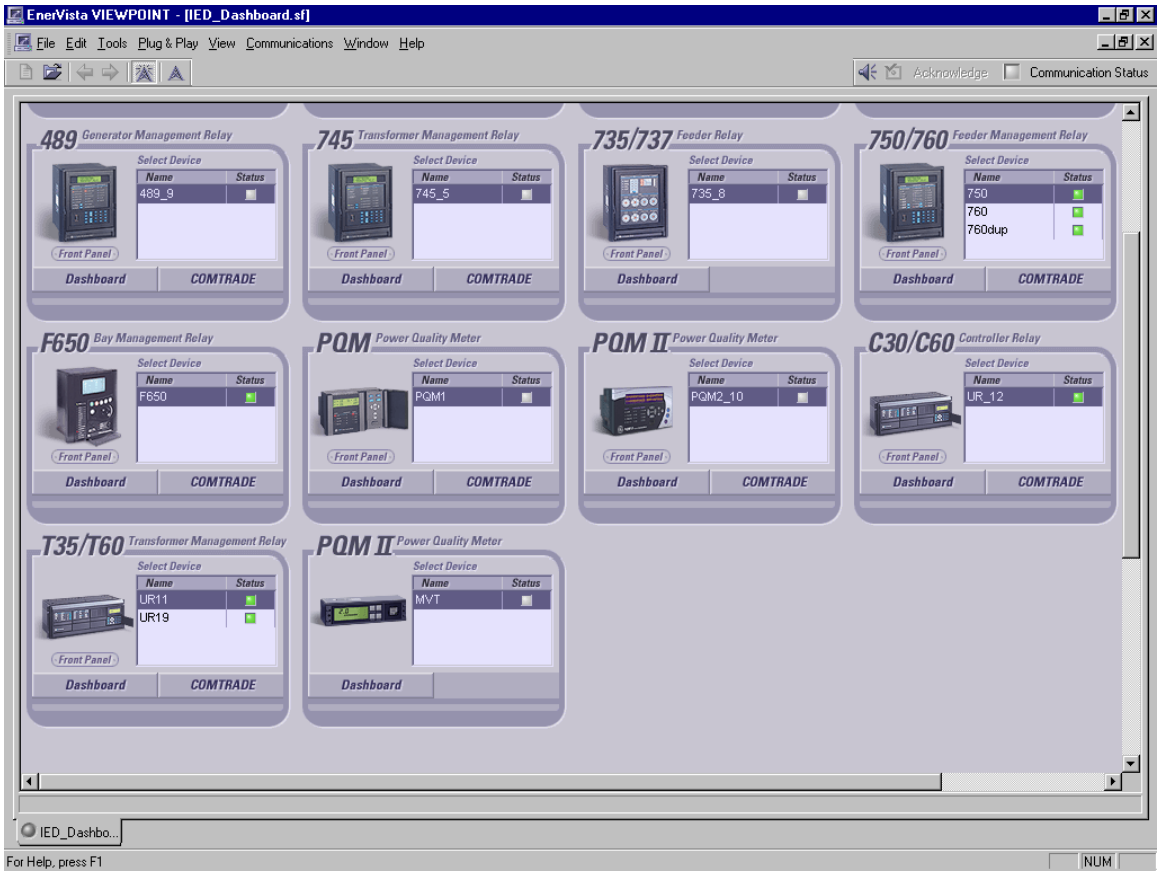

Device Window Screen:

The **IED dashboard** contain product windows for all configured products in the **Device Setup** screen. The product window contains the following information:

- **Select Device** - Details the name and communication status of each configured device belonging to the product group for the window. The status indicator is green when communications is established between Viewpoint and the device.

- **Dashboard** - The dashboard icon

opens the "plug and play" template associated to the highlighted device in the **Select Device** window.

- **COMTRADE** - The COMTRADE icon

opens the COMTRADE viewer so that oscillography available for the device may be viewed.

- **Front Panel** - The Front Panel icon

opens the virtual product front panel associated to the highlighted device. The virtual front panel allows direct access to the device.

Dashboard

Each device within the **IED Dashboard** has its own configured plug and play screens. These screens have a common navigation bar located at the top of the screen. Use **[Main Menu]** to return to the **IED Dashboard**. The LED indicator on the lower left hand side of the screen shows the communication status of the device and will be lit green if communicating successfully.

Virtual Front Panel

The virtual front panel allows for direct access to any device within the IED dash board. This front panel is fully functional and shows the status of the product display as well as the LED indicators. The keys used for product navigation and menu selection are functional, allowing the product to be remotely viewed. This feature is only available for products that support this remote capability.

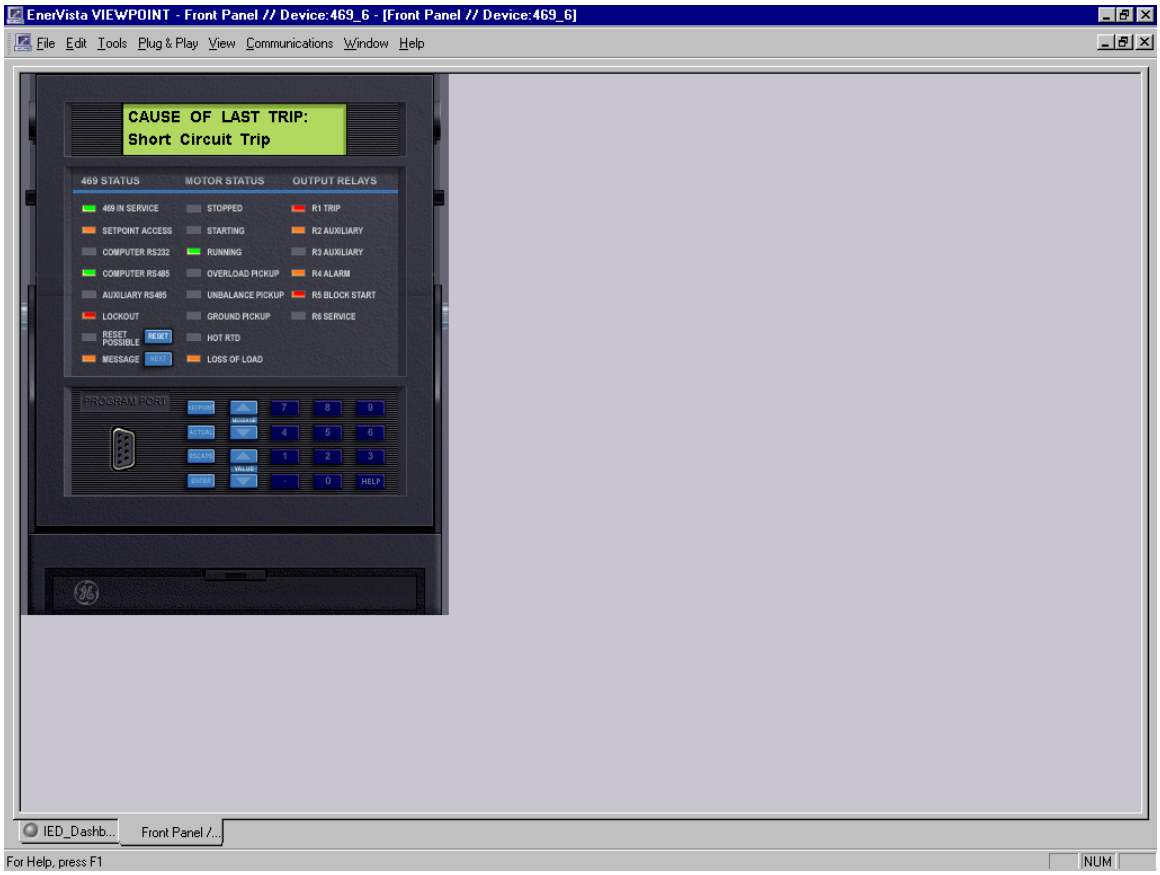

Import Templates

This option is used to add additional Plug & Play device templates after VIEWPOINT has been installed. When you select this option from the menu, a dialog box will appear prompting you to select an overview file. The overview file is the main file used to identify a new Plug & Play device template.

After selecting an overview file for a new device type, you will be prompted if to add it to the list of existing device templates. Click OK to add the device template. VIEWPOINT will then check your installed devices.

Custom Device Editor

Introduction

The Custom File Editor allows the user to define a new device to be used within Viewpoint as well as edit and delete devices already defined. This will allow EnerVista Viewpoint to communicate to any product that uses the Modbus protocol for accessing data.

Accessing the Custom File Editor

The Customer File Editor can be accessed in EnerVista Viewpoint by selecting [Custom File Editor] from the [File] menu in Viewpoint as seen below:

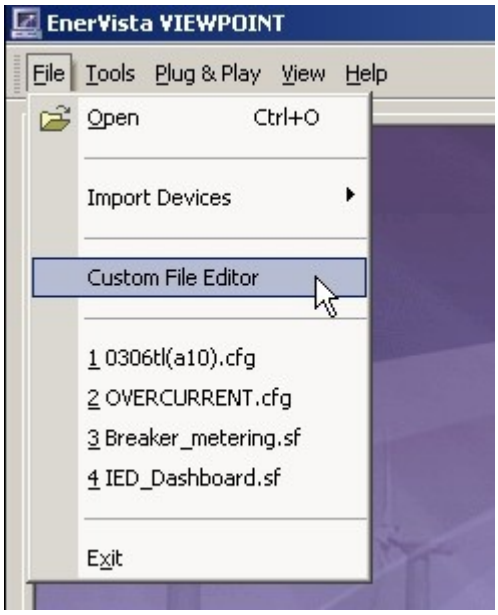

Upon entering the Custom File Editor, the following screen will prompt up:

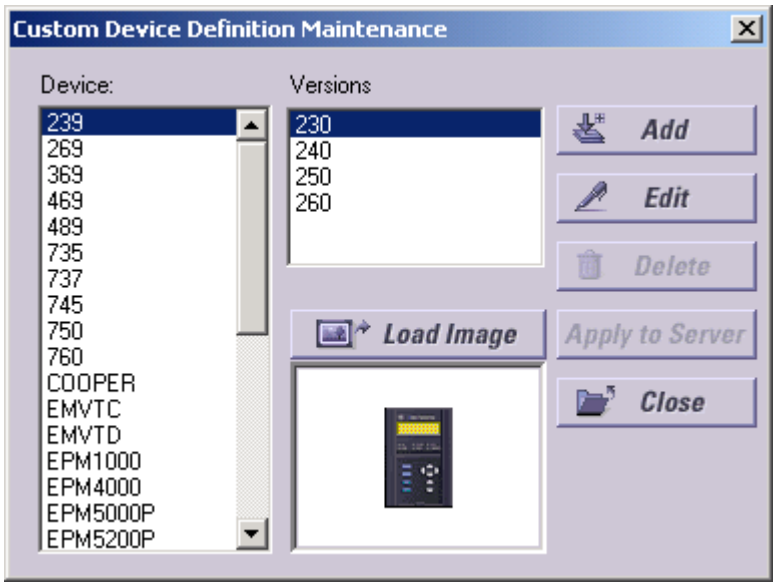

Custom Device Definition Maintenance Screen

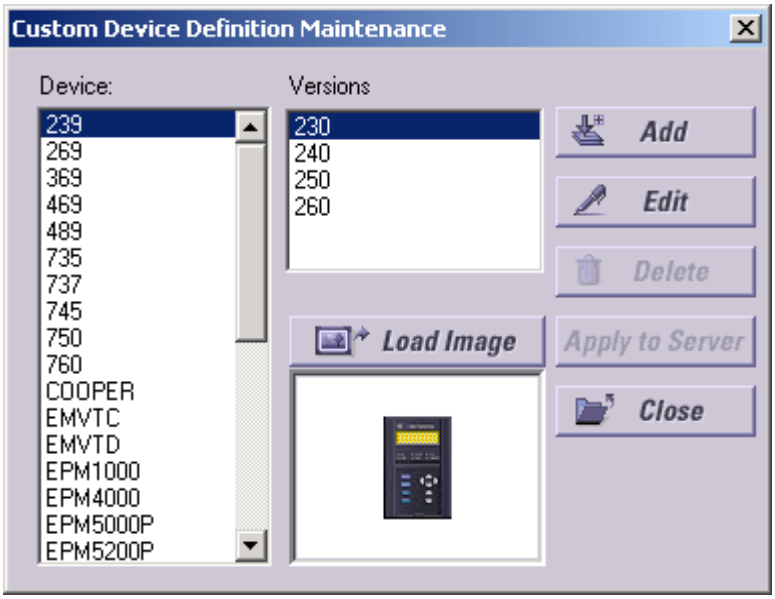

The description for each section and button in the Custom Device Definition Maintenance screen is described below:

Device Section:
The Device Section displays a list of devices already defined and can be used in Viewpoint.

Version Section:
The Version Section displays a list of all versions available for a device that is selected in the Device Section Screen.

New Button:
Clicking on the [New] button allows the user to define a new device to be used within Viewpoint. The corresponding information will be saved in a *.cdd file with the format "[Product Name]_[Version].cdd". The user will be prompted for a product name and version for the new device as seen below:

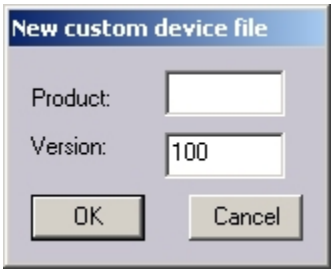

Click on [OK] to create your new device. The new device will be displayed in the Device Section. The user must then select the new device and select the [Edit] button to open the editor to add Modbus entries for the new device.

Import Button:
Selecting the [Import] button allows the user to import a cdd file that defines a device that the user wishes to use in Viewpoint.

Export Button:
Selecting the [Export] button allows the user to save a copy of the selected defined cdd file. The user must select a Product and Version before clicking on the [Export] button in order to specify which cdd file to export.

Edit Button:
Selecting the [Edit] button allows the user to edit the selected cdd file in the Custom Device Definition editor. The user must select a Product and Version before clicking on the [Edit] button in order to specify which cdd file to edit.

Delete Button:
Selecting the [Delete] button allows the user to delete the selected cdd from EnerVista Viewpoint. The user must select a Product and Version before clicking on the [Delete] button in order to specify which cdd file to delete. After the user clicks on the [Delete] button, the program will prompt the user to confirm the file to delete as seen below:

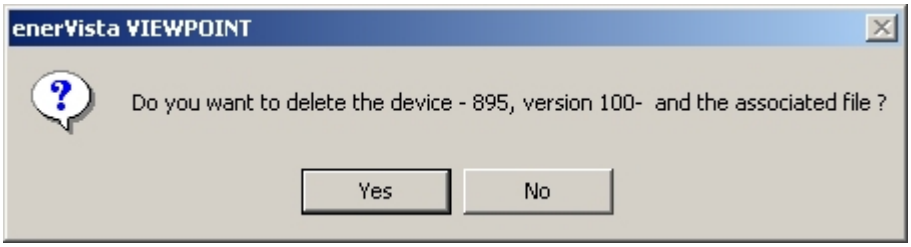

Click [Yes] to proceed with deleting the selected cdd file.

Close Button:
Selecting the [Close] button allows the user to exit back to the main menu of EnerVista Viewpoint.

Load Image Button:
Selecting the [Load Image] button allows the user to select an image to represent the selected device. The user must select a Product and Version before clicking on the [Load Image] button in order to specify which device the image represents.

Custom Device Definition Editor

The Custom Device Definition editor allows the user to edit the Modbus entries for the selected device as seen below:

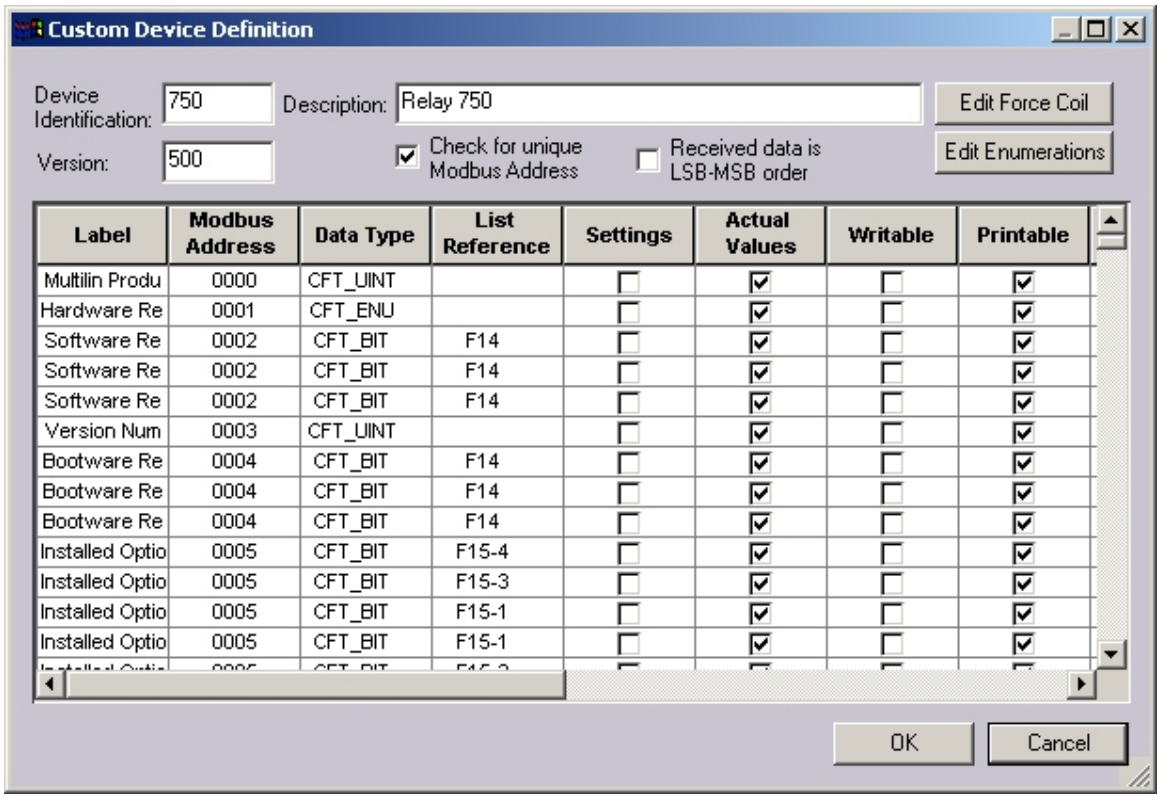
Custom Device Definition
Device Identification: 750
Description: Relay 750
Edit Force Coil
Version: 500
Check for unique Modbus Address
Received data is LSB-MSB order
Edit Enumerations
Label | Modbus Address | Data Type | List Reference | Settings | Actual Values | Writable | Printable
Multilin Produ | 0000 | CFT_UINT
Hardware Re | 0001 | CFT_ENU
Software Re | 0002 | CFT_BIT | F14
Software Re | 0002 | CFT_BIT | F14
Software Re | 0002 | CFT_BIT | F14
Version Num | 0003 | CFT_UINT
Bootware Re | 0004 | CFT_BIT | F14
Bootware Re | 0004 | CFT_BIT | F14
Bootware Re | 0004 | CFT_BIT | F14
Installed Optio | 0005 | CFT_BIT | F15-4
Installed Optio | 0005 | CFT_BIT | F15-3
Installed Optio | 0005 | CFT_BIT | F15-1
Installed Optio | 0005 | CFT_BIT | F15-1
OK
Cancel

The changes made in the editor will be reflected in the corresponding cdd file. Described below are the various features and sections available in the editor:

Device Identification:
Displays the name for the current device.

Version:
Displays the version number you are currently editing.

Description:
Displays a text description for this device.

Check for unique Modbus Address:
Checking this check box means the program will prompt the user when they enter a Modbus address that is not unique. The user must then change the value in order to continue. The only exception to this rule is when the user wishes to manipulate bit values for a specific Modbus entry. Thus, if the data type is set to a bit for a particular Modbus Address mapping, the user can use that Modbus Address in a different entry.

Received data is LSB-MSB order Check Box:

Checking this check box means the register stores values with the byte order from LSB being in the first byte position to MSB being in the last byte position. By not selecting this check box it is assumed that the register stores values in the reverse byte order.

Edit Force Coil Button:
Select this button to enter preset operation codes that this device has been programmed with that the user can perform.

Edit Enumerations Button:
Select this button to create number to text string mapping. These mappings can then be used to format the display of individual registers. A Modbus entry can use these mappings by entering a List Name in the List Reference column. Follow the instructions below to create a List mapping.

- Click on the [Edit Enumeration Button].
- Enter a unique string name for the mapping in the Enumerations section.
- Enter the list of numeric values and their corresponding string values.

Spreadsheet:
When entering in a new Modbus entry in the spreadsheet, only the unique Label ID and Modbus Address are required. All other fields are loaded with default values. The column headings in the spreadsheet are described below:

- **Label –** Unique name to identify the respective Modbus entry. Displayed when showing the value for this Modbus entry.
- **Modbus Address –** The numeric address location for the Modbus entry.
- **Data Type –** Allows user to select the data type the number represents. The user can click on the cell to select the data type from the drop down menu.
- **List Reference –** Allows the user to map the output values for this specific register to a text string. The text string will be displayed instead of the numeric value on the device. The user can click on the cell to select the enumeration mapping from the drop down menu. The user can define number to string mapping by selecting the [Edit Numerations] button.
- **Settings –** Identifies the data represents settings information. The data is saved to a Settings File
- **Actual Values –** Identifies this register stores an actual value.
- **Writable –** Identifies this entry as modifiable.
- **Printable –** Allows the register value to be printable. This only applies to URPC software.
- **Min –** Smallest stored value.
- **Max –** Largest stored value. When the Data Type is a String, the maximum value represents the maximum string size.
- **Step –** This is the smallest incremental step the value stored in the register can increase/decrease by.
- **Decimals –** Enter the number of decimals to display for the Modbus value.
- **Units –** Enter the Unit that this register value is in (ex: Hz, Hz/s, kV). The unit string is appended to the data value prior to displaying the data.
- **Default –** Default value used when editing the value in Settings Mode.
- **One-Line Editor –** Checking this check box allows the One-Line Editor to see this register mapping.
- **Annunciator Panel –** Checking this check box allows the One-Line Editor to see this register mapping.
- **ID –** Unique identification.

Training License Transfer Procedure

Step 1 – Destination PC

- Load Application (Viewpoint, URCD, 269, 469 etc…) to destination P.C.
- Launch Application – make note of the Site Code –

Site Code is required to complete transfer 1

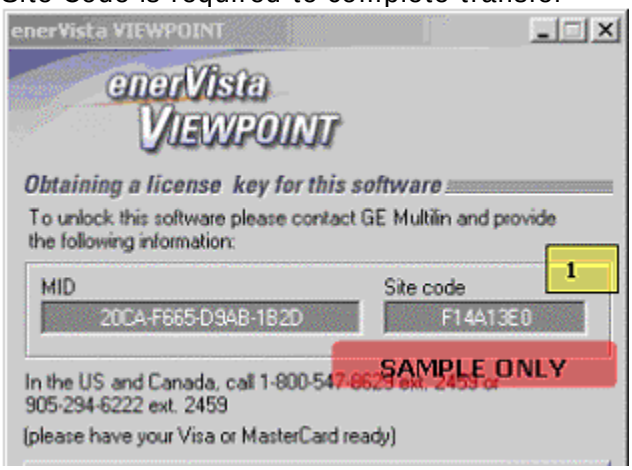
enerVista VIEWPOINT
enerVista VIEWPOINT
Obtaining a license key for this software
To unlock this software please contact GE Multilin and provide the following information:
1
MID
20CA-F665-D9AB-182D
Site code
F14A13E0
SAMPLE ONLY
In the US and Canada, call 1-800-547-8629 ext. 2459 or
905-294-6222 ext. 2459
(please have your Visa or MasterCard ready)

Step 2 – Original PC

- Ensure Application is closed
- Ensure Scroll Lock key is enabled
- Launch Application

- Click on Transfer License 2
- Enter original Unlock code 3
  (don't know? Refer to unlock instruction sheet or contact GE Multilin TrainingCD@indsys.ge.com please provide Company, Contact information and Site code from original PC)
- Enter Site Code obtained from Destination PC 4
- Verify codes, click Continue

****License in this P.C will be disabled****

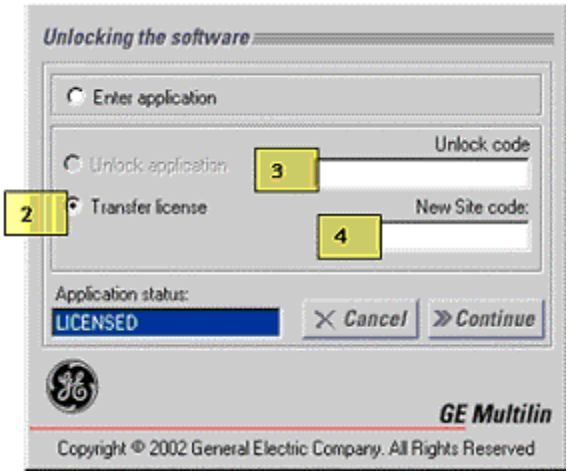

Step 3

- Enter New Unlock code on Destination PC
  ** Record and save number**
- Send email to TrainingCD@indsys.ge.com with new:
  - MID #
  - Site Code
  - Unlock Code

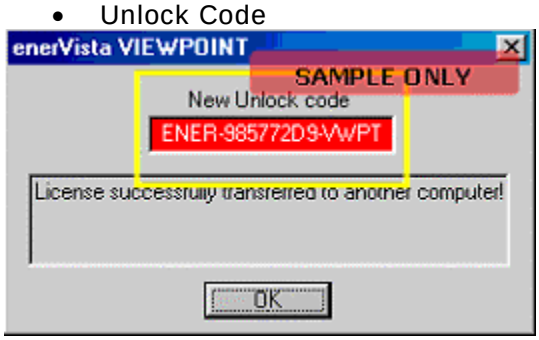

FAQ

Symptom:

1. Frequent time timeout of TCP devices.
2. TCP devices toggles in between dead status and active status.

Resolution for 1 and 2:

a. Open GE32MTCP.INI file from C:\Winnt folder.
b. Change “Communication Timeout” to a higher value and save the file.
c. Default value is “Communication Timeout=2000”.

Do Steps d to h or step i

d. Open File -> Preferences -> Waveforms & Events tab
e. Make sure that "Keep Retrieving Waveform & Events even if Viewpoint is shut down" is 'No'
f. Click on OK
g. Restart Viewpoint
h. Restore the File -> Preferences -> Waveforms & Events tab settings

i. Restart the PC

Index

2
2D bar gauge 47
2D thermometer gauge.....47
3
3D bar gauge 47
3D thermometer gauge.....47
7
760.....198
A
accessing custom file editor.....209
acknowledge button 120
acknowledging alarmed indicators .134
acknowledging alarms 134
add / remove toolbars 44
adding a component for control.....62
adding a component for manual indication 59
adding a device 15
adding a user 190
adding an access group.....185
adding an indicator to the annunciator panel.....122
adding components and items to a schema.....58
adding formula 31
adding images to a schema 65
adding report parameters.....143
additional features 151
align bottom button.....54
align horizontal centers button.....54
align left button 54
align right button 54
align toolbar.....54
align top button 54
align vertical centers button 54
annunciator toolbar 120
archive data 151
automatic voltage regulator button..49
B
back button.....55
backwards button 55
bar 2D gauge 47
bar 3D gauge 47
bus connection button 49
bus end button 49
C
capacitor buttons 49
capture button.....120
changing the work area size of the schema.....66
circuit breaker component 51
close curve button.....46
component properties..... 67, 100
configuring / editing an indicator to a device 126
configuring / editing the alarm/active states properties of an indicator .128
connecting an indicator to a device 126
creating a report 141
creating a report chart 145
creating and configuring custom symbols
custom device definition editor.....212
custom device editor 208, 210, 212
custom device maintenance screen 210
custom file editor 208
custom symbols..... 51, 72
D
define new device 210
deleting a device.....27
deleting a user.....196
deleting an access group 189
delta configuration button 50
device 210, 212
digital symbols 51
drawing toolbar 46
drawout breaker component 51
E
edit vertices button 46
editing a device 23
editing a formula.....35
editing a user 193
editing an access group 187
ellipse button 46
equipment and switchgear control .110
equipment and switchgear indication 109
exciter button.....49
export 37
export data 151
exporting the chart.....148
F
flip horizontal button 56
flip vertical button.....56
flipping components 56
formula 29, 31, 35, 37, 38
formula editor 29, 31, 35, 37, 38
forwards button 55
front button 55
fuse button 49

fuse switches.....51
G
gauges toolbar 47
generator button.....49
generator synchronous button 49
ground button 49
group components button 55
grouping components together.....55
H
hiding toolbars from view 44
hot spot button.....48
how to use one shot 99
I
image button.....46
import 37
import templates 207
insert indicator button 120
inserting an indicator into the annunciator panel 122
introduction to administration 184
introduction to annunciator.....118
introduction to device setup.....14
Introduction to EnerVista VIEWPOINT monitoring 1
introduction to system editor 39
introduction to system editor toolbars 41
introduction to system viewer 105
L
LED..... 8, 76, 88
LED indicator colours 111
left arrow button.....107
line button 46
link button 48
linking several schemas together.....89
links toolbar 48
M
maintenance screen 210
making toolbars viewable 44
master connect off button 120
master connect on button 120
modbus entries.....212
modbus protocol 208
mode 8
modem troubleshooting 1
modifying properties of a component 100
motor button.....49
motor round rotor button 49
motor synchronous button.....49
moving components between layers 55
moving components between viewable layers 55
N
new schema button 45
nudge down button 53
nudge left button 53
nudge right button 53
nudge toolbar 53
nudge up button 53
O
one shot test button 45
One-Line editor toolbar 45
One-Line viewer toolbar 107
open file button 45
opening a schema file 108
opening files in system viewer 107
opening the report viewer 148
P
pan button 52
parameter gauge 47
plug & play 198, 207
polycurve button.....46
polygon button 46
polyline button 46
PQM.....198
preferences..... 8
printing the chart 148
properties button 46
purge data 151
Q
qualified modem 1
R
reactor button 49
recloser button 49
reconnect devices button 107, 120
record button 120
rectangle button 46
rectifier button.....49
report.....143, 145
report charts 145
report parameters.....143
report viewer.....148
reports 139, 141, 148, 151
resetting an alarmed indicator that has been acknowledge.....138
resistor button.....49
right arrow button.....107
rotate button.....56
rotate left button 56
rotate toolbar 56
rotating components.....56
S
save and view schema button 45
save as button.....45
save file button.....45

saving schemas 101
schema 198, 207
screen capturing in system viewer . 112
sectionalizer button 49
security 8
select button 46
send command component 51
simultaneously editing and viewing the same schema 102
sound 8, 76, 88
sounds 8, 76, 88
star configuration button 50
star grounded configuration button .. 50
star zig zag grounded configuration button 50
start 8
startup 8
stop button 120
storage 37
structure toolbar 55
switch component 51
switch double throw component 51
switch motorized component 51
switchgear & control toolbar 51
symbols toolbar 49
system requirements 1
T
tapchanger button 50
templates 198, 207
test switch button 49
test switches 51
text button 46
thermometer 2D gauge 47
thermometer 3D gauge 47
transformer & symbols toolbar 50
transformer AUTO button 50
transformer current button 50
transformer symbols 50
transformers buttons 50
transformers phase shifting button .. 50
transformers voltage buttons 50
turbine button 49
U
understanding online, offline and invalid status 116
ungroup component button 55
ungrouping components 55
UR button 45
user 8
using formula 38
V
V switch 51
view device status button 107
W
what is an unassigned device? 117
Z
zig zag configuration button 50
zoom button 52
zoom to fit button 52
zoom to selection button 52
zoom toolbar 52